

eXtreme Power 11n 2.4Ghz 2x2
Wall-Plate PoE Access Point

WP-300N

Quick Installation Guide

CERIO <http://www.cerio.com.tw>

Technical Support :
support@cerio.com.tw

Package Contents


- WP-300N Main Unit x1
- Wall-Plate Bracket (US / EU) x2
- Screw Pack x1
- CD Manual x1
- Quick Installation Guide x1
- Warranty Card x1

NOTICE


A random lightning strike can easily cause damage to WIRELESS AP devices. (Lightning) DAMAGE IS NOT COVERED UNDER WARRANTY.

1 Front and Side Panel Interface

Front Panel

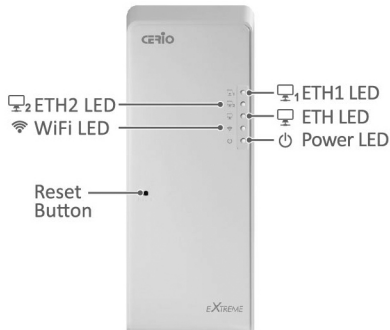


Side Panel

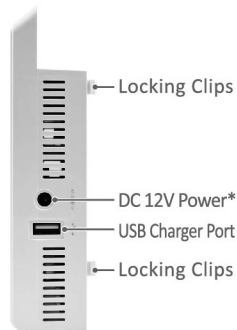


* WP-300N supports both PoE-In and DC 12V Power, however neither power adapter nor PoE injector are provided in the standard product package. These components can be optionally purchased upon request.

2 Bottom and Top Panel Interface

Top Panel

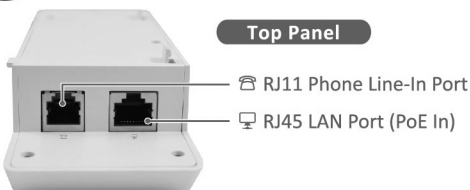


Bottom Panel

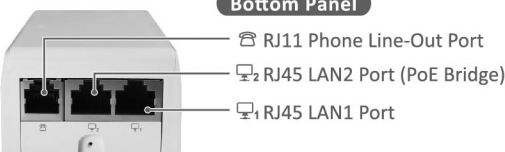


3 Wall-Plate Bracket Interface

U.S.A / Japan Type

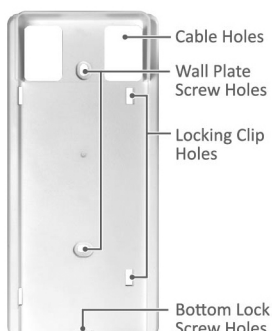


Europe / China Type

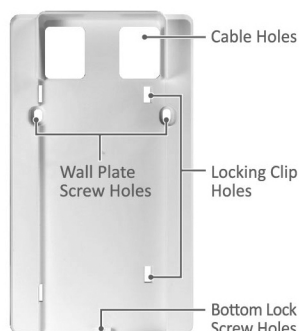

4 Hardware Installation

- First ensure that you are using the proper Wall Plate Bracket based on the metal outlet box at the installation site.
- Make sure RJ45 and RJ11 cables are fed properly through the cable holes on the Wall Plate Bracket. Then use the provided screws to secure the Wall Plate Bracket onto the metal outlet box.
- Connect the RJ45 and RJ11 cables to the proper device ports, then secure the device in place with the locking clips. Lastly, lock the device in place by screwing the provided screw in the lock hole at the bottom of the device.

U.S.A / Japan Type

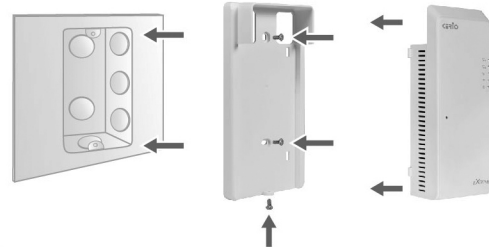

5 Hardware Uninstallation

Bottom Panel





- Unscrew the screw from the bottom lock screw hole to unlock the device from the Wall Plate Bracket.
- Firmly grab the device and pull from the right side. This will release the locking clips and unlock the device. Unscrew the Wall Plate Bracket to complete Uninstallation.

6 Web Management Interface

How to configure WP-300N through a Web Browser.

Example of Segment: (Local PC as 192.168.2.100)

- Go to "Start" → "Settings" → "Control Panel".
- For Windows 8 / 7 / Vista users, please Click "Network and Sharing Center".
- In the "View your active networks" section, click Ethernet in the "Connections" row to bring up Ethernet Status.
- Click "Properties", then scroll down and find "Internet Protocol Version 4 (TCP/IPv4)", then double-click.
- Select "Use the following IP address", and type in IP Address : 192.168.2.100 and Subnet mask : 255.255.255.0, Press "OK" to close this page.
- Press "OK" to close the Local Area Connection Properties window.

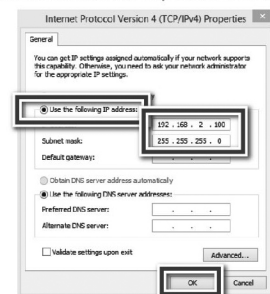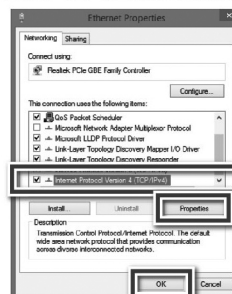


Launch Web Browser

Use your browser to access the web management interface of system by entering the WP-300N default IP Address <http://192.168.2.254>, in the browser URL field, and then press "Enter".

Once your browser is successfully connected with WP-300N, the Login Page will appear.

Enter "root" as User name and "default" as password, and then click "Log In" to login to the system.

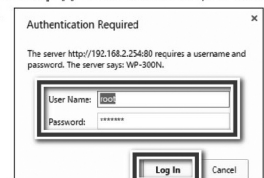

For more detailed login instruction for WP-300N's software interface, please reference our User Manual.

eXtreme Power 11n 2.4Ghz 2x2
功能型面板式PoE無線基地台

WP-300N

快速安裝說明

CERIO <http://www.cerio.com.tw>

客服技術支援信箱：
support@cerio.com.tw


包裝內容

- WP-300N 產品主機 x1
- 安裝托架 (美規 / 歐規) x2
- 螺絲安裝組包含包 x1
- CD光碟 x1
- 快速安裝說明 x1
- 產品保證卡 x1

注意


電壓瞬間突波與雷擊將會對電子產品造成損壞，間接雷擊或直接雷擊導致產品損害故障，將不在保固範圍內。

1 產品外觀與燈號說明

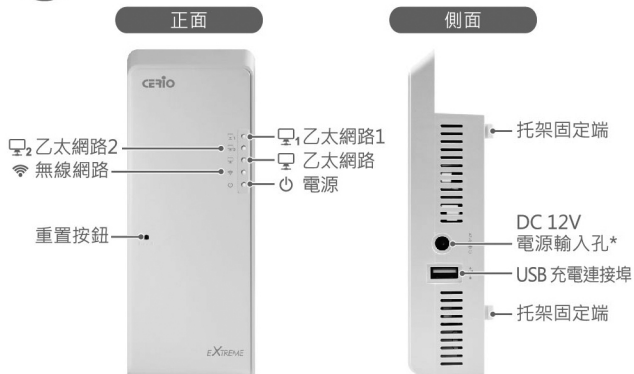

* WP-300N 可經由 PoE 或 DC 12V 變壓器輸入電源，本產品標準包裝內未含電源供應器，歡迎另行選購 Cerio PoE 電源供應組或變壓器。


2 連接埠說明

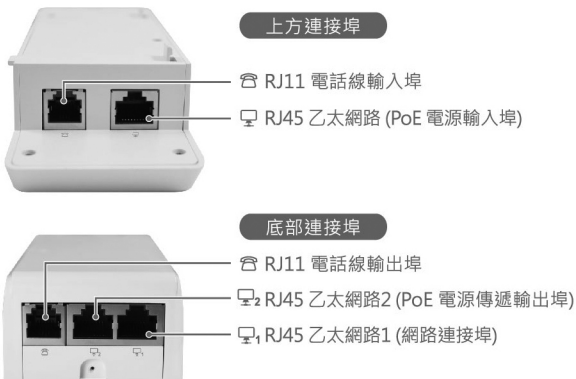

3 安裝托架說明

美規 (美國 / 日本通用)


歐規 (歐洲 / 中國通用)

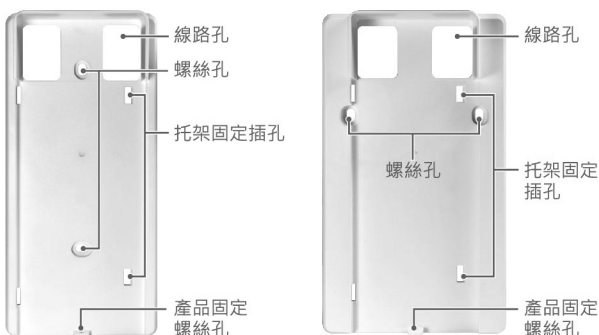


4 產品與托架安裝說明

- 1 請依照牆內嵌入盒的規格選擇對應的美規或歐規安裝托架。
- 2 請將 RJ11 電話線(左)和 RJ45 乙太網路線(右)依照對應位置從安裝支架的線路孔穿出，並將安裝托架鎖上牆內嵌入盒螺絲孔固定。
- 3 將線路插至 WP-300N 產品上方的連接埠，將產品本體安裝到托架上，確認卡榫固定後，再鎖上底部的螺絲完成安裝。

美規 (美國 / 日本通用)

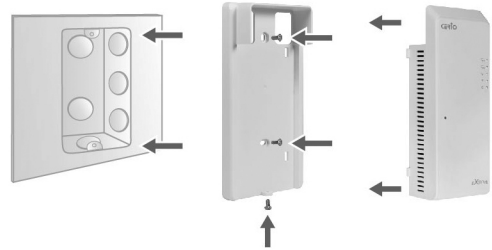

5 產品與支架拆卸說明

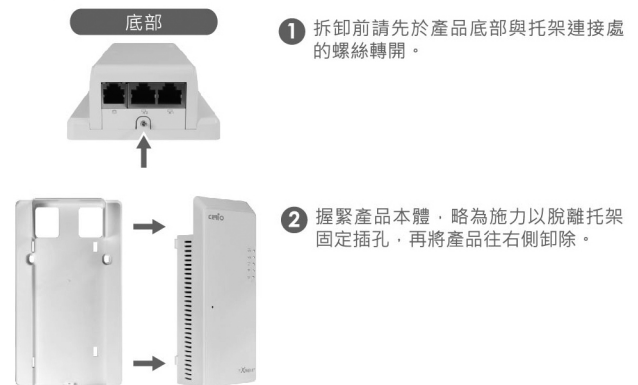

6 網路管理介面說明

透過網路瀏覽器設定 WP-300N：

舉例網路區段：(本機位址 192.168.2.100)

1. 點選「開始」→「設定」→「控制台」。
2. Windows 8 / 7 / Vista 用戶，請點選「網路和共用中心」。
3. 在「檢視作用中的網路」視窗，點選「乙太網路」→「內容」。
4. 在「網路功能」向下拉至「網際網路通訊協定第4版 (TCP/IPv4)」，點選此選項按「內容」。
5. 點選「使用下列的IP位址」並在IP位址輸入：192.168.2.100，子網路遮罩輸入：255.255.255.0，完成後按「確定」並關閉視窗回到上一層。
6. 在「乙太網路 內容」視窗按「確定」後完成設定。



開啟網路管理介面

開啟網頁瀏覽器，在網址列輸入預設 IP 位址：<http://192.168.2.254>，按 Enter 進入 WP-300N 網路管理介面。

成功連接 WP-300N 時便會出現登入頁面，請輸入下列預設資訊
使用者名稱：root
密碼：default
完成後按「登入」即可進入網路管理介面執行無線基地台相關設定。

更多詳細操作內容，請參考CD光碟內的使用手冊。

