

CERIO Corporation

eXtreme Power Wave2 4X 11N/ac 2.4/5Ghz
2x2 Ceiling / Wall PoE Access Point

CW-400 A1

Quick Installation Guide

CERIO <http://www.cerio.com.tw>

Technical Support
Support@cerio.com.tw

Product Package Contents


- CW-400 A1 Main Unit x 1
- PoE Power supply Kit x 1
- RJ-45 Function Kit x 1
- Wall/Ceiling & T-Bar Rail Mounting Bracket Set x 1
- Quick Installation Guide x 1
- Warranty Card x 1

NOTICE


A random lightning strike can easily cause damage to WIRELESS AP devices. (Lightning) DAMAGE IS NOT COVERED UNDER WARRANTY.

1 Front and Rear Panel Interface


Front

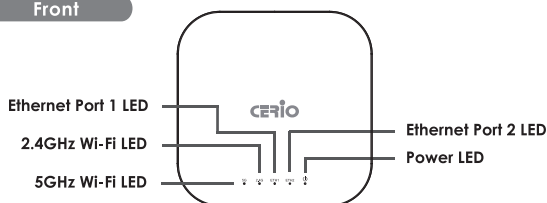

Rear Panel

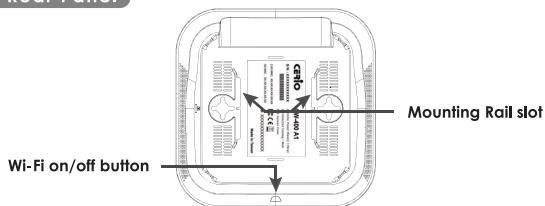


2 Hardware Installation

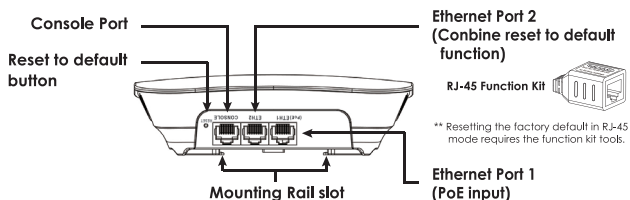


Wall/Ceiling Mounting Bracket

1. Security Lock
2. Screw Holes
3. Slide Rail

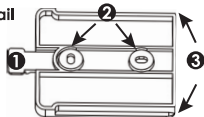

T-Rail Mounting Bracket


1. Security Lock
2. Movable Buckle for T-Rail
3. Slide Rail

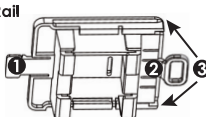

3 Wall Mounting Installation


Step 1

Confirm the position of the screw hole of the device on the wall and drill.

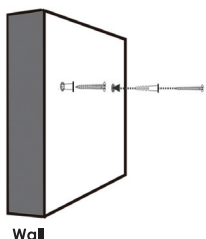

Step 2


After the screw is locked, screw protrudes from the wall by about 0.5 cm, which is used to hang the device.

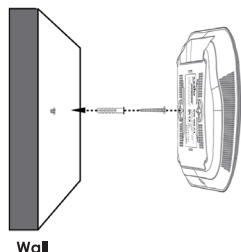

4 Wall/Ceiling Mounting Bracket

Step 1


Wall/Ceiling

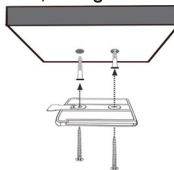

Position the Mounting Bracket in the desired location. Use the screws and anchors in the mounting kit to secure the Bracket into position.

Step 2


Mounting Rail slot

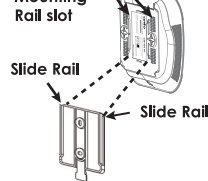

After aligning the slide rail of the device with the bracket slide rail, push it into the bracket.

Step 3

Wall/Ceiling

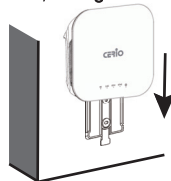


Slide the device down until it is locked into position.

5 Mounting Bracket Uninstallation


Security lock pressed inward to unlock device from mounting bracket.

Slide the device up to dismount from bracket.

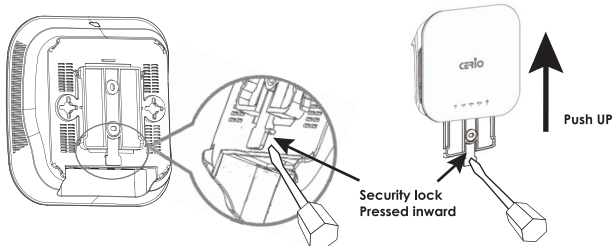


6 T-Bar Mounting Installation

Step 1

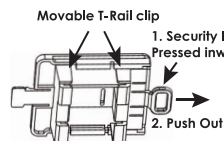


First pull the T-Rail clip to the maximum width.

Step 2

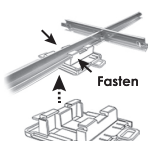

Tighten the T-Bar clip by installation the opening of the T-Rail clip into the rail.

Step 3

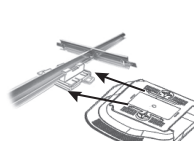


Slide the device down until it is locked into position.


7 GUI Setting Instruction

Product default IP address : 192.168.2.254 • Please setting the IP segment of the administrator's computer to be in the same range as this device for accessing the system. (E.g. 192.168.2.100)


1. Please Open Network and Internet settings and click left side "Ethernet" function, click on the right side "Change adapter options" again into set IP address function.

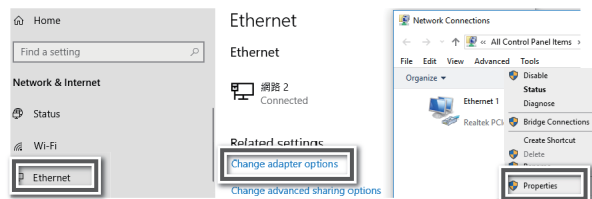

2. In Properties page to setting IP address, please find "Internet Protocol Version 4 (TCP/IPv4)" and double click or click "OK" button to complete the fixed IP address.

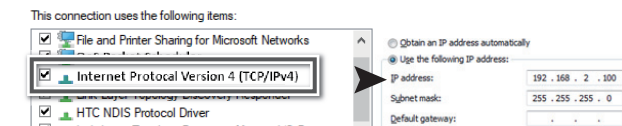

3. Launch as web browser to access the web management interface of system by entering the default IP Address, <http://192.168.2.254>, in the URL field, and then press Enter. The sign in user name is "root" and Password is "default".

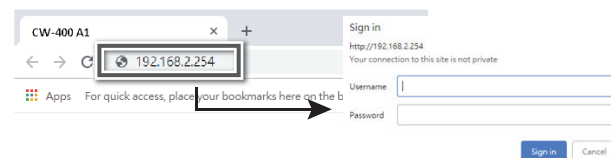

For detailed functional operation instructions, please go to the CERIO website (www.cerio.com.tw) to download the CW-400 A1 product User Manual.