

**CERIO** <http://www.cerio.com.tw> Technical Mail : [Support@cerio.com.tw](mailto:Support@cerio.com.tw)

- ### Package Contents
- DT-300N v2 Main Unit x 1
  - RJ-45 UTP Cable x 1
  - Power Adapter (Power Supply)
  - PoE Adapter x 1
  - Wall Mounting kit x1
  - Self Locking Cable Ties for Pole Mounting x 2
  - CD - User's Manual x 1
  - Quick Installation Guide x 1
  - Warranty Card x 1

**Warning:** After you purchasing our product from distributor or shop, before you setup it, please open the package and check that all the components listed are include. If there is any item missing, please contact with the distributor or the shop where you buy.



## 1 Hardware Installation

### 1.1 System Requirement

- Windows, Maxintosh or Unix-like Operating System with an installed ethernet adapter.
- Network cables. Use standard Cat.5 or Cat.5e UTP cables with RJ-45 connector.
- With administrator's PC must be installed or support TCP/IP protocol.
- For Internet access, and Internet Access account with an ISP, and either of a DSL or Cable modem.

### 1.2 Hardware Installation Procedures

Please Follow the instrature as below to finish the hardware installation.

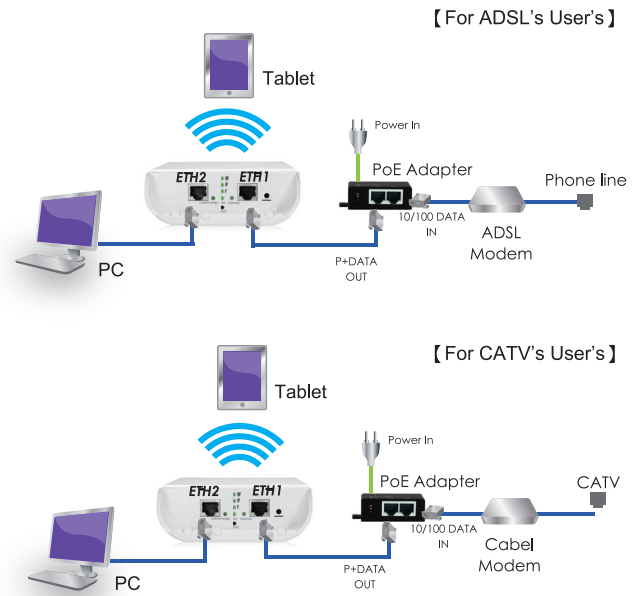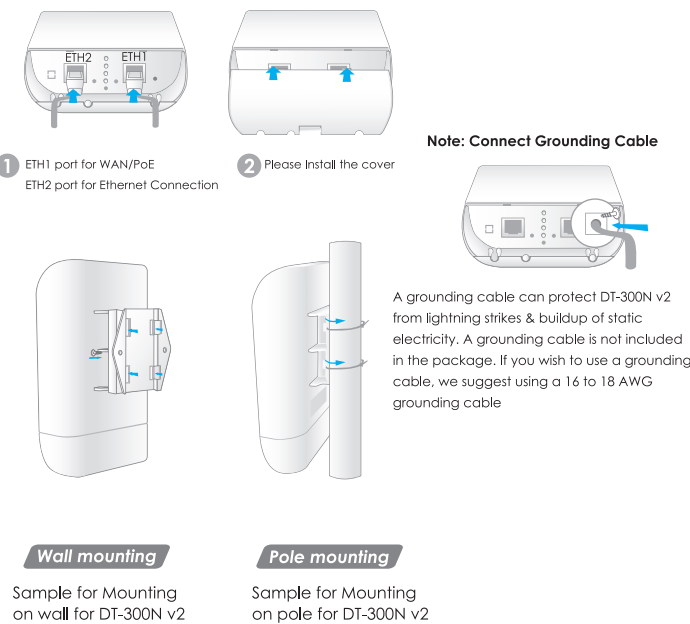

- Connecting your computer to the LAN port**  
Attach one end of the Ethernet cable connector from your hub, switch or a computer's Ethernet port to the "ETH2" PORTS of your DT-300N v2.
- Connecting the power adapter**  
Connect the single DC output connector of the power adapter to the power jack on the POWER IN side of the PoE Adapter . Then plug the Power Adapter into an AC outlet.
- Connecting the POE Adapter**  
Connector an Ethernet cable from your Cable/ADSL modem to the 10/100Mbps DATA IN side of the PoE Adapter
- Connecting POE Adapter to the WAN port**  
Connector an Ethernet cable from the P+DATA OUT side of the PoE Adapter to the "ETH1" PORT of y our DT-300N v2.
- Power on the following devices in this order:**  
Cable/ADSL modem, Router, and PCs.


## 3 TCP/IP Setting & Login

### 2.1 Configure your PC/NB to connect with DT-300N v2

Please make sure your network interface card configuration has been completed and activated on your operating system and connected to one of the LAN port of DT-300N v2 through Cat.5 or Cat.5e cable. Please make sure the LED on DT-300N v2 is already on and the LED corresponds with the port which you connected.

Please follow the steps below to setup your computer

- Go to Start → Settings → Control Panel
- If you are Windows XP user, please do Double click the icon Network
- If you are Windows Vista/7/8 user, please Click Network and Sharing
- Highlight the icon Local Area Connection, right click your mouse, and click Properties
- Click Network and Internet Connections
- Choose Obtain an IP address automatically and Obtain DNS server address automatically, and then press OK to close the Internet Protocol (TCP/IP) Properties window
- Press OK to close the Local Area Connection Properties window

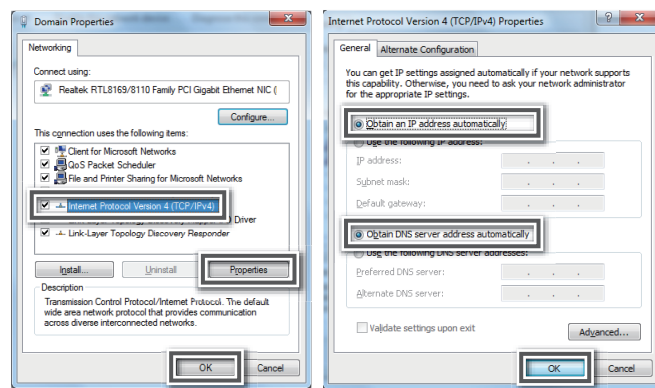


### 2.2 Login to DT-300N v2

Please Follow the instrature as below to finish the hardware installation.

When you finished the TCP/IP setting for your Windows now we will try to login to DT-300N v2 WEB management interface.

- Startup Edge or Internet Explorer and enter <http://192.168.2.254>, then press Enter.
- You will enter the user name and password. The default user name is "root", password is "default". You can modify your user name and modify your password. You need modify you user name and password when you successfully login, incase anyone else may invade your Internet illegally.

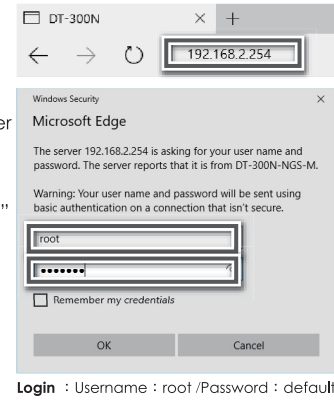


**Warning:** If you can't login to DT-300N v2 WEB management interface , please reset default the DT-300N v2 to factory default ( Press the "reset" button for 10-15 seconds located on rear panel then release it and DT-300N v2 will automatically restart and restore to default settings.) then try to login again and make sure there is no others network devices use the same IP address with DT-300N v2.

## 3 First Setting DT-300N v2 UI Page

### 3.1 Choose & check your system language

Please click 「System」 → 「Management」 and select your Language to finish System Language setting .

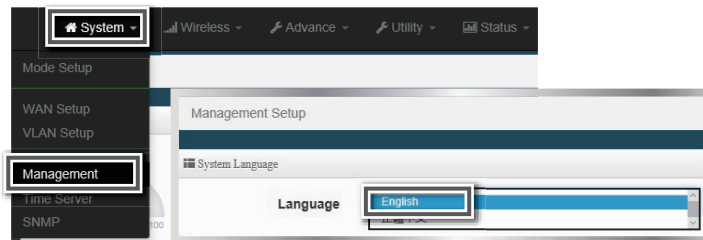

### 3.2 Choose & check your operating mode

Please click on System」 → 「Operating Mode」 → Check & confirm your operating mode .


There are five operation for the select :

- (1). CAP Mode
- (2). Access Point Mode
- (3). Client Bridge Mode
- (4). WISP Mode
- (5). Router Mode


Use the ADSL/Cable Broadband Router function of the user, please keep the default router AP mode, do not need to change to other modes.

### 3.3 Configure WAN Setup / LAN Setup / Wireless Setup


- 「Internet Connection Type」 → Please base on ISP Type to choose WAN Connection Type , Cable Modem ISP Type use Dyamic IP Type , ADSL ISP use PPPoE Type and key in your ISP Username & Password for ADSL Type.

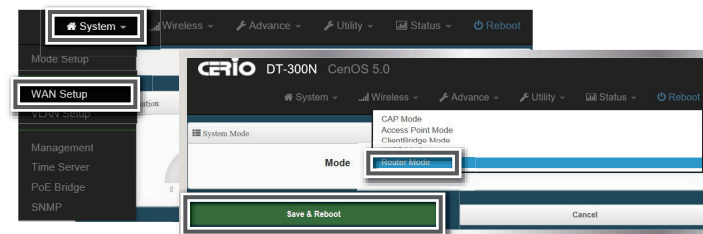


- 「DNS」 → If you don't know for your ISP correct DNS IP address , please click " No Default DNS Server " to follow your ISP DNS related IP address .

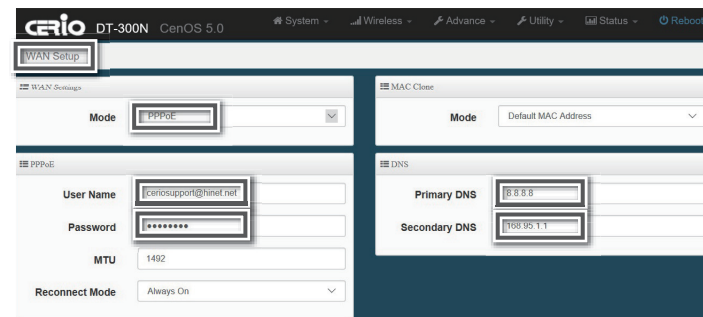


- 「LAN Setup」 → Here are the instructions for setup your DT-300N v2 local LAN IP Address and Netmask. If you don't want change the default IP 192.168.2.254 address , please keep the default and go next setup .

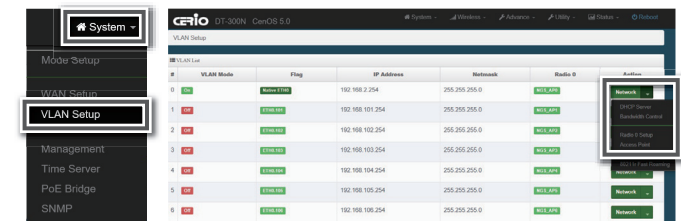


- 「DHCP Server」 → Devices connected to system can obtain an IP address automatically when this DHCP Server service is enabled .Specify the range of IP addresses to be used by the DHCP server when assigning IP address to clients ,you can keep the default value and go next setup .

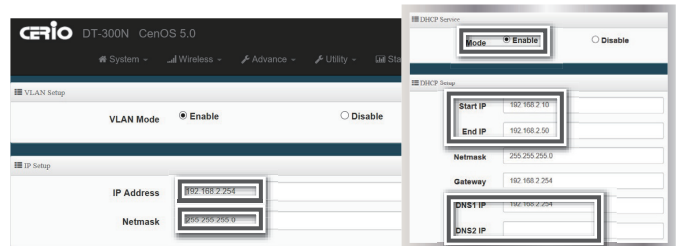

- 「Wireless Setup」 → if you are not sure which setting to choose, please then the default setting to best WiFi Smart channel udgment for Auto channel, & adjust the output power to level 9 (100%) Extended Service Set ID indicates the SSID which the clients used to connect to the access point ESSID.

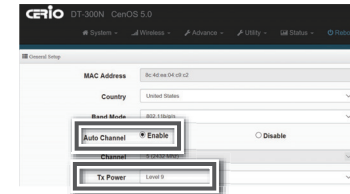


- 「Wireless Security Setup」 → Suggested setting that you use Wireless encryption authentication type for Security Type : to "WPA2-PSK", the Cipher Suite : to "AES", Key Type : to "ASCII" for 11n high speed mode .

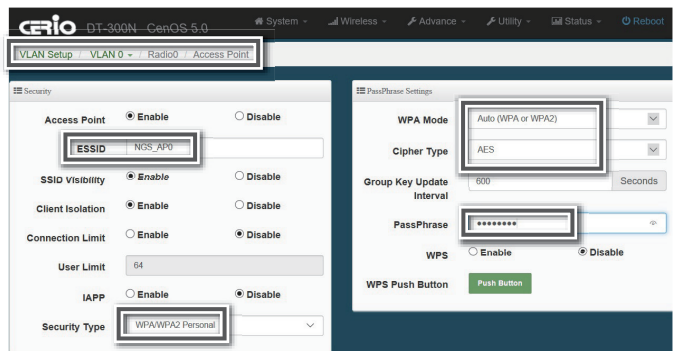

- 「Pre-Shared Key」 → Enter the information for pre-shared key; Pre-shared key can be either entered as a 256-bit secret in 64 HEX digits format, or 8 to 63 ASCII characters. the Pre-Shared Key sample as " 12345678 " wireless encryption key for wireless Access .

- Click 「Finish」 button to save your setting , please wait 50 seconds fill completion of the reboot process.

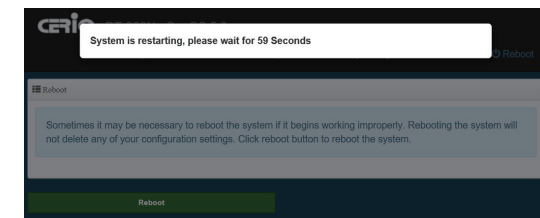

**Notice:** If you have advanced setting and more question, you can check to CD Manual .The complete manual in the mere CD disc explains .