

eXtreme Power 11n 2.4Ghz 2x2
Wall-Plate PoE Access Point

WP-300N

Quick Installation Guide

CERIO <http://www.cerio.com.tw>

Technical Support :
support@cerio.com.tw

Package Contents


- WP-300N Main Unit x1
- Wall-Plate Bracket (US / EU) x2
- Screw Pack x1
- CD Manual x1
- Quick Installation Guide x1
- Warranty Card x1

NOTICE


A random lightning strike can easily cause damage to WIRELESS AP devices. (Lightning) DAMAGE IS NOT COVERED UNDER WARRANTY.

1 Front and Side Panel Interface

Front Panel

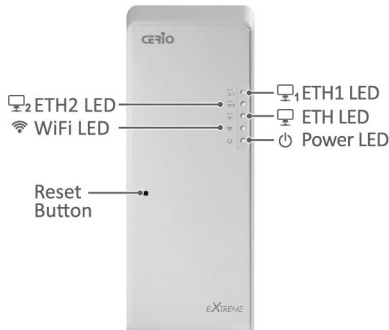


Side Panel

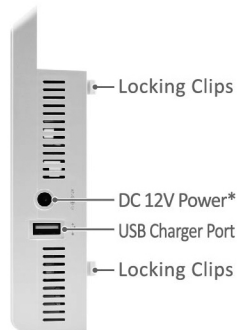


* WP-300N supports both PoE-In and DC 12V Power, however neither power adapter nor PoE injector are provided in the standard product package. These components can be optionally purchased upon request.

2 Bottom and Top Panel Interface

Top Panel

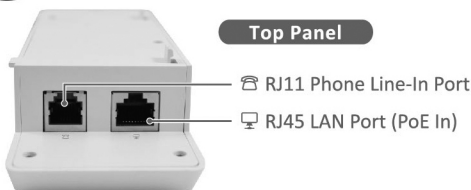


Bottom Panel

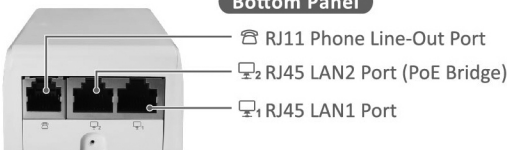


3 Wall-Plate Bracket Interface

U.S.A / Japan Type

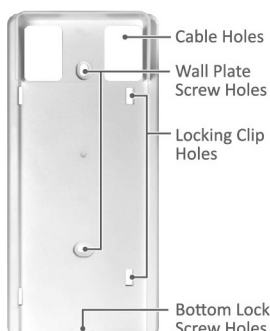


Europe / China Type

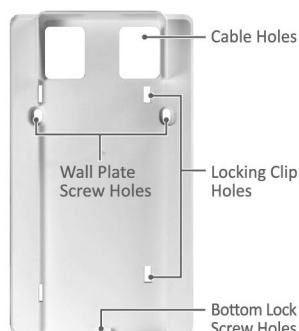

4 Hardware Installation

- First ensure that you are using the proper Wall Plate Bracket based on the metal outlet box at the installation site.
- Make sure RJ45 and RJ11 cables are fed properly through the cable holes on the Wall Plate Bracket. Then use the provided screws to secure the Wall Plate Bracket onto the metal outlet box.
- Connect the RJ45 and RJ11 cables to the proper device ports, then secure the device in place with the locking clips. Lastly, lock the device in place by screwing the provided screw in the lock hole at the bottom of the device.

U.S.A / Japan Type

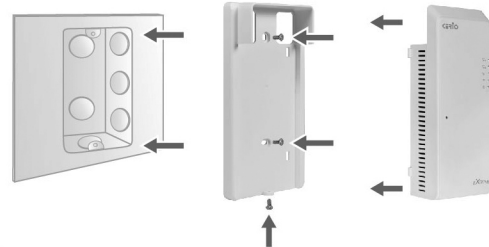

5 Hardware Uninstallation

Bottom Panel





- Unscrew the screw from the bottom lock screw hole to unlock the device from the Wall Plate Bracket.
- Firmly grab the device and pull from the right side. This will release the locking clips and unlock the device. Unscrew the Wall Plate Bracket to complete Uninstallation.

6 Web Management Interface

How to configure WP-300N through a Web Browser.

Example of Segment: (Local PC as 192.168.2.100)

- Go to "Start" → "Settings" → "Control Panel".
- For Windows 8 / 7 / Vista users, please Click "Network and Sharing Center".
- In the "View your active networks" section, click Ethernet in the "Connections" row to bring up Ethernet Status.
- Click "Properties", then scroll down and find "Internet Protocol Version 4 (TCP/IPv4)", then double-click.
- Select "Use the following IP address", and type in IP Address : 192.168.2.100 and Subnet mask : 255.255.255.0, Press "OK" to close this page.
- Press "OK" to close the Local Area Connection Properties window.

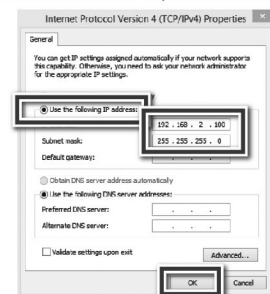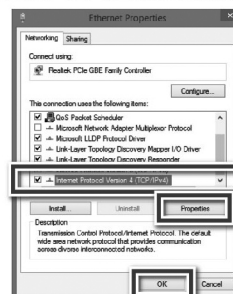


Launch Web Browser

Use your browser to access the web management interface of system by entering the WP-300N default IP Address <http://192.168.2.254>, in the browser URL field, and then press "Enter".

Once your browser is successfully connected with WP-300N, the Login Page will appear.

Enter "root" as User name and "default" as password, and then click "Log In" to login to the system.

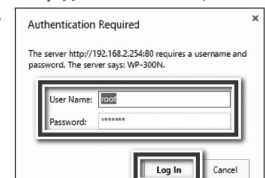

For more detailed login instruction for WP-300N's software interface, please reference our User Manual.