

CERIO Corporation

DT-400 A1

eXtreme 11n/ac, 2.4/5GHz 2x2 802.1q

VLAN Router with Access Point

Quick Start Guide

V1.0a





1.	Product Outward Appearance	3
2.	Panel Function Description	4
3.	LED Explanation	5
4.	Software Configuration	5
5.	Login DT-400 A1 Web Page	9







1. Product Outward Appearance





Product Front

Product Side



Product Reverse side

V1.0a





2. Panel Function Description



- 1. Reset button (Please press and hold for about 15 seconds and then release)
- 2. Wireless signal on /off button
- 3. 5 RJ-45 Ethernet connections Port
 - If select used Router AP mode then Eth1 is WAN Port, other Eth2-5 is LAN Ports.
 - If select used Access Point mode the Eth1-5 is LAN Port
 - If select Access Point mode and used authentication function then Eth1 must connect to Router.
- 4. Hardware power on/off button
- 5. 12V / 1A DC input power
- 6. 2.4G/5G dual-band Omni antenna x2





3. LED Explanation



- (1) Power LED
- (2) RJ-45 Ethernet connection LED
- (3) 5GHz Wi-Fi working LED
- (4) 2.4GHz Wi-Fi working LED
- (5) Wireless signal timing on/off LED

4. Software Configuration

PC link to device setup by OS Windows7

Please PC link to Device used cat5/6 Ethernet cable.







Step 1 :

Please click on the computer icon in the bottom right window, and click "**Open Network and Sharing Center**"



Step 2 :

In the Network and Sharing Center page, Please click on the left side of "**Change adapter** setting" button



V1.0a





Step 3:

In "Change adapter setting" Page. Please find Local LAN and Click the right button on the mouse and Click "Properties"



Step 4 :

In "Properties" page, please Click "Properties" button to TCP/IP setting







Step 5 :

In Properties page to setting IP address, please find "Internet Protocol Version 4 (TCP/IPv4)" and double click or click "Install" button.

Local LAN Properties	
Networking Sharing	
Connect using:	
Reattek PCIe GBE Family Controller	
Configure	
This connection uses the following items:	
Client for Microsoft Networks	
🗹 💂 QoS Packet Scheduler	
File and Printer Sharing for Microsoft Networks	
✓ Internet Protocol Version 6 (TCP/IPv6)	
Double clic	k
Ink-Layer Topology Discovery Mapper I/O Driver	
Install Uninstall Properties	
Description	
Transmission Control Protoco Or click Install button	
wide area network protocol t	
OK Cancel	

Step 6 :

Select "Use the following IP address", and fix in IP Address : 192.168.2.# ex. The # is any number by 1 to 253 / Subnet mask : 255.255.255.0 And Click "OK" to complete the fixed computer IP setting

Internet Protocol Version 4 (TCP/IPv4)	Properties		
General			
You can get IP settings assigned autor this capability. Otherwise, you need to for the appropriate IP settings.	matically if your network supports o ask your network administrator		
Obtain an IP address automatically			
Output Description - Output			
IP address:	192 . 168 . 2 . 100		
S <u>u</u> bnet mask:	255.255.255.0		
Default gateway:			
Obtain DNS server address autor	natically		
Use the following DNS server addresses:			
Preferred DNS server:			
<u>A</u> lternate DNS server:	• • •		
Validate settings upon exit	Ad <u>v</u> anced		
	OK Cancel		





Please Open Web Browser

Without a valid certificate, users may encounter the following problem in IE7 when they try to access system's WMI (https://192.168.2.254). There will be a "Certificate Error", because the browser treats system as an illegal website.

5. Login DT-400 A1 Web Page

Launch Web Browser

Launch as web browser to access the web management interface of system by entering the default IP Address, http://192.168.2.254, in the URL field, and then press Enter.



System Login

Windows 安全性
The server 192.168.2.254 is asking for your user name and password. The server reports that it is from Cerio's Access Point.
Warning: Your user name and password will be sent using basic authentication on a connection that isn't secure.
Image: Best of the second s
OK Cancel

Please use default Users name: "root" and default password "default" to login.

Please refer to the user manual for other detailed operating instructions

