

CERIO Corporation

IW-100 A1

eXtreme Wave 2 11n/ac 2.4/5Ghz 2x2 In Wall PoE Access

Point (100mW)

Quick Start Guide





1.	Product Outward Appearance	3
2.	Panel Function Descriptions	5
3.	Installation the In wall Access Point	6
4.	Software Configuration	7
1.	Login IW-100 A1 Web Page	10







1. Product Outward Appearance

EU Device

Product Front



Product Reverse side



Product Front + Faceplate



Product Reverse side + Faceplate







US Device



Product Reverse side



Product Side



Product Front + Faceplate



Product Reverse side + Faceplate







2. Panel Function Descriptions

Product Front



- (1) RJ-45 Ethernet Port
- (2) Ethernet LED
 - When right side orange light lit indicates starting device, enter the software boot program LED will goes out. When system is operating normally, client connection Ethernet port and transfer data then LED is green light flashing.
 - When left side green light lit indicates enter the software booting program, after the software normally working then LED will goes out. If hold down reset button about 15 sec then LED flashing indicates system reset to default.
- (3) RJ-11 telephone connection port
- (4) Reset button (hold down about 15 sec)



- (1) Ethernet connection port(data + PoE in).
- (2) RJ-11 telephone connection in.

Product Side





3. Installation the In wall Access Point

- **Step 1:** Pulled out on the wall for RJ45 Ethernet cable(With PoE Source), Use the RJ45 Ethernet cable(connected to the IW-100 A1 in rear of the PoE port.
- Step 2: Slide the Wall AP into the frame until it is flushed into the Wall.
- Step 3: Insert screws into the frame fixed on the embedded box.
- **Step 4:** The Faceplate cover into on the IW-100 A1.

As indicated below

Main Unit with EU-Type Faceplate

For Europe / China Specification



Main Unit with US-Type Faceplate

For U.S.A. / Japan Specification



* Different areas of sales the accessories Faceplate will use the US or European type





4. Software Configuration

PC to device setup by OS Windows7

Step 1 :

Please click on the computer icon in the bottom right window, and click "**Open Network** and **Sharing Center**"



Step 2 :

In the Network and Sharing Center page, Please click on the left side of "**Change adapter** setting" button



+(886) 2-8911-6160



Step 3 :

In "Change adapter setting" Page. Please find Local LAN and Click the right button on the mouse and Click "Properties"



Step 4 :

In "Properties" page, please Click "Properties" button to TCP/IP setting









Step 5:

In Properties page to setting IP address, please find "Internet Protocol Version 4 (TCP/IPv4)" and double click or click "Install" button.

Networking Sharing Connect using: Image: Connect using: Image: Realtek PCIe GBE Family Controller Configure This connection uses the following items: Configure Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Image: Client for Microsoft Networks Im	🎚 Local LAN Properties 🧮	
Connect using:	Networking Sharing	
Realtek PCIe GBE Family Controller Configure This cgnnection uses the following items: Client for Microsoft Networks GoS Packet Scheduler File and Printer Sharing for Microsoft Networks Internet Protocol Version 5 (TCP/IPv6) Internet Protocol Version 4 (TCP/IPv4) Ink-Layer Topology Discovery Mapper I/O Driver Install Install Properties Description Transmission Control Protocol Or click Install button across diverse interconnected networks.	Connect using:	
Configure This connection uses the following items: Image: Client for Microsoft Networks OK Cancel </td <td>Realtek PCIe GBE Family Controller</td> <td></td>	Realtek PCIe GBE Family Controller	
This connection uses the following items: Client for Microsoft Networks Client for Microsoft Networks Client for Microsoft Networks Client Protocol Version 6 (TCP/IPv6) Client Protocol Version 4 (TCP/IPv4) Client-Layer Topology Discovery Mapper I/O Driver Client-Layer Topology Discovery Responder Link-Layer Topology Discovery Responder Link-Layer Topology Discovery Responder Client Install Properties Description Transmission Control Protocol wide area network protocol the across diverse interconnected networks. OK Cancel	Configure	
Client for Microsoft Networks QoS Packet Scheduler Alternet Protocol Version 6 (TCP/IPv6) Internet Protocol Version 4 (TCP/IPv4) Double click Internet Protocol Version 4 (TCP/IPv4) Description Transmission Control Protocol version 4 (TCP/IPv4) Or click Install button across diverse interconnected networks. OK Cancel	This connection uses the following items:	
QoS Packet Scheduler QoS Packet Sched	Client for Microsoft Networks	
File and Printer Sharing for Microsoft Networks Internet Protocol Version 6 (TCP/IPv6) Internet Protocol Version 4 (TCP/IPv4) Double click Internet Protocol Version 4 (TCP/IPv4) Double click Install Uninstall Properties Description Transmission Control Protocol wide area network protocol t Or click Install button across diverse interconnected networks. OK Cancel	🗹 📮 QoS Packet Scheduler	
Internet Protocol Version 6 (TCP/IPv4) Internet Protocol Version 4 (TCP/IPv4) Internet Protocol Version 4 (TCP/IPv4) Double click Install Uninstall Properties Description Transmission Control Protocol Or click Install button across diverse interconnected networks. OK Cancel	File and Printer Sharing for Microsoft Networks	
Internet Protocol Version 4 (1CP/IPv4) Double click Install Install Install Properties Description Transmission Control Protocol Or click Install button across diverse interconnected networks. OK Cancel	Internet Protocol Version 6 (TCP/IPv6)	
Ink-Layer Topology Discovery Mapper 1/0 Driver Ink-Layer Topology Discovery Responder Install Properties Description Transmission Control Protocot Or click Install button across diverse interconnected networks. OK Cancel	Internet Protocol Version 4 (TCP/IPv4) The Design of the	nuble click
Install Properties Description Or click Install button Transmission Control Protocol Or click Install button across diverse interconnected networks. OK	Manager Links Lawren Transland Discourses Manager 1/0 Driver	Suble click
Install Properties Description Or click Install button Transmission Control Protocol wide area network protocol to across diverse interconnected networks. OK Cancel	Link-Layer Topology Discovery Mapper I/O Driver	
Install Uninstall Properties Description Transmission Control Protoco wide area network protocol to across diverse interconnected networks. OK Cancel	 Link-Layer Topology Discovery Mapper I/O Driver Link-Layer Topology Discovery Responder 	
Description Transmission Control Protocol wide area network protocol til across diverse interconnected networks. OK Cancel	Link-Layer Topology Discovery Mapper I/O Driver Link-Layer Topology Discovery Responder	
Transmission Control Protoco wide area network protocol to across diverse interconnected networks.	Link-Layer Topology Discovery Mapper I/O Driver Link-Layer Topology Discovery Responder Install Properties	
wide area network protocol til Of Circle Control of Ci	Link-Layer Topology Discovery Mapper I/O Driver Link-Layer Topology Discovery Responder Install Properties	
OK Cancel	Link-Layer Topology Discovery Mapper I/O Driver Link-Layer Topology Discovery Responder Install Properties Description Transmission Control Protoco Or click Install butt	
OK Cancel	Link-Layer Topology Discovery Mapper I/O Driver Link-Layer Topology Discovery Responder Install Properties Description Transmission Control Protocol tive Or click Install butt	on
OK Cancel	Link-Layer Topology Discovery Mapper I/O Driver Link-Layer Topology Discovery Responder Install Uninstall Properties Description Transmission Control Protocol Wide area network protocol ti across diverse interconnected networks.	on
	Link-Layer Topology Discovery Mapper I/O Driver Link-Layer Topology Discovery Responder Install Uninstall Properties Description Transmission Control Protocot wide area network protocol ti across diverse interconnected networks.	on

Step 6 :

Select "Use the following IP address", and fix in IP Address : 192.168.2.# ex. The # is any number by 1 to 253 / Subnet mask : 255.255.255.0 And Click "OK" to complete the fixed computer IP setting

Internet Protocol Version 4 (TCP/IPv4)	Properties
General	
You can get IP settings assigned auton this capability. Otherwise, you need to for the appropriate IP settings.	natically if your network supports ask your network administrator
Obtain an IP address automatical	у
─	
IP address:	192.168.2.100
Subnet mask:	255 . 255 . 255 . 0
Default gateway:	· · ·
Obtain DNS server address autom	natically
• Use the following DNS server add	resses:
Preferred DNS server:	
Alternate DNS server:	• • •
Validate settings upon exit	Advanced
	OK Cancel





Please Open Web Browser

Without a valid certificate, users may encounter the following problem in IE7 when they try to access system's WMI (https://192.168.2.254). There will be a "Certificate Error", because the browser treats system as an illegal website.

Login IW-100 A1 Web Page

Launch Web Browser

Launch as web browser to access the web management interface of system by entering the default IP Address, http://192.168.2.254, in the URL field, and then press Enter.

🕒 IW-100 A1 🛛 🗙 🔪
← → C ① 192.168.2.254
System Login
Authentication Required ×
http://192.168.2.254 requires a username and password.
Your connection to this site is not private.
User Name: Password:
Log In Cancel

Please use default Users name: "root" and default password "default" to login.

Please refer to the user manual for other details setting



