

CERIO Corporation

OW-400-A2


**eXtreme Power AC1200 2.4GHz / 5GHz 2x2 +17dBi
+Heater Outdoor Bridge/AP (800mW)**




Quick Start Guide (QSG)

1. Product Appearance and size	3
2. Product bottom of description.....	4
3. Product positive/back of description	5
4. Product top of description	5
5. Product setup	6
5.1 Setup waterproof connector for RJ-45	6
5.2 Multifunctional Bracket for Pole/Wall Mount Installation	6
6. Set windows OS network	8
7. Login web management by OW-400-A2	11


1. Product Appearance and size

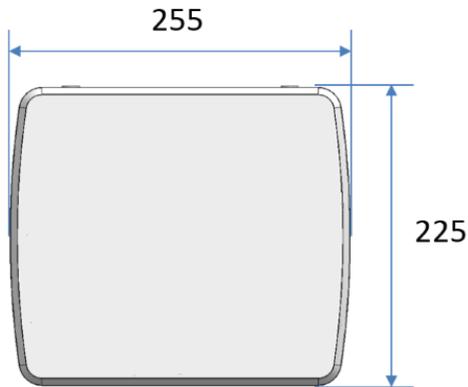

2. Product bottom of description

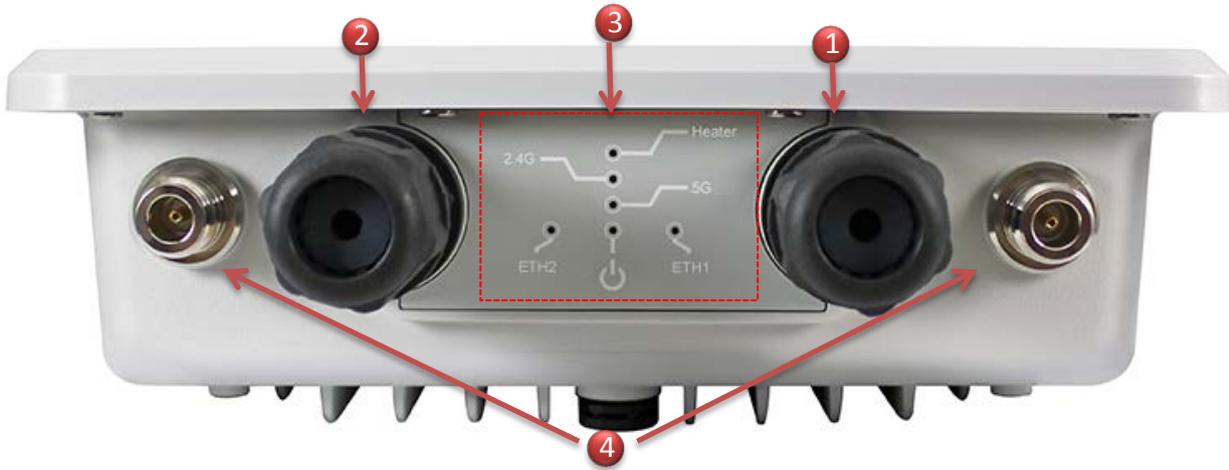


(1) Ethernet 1 (RJ-45) connect port, PoE in and reset button

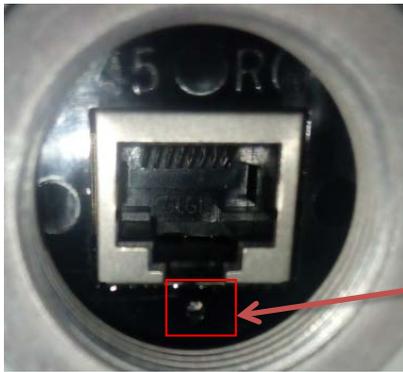

Reset button

(2) Ethernet 2 (RJ-45) connect port, Support PoE Bridge ◦

(3) LED information

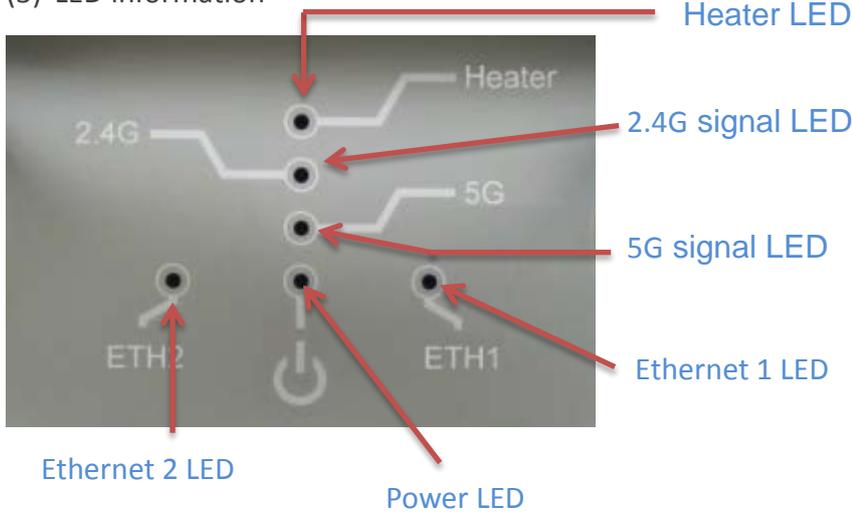

Heater LED

2.4G signal LED

5G signal LED


Ethernet 1 LED

Ethernet 2 LED

Power LED


(4) Waterproof external N-Type connect for 5G

3. Product positive/back of description

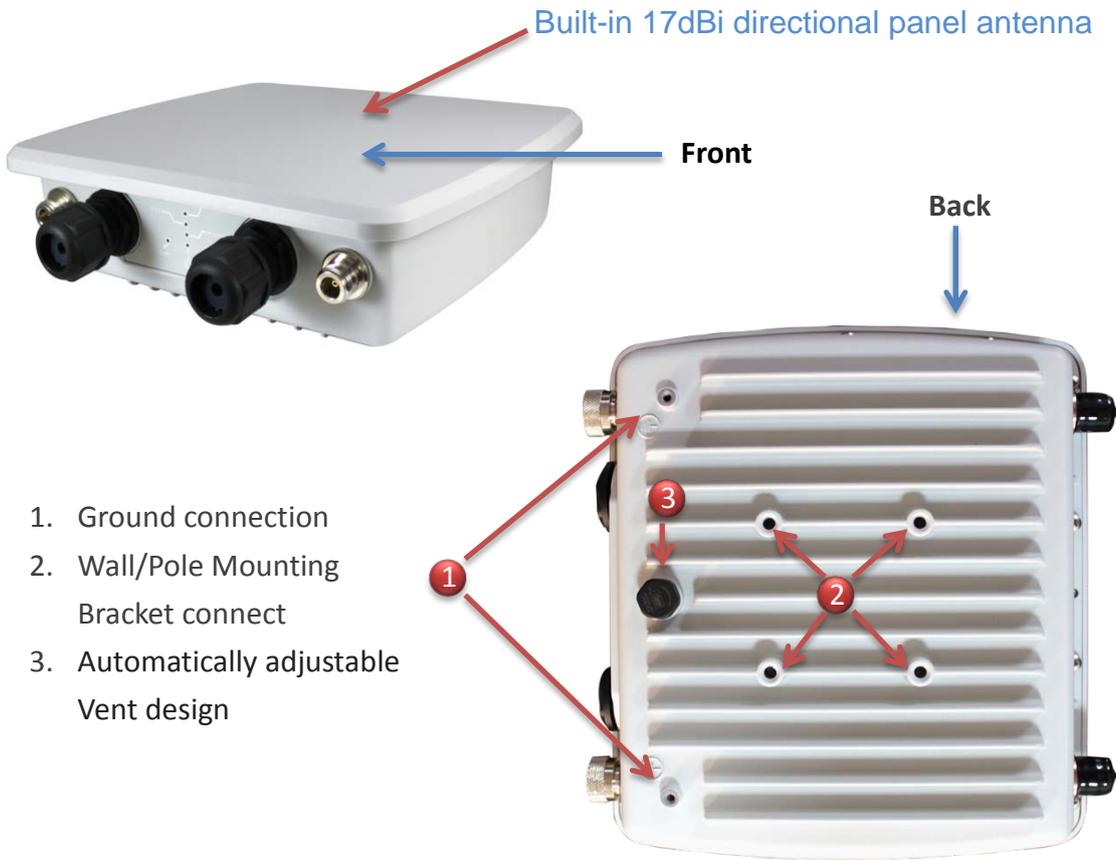

* Vents keep the worst from happening. They allow enclosures and containers to breathe, equalizing pressure and reducing condensation while filtering out liquids and other contaminants. The result: greater product performance, increased durability, higher reliability and peace of mind.

4. Product top of description

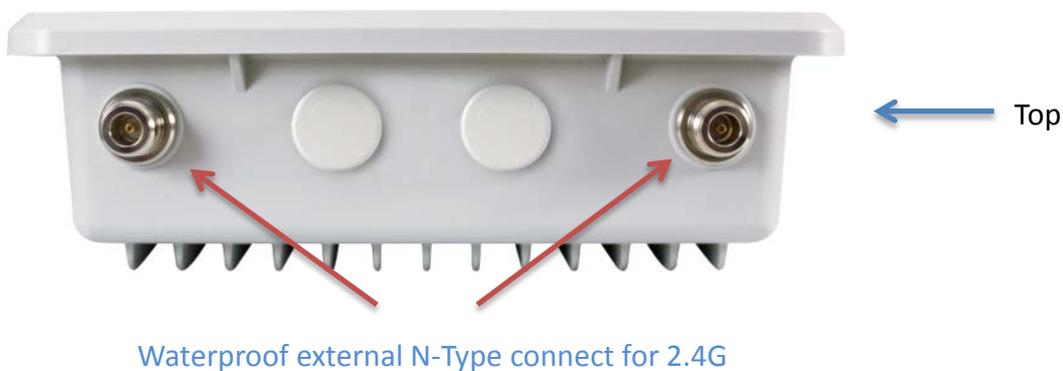

5. Product setup

5.1 Setup waterproof connector for RJ-45

1) Open the Shuttered for Ethernet Port



2) Lock waterproof connect for Ethernet Port



3) Install waterproof cork of RJ-45 cable dedicated



4) Will RJ-45 connection to Ethernet port and locking waterproof cork



5.2 Multifunctional Bracket for Pole/Wall Mount Installation

CERIO's OW-400-A2's supports both **Pole** and **Wall Mounting**. Using the provided mounting bracket, users can deploy OW-400-A2 in a wide range of outdoor environments.



Instructions: Use the provided screws to secure the mounting bracket on the back of OW-400-A2. The bracket can be attached two different ways.



Vertical Mounting Bracket Setup



Horizontal Mounting Bracket Setup



Wall Mounting

Instructions: Use the provided screws and wall anchors to wall mount OW-400-A2. Plastic wall anchors are always recommended to safely support the device's weight.

6. Set windows OS network


Example of Segment: (Windows 7)

IP Segment Set-up for Administrator's PC/NB

Set the IP segment of the administrator's computer to be in the same range as OW-400-A2 for accessing the system. Do not duplicate the IP Address used here with IP Address of OW-400-A2 or any other device within the network.


Step 1 :

Please click on the computer icon in the bottom right window, and click **“Open Network and Sharing Center”**

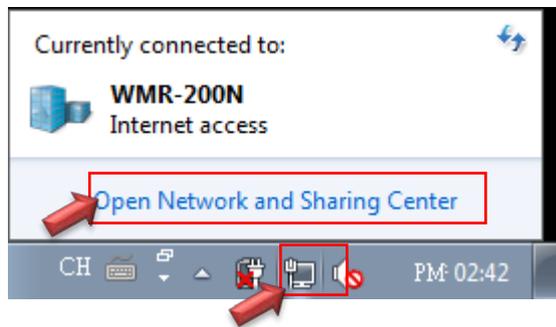


Step 2 :

In the Network and Sharing Center page, Please click on the left side of **“Change adapter setting”** button

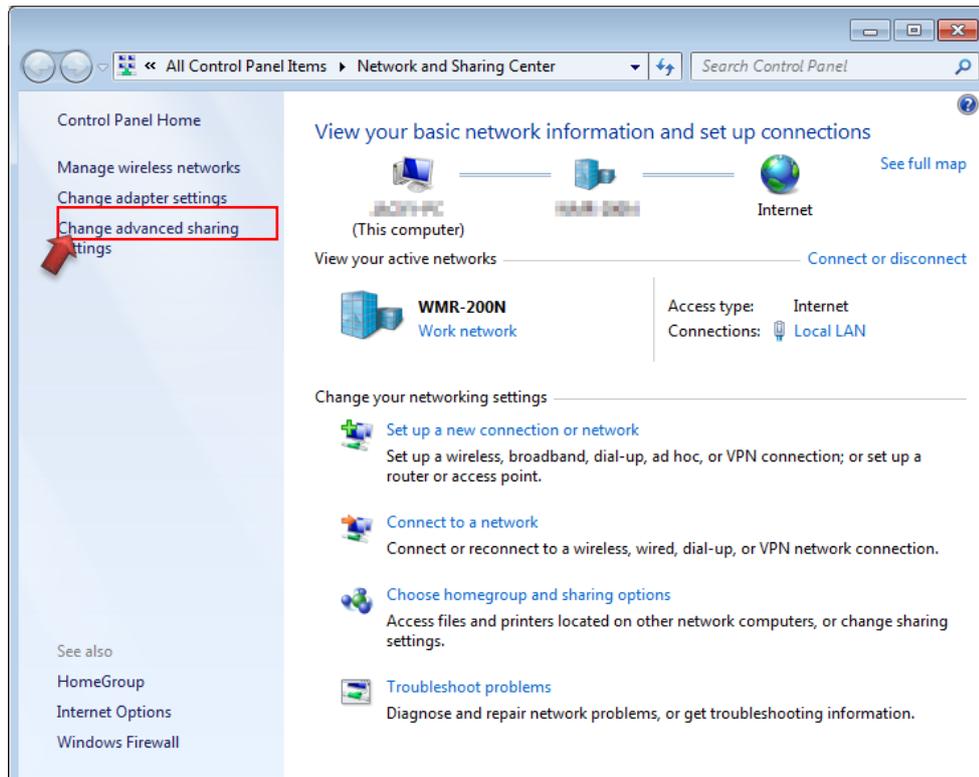


Step 3 :

In “**Change adapter setting**” Page. Please find Local LAN and Click the right button on the mouse and Click “**Properties**”

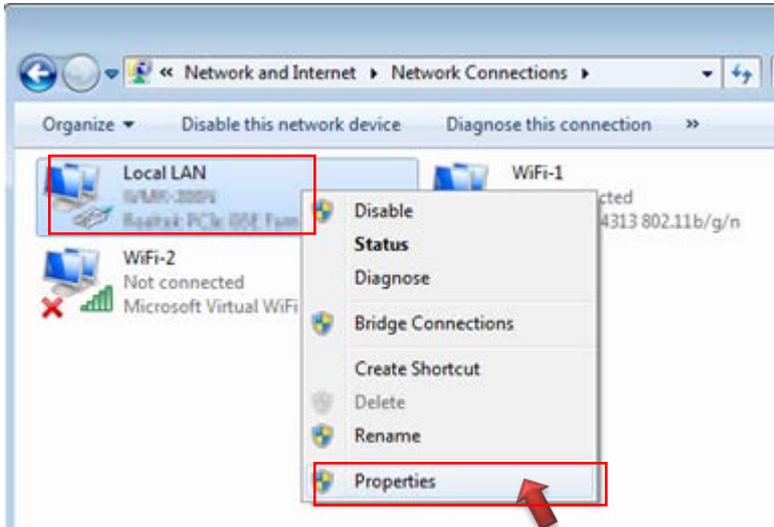


Step 4 :

In “**Properties**” page, please Click “**Properties**” button to TCP/IP setting

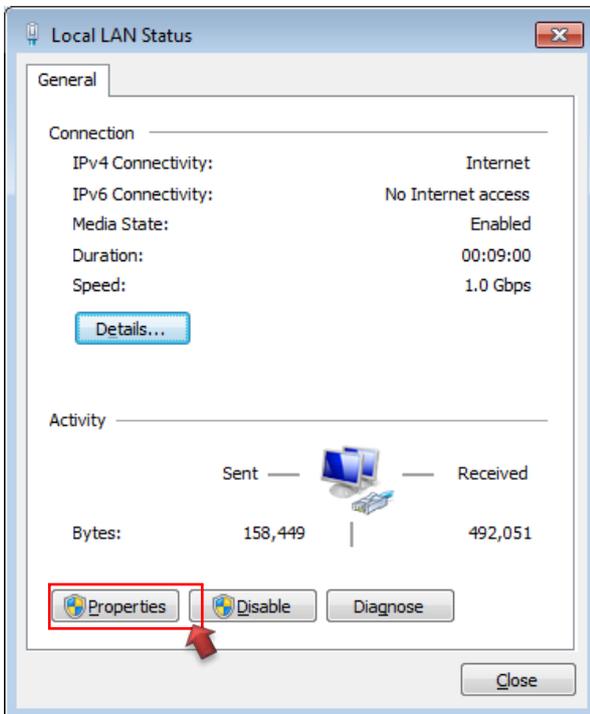

Step 5 :

In Properties page to setting IP address, please find “**Internet Protocol Version 4 (TCP/IPv4)**” and double click or click “**Install**” button.

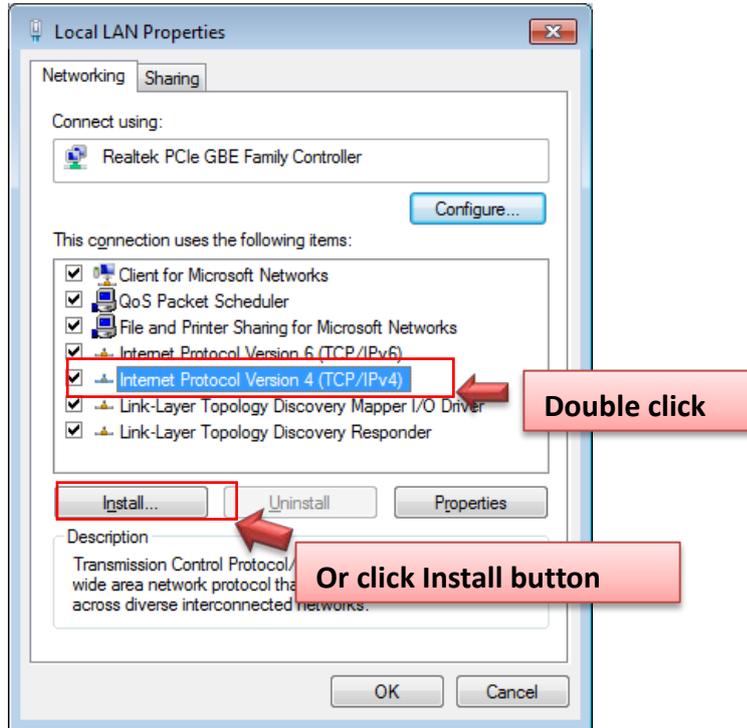


Step 6 :

Select “**Use the following IP address**”, and fix in IP Address : 192.168.2.#

ex. The # is any number by 1 to 253


Subnet mask : 255.255.255.0

And Click “**OK**” to complete the fixed computer IP setting

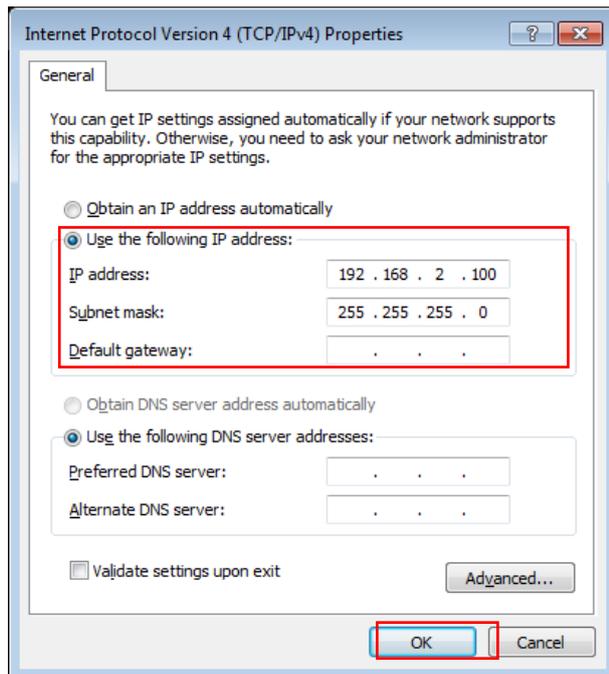

7. Login web management by OW-400-A2

Launch as web browser to access the web management interface of system by entering the default IP Address, http://192.168.2.254, in the URL field, and then press Enter. Browser will pop up "login" page. Please key in username and password into the system on OW-400-A2.

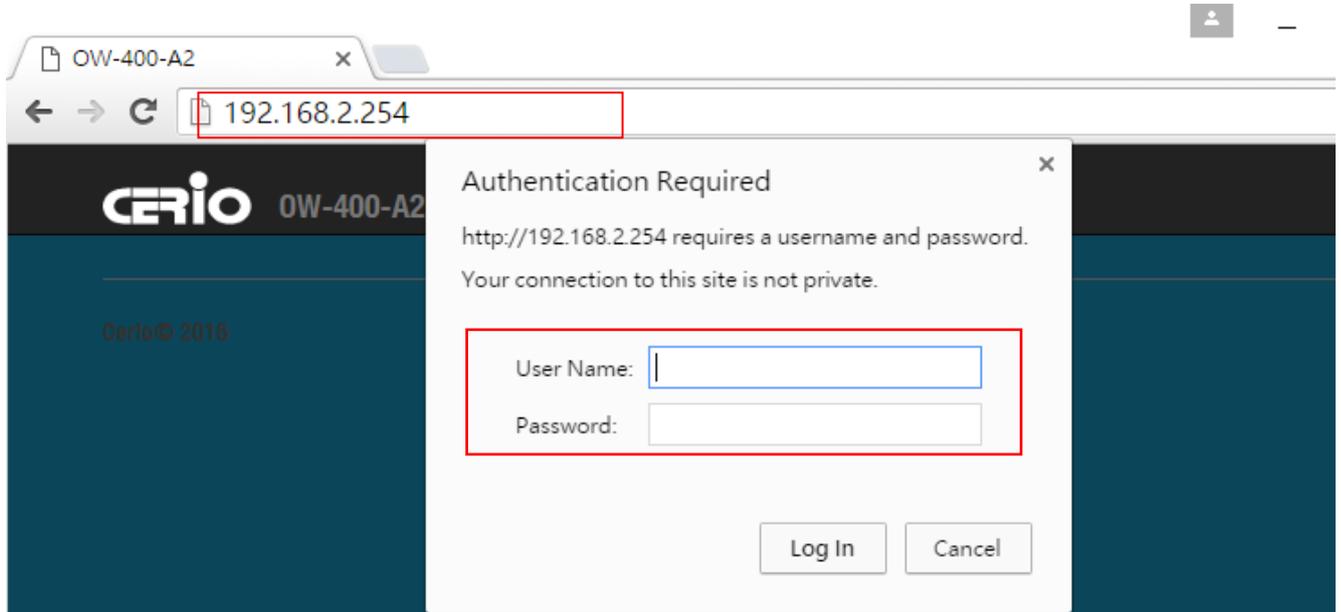

The system manager Login Page then appears.

Enter **“root”** as User name and **“default”** as Password, and then click **“OK”** to login to the system.

Login information

By CenOS5.0 Software	Router / AP / WDS/Client Bridge + Repeater AP/ WISP+ Repeater AP mode
Default IP Address	192.168.2.254
Account	root
Password	default

Please base your Software version check to OW-400-A2 CenOS5.0 User’s Manual