

CERIO Corporation

DR-4000-CA

Multi WAN Gigabit AP Controller with Gateway Router
(128APs)



User's Manual

Default IP / Login Information

| | |
|------------|-------------|
| IP Address | 192.168.2.1 |
| User Name | root |
| Password | default |

| | | |
|-----------|---|-----------|
| 1. | Device and Software Configuration | 5 |
| 1.1 | Device appearance..... | 5 |
| 1.2 | Setup Preparation of Device..... | 6 |
| 1.3 | Login Web Page..... | 8 |
| 2. | Operating Mode Introduction | 10 |
| 2.1 | Control Mode | 10 |
| 2.2 | Router Mode | 10 |
| 2.3 | Captive Portal Mode | 11 |
| 3. | System Configuration..... | 11 |
| 3.1 | WAN Setup | 11 |
| 3.2 | WAN Traffic Setup..... | 15 |
| 3.3 | VLAN Setup | 16 |
| 3.3.1 | Network Button | 18 |
| 3.3.2 | Pull-down menu @ Bandwidth Control..... | 19 |
| 3.3.3 | Pull-down menu @ DHCP Server | 20 |
| 3.4 | Authentication(Hotspot Setup)..... | 22 |
| | # Authentication Button:..... | 23 |
| | # Authentication Dropdown Button..... | 24 |
| 3.4.1 | Guest | 25 |
| 3.4.2 | Local User | 26 |
| 3.4.3 | OAuth2.0 | 26 |
| | <input type="checkbox"/> Sample for Google OAuth2.0 setup | 26 |
| | <input type="checkbox"/> Sample for Facebook OAuth2.0 setup | 29 |
| 3.4.4 | POP3 Server | 33 |
| 3.4.5 | Customize Page | 33 |
| 3.4.6 | Language | 35 |
| 3.4.7 | Walled Garden | 35 |
| 3.4.8 | Privilege Address | 36 |
| 3.4.9 | Profile | 36 |
| 3.5 | High Availability | 37 |
| 3.6 | VPN Server Setup..... | 39 |
| 3.7 | VPN Peer Setup..... | 41 |

| | | |
|------|-------------------------------|----|
| 3.8 | PPTP Server Setup..... | 42 |
| 3.9 | L2TP Server Setup | 44 |
| 3.10 | PPTP/L2TP Account Setup | 45 |
| 3.11 | PPTP/L2TP Client Setup | 46 |
| 3.12 | IPSec Setup..... | 48 |
| 3.13 | Management..... | 51 |
| 3.14 | Time Server | 56 |
| 3.15 | SNMP | 58 |
| 3.16 | DDNS | 59 |
| 3.17 | Log Server Setup | 61 |
| 3.18 | Notification Setup..... | 63 |
| 4. | AP Control | 67 |
| 4.1 | Scan Device | 67 |
| 4.2 | Batch Setup | 69 |
| 4.3 | AP Setup..... | 70 |
| 4.4 | Group Setup | 72 |
| 4.5 | Map Setup..... | 73 |
| 4.6 | Authentication Profile | 76 |
| 4.7 | Status..... | 78 |
| 5. | Account | 79 |
| 5.1 | RADIUS Server..... | 79 |
| 5.2 | Remote LDAP Setup | 80 |
| 5.3 | Package Setup | 82 |
| 5.4 | Create An Account | 84 |
| 5.5 | Search Account | 85 |
| 5.6 | Regenerated Tickets DB..... | 86 |
| 5.7 | Thermal Printer Setup | 89 |
| 5.8 | History Log | 92 |
| 5.9 | Online Log | 92 |
| 5.10 | Database Maintenance..... | 93 |
| 6. | Advance..... | 93 |
| 6.1 | IP Filter | 93 |

| | | |
|-----|---|-----|
| 6.2 | IP Group | 95 |
| 6.3 | Port Group..... | 96 |
| 6.4 | MAC Filter | 97 |
| 6.5 | Virtual Server | 98 |
| 6.6 | Access Control..... | 99 |
| 6.7 | IP Routing Setup..... | 101 |
| 6.8 | IP Routing Rule Setup | 103 |
| 6.9 | Time Policy | 104 |
| 7. | Utility..... | 105 |
| 7.1 | Profile Setting..... | 105 |
| 7.2 | System Upgrade | 106 |
| 7.3 | Network Utility | 108 |
| 7.4 | Log Maintenance | 109 |
| 7.5 | Reboot..... | 110 |
| 8. | Status..... | 111 |
| 8.1 | Overview | 111 |
| 8.2 | Local System Log | 111 |
| 8.3 | Session Log..... | 112 |
| 8.4 | Authentication Log | 114 |
| 8.5 | Remote System Log..... | 115 |
| 8.6 | Wireless Location Tracking Log..... | 116 |
| 9. | Technical documents | 119 |
| 9.1 | Example for PPTP/L2TP setup | 119 |
| 9.2 | Hotspot function used POS system application..... | 122 |
| | Login management interface for SP-800..... | 123 |
| | Install normal thermal printer | 124 |
| | Install QR Code thermal printer | 125 |
| | Set web authentication steps for POS system..... | 128 |

1. Device and Software Configuration

1.1 Device appearance



1. DC Jack Power interface (Power input- interface-1)

2. LED status indicator:

| | |
|--|---|
| | <p>PWR LED: When it is confirmed that the PoE input or DC input power is powered on, this LED is always on when the power is turned on.</p> |
| | <p>Fail LED : System problem warning LED ,Operating system storage data cannot be accessed , (The light is always on when there is a fault).</p> |
| | <p>Online LED : Online working LED , It flashes during the system startup process, and stays on after the system startup is successful and confirmed, (Indicating that the Ready state is successful).</p> |
| | <p>Ethernet port LED : Link/Act connection LED from ETH1 port to ETH4 port</p> |


- 3. Reset button** (to restore the factory default, please press it for about 10-15 seconds. The Online LED and Fail LED will flash at the same time, indicating confirmation. You can release the button and wait for the system to return to the factory default).
- 4. Gigabit / ETH1 (POE) Ethernet port**, The WAN or LAN port can be changed through software configuration **(Power input- interface-2)**.
- 5. Gigabit / ETH2 (POE) Ethernet port**, The WAN or LAN port can be changed through software configuration **(Power input- interface-3)**.
- 6. Gigabit / ETH3 Ethernet port**, The WAN or LAN port can be changed through software configuration.
- 7. Gigabit / ETH4 Ethernet port**, the WAN or LAN port can be changed through software configuration.
- 8. GND ground screw pad** , The contact point for the housing ground screw of this device.

1.2 Setup Preparation of Device


Please PC link to Device used cat5/6 Ethernet cable.

[The following setup uses a Windows PC, user OS may vary.](#)


Step 1: Please click on the computer icon in the bottom right window, and click “Open Network and Internet settings”

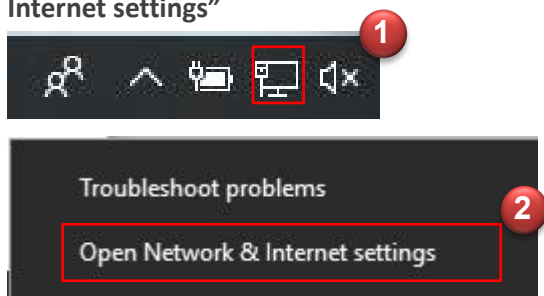

Step 2: After click left side "Ethernet" function, click on the right side “Change adapter options” again.

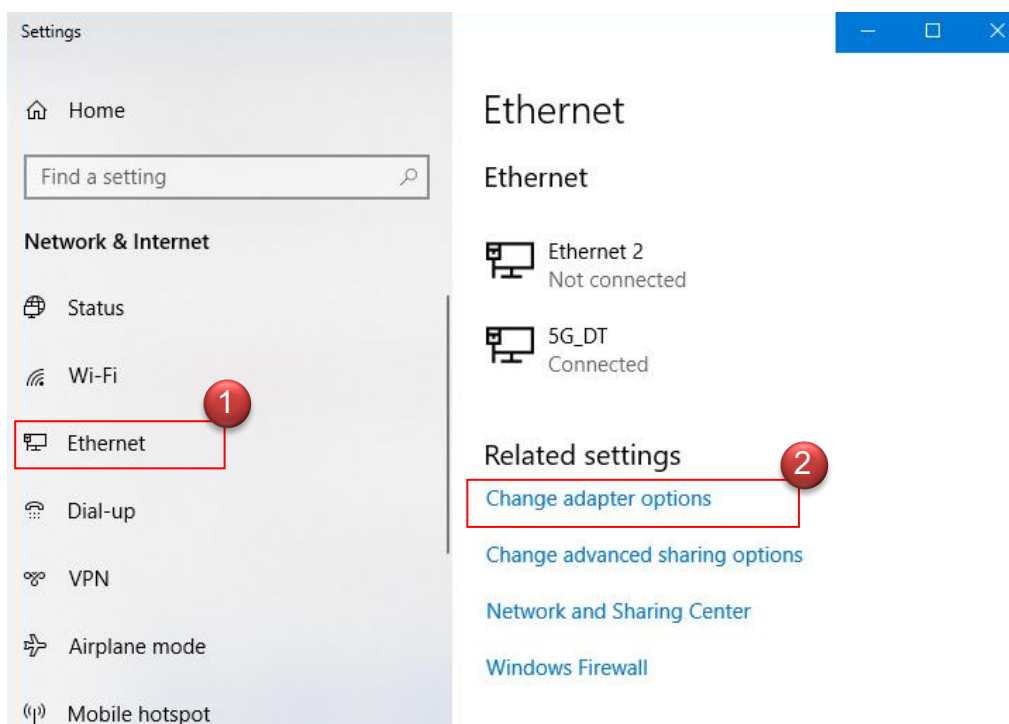

Step 3: In “Change adapter options” Page. Please find Ethernet (Local LAN) and Click the right button on the mouse and Click “Properties”


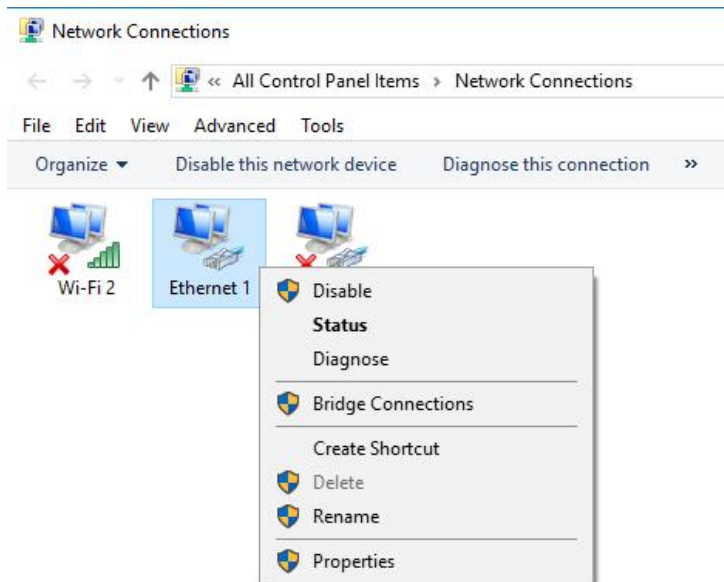


Step 4: In Properties page to setting IP address, please find “Internet Protocol Version 4 (TCP/IPv4)” and double click or click “OK” button.

Step 5 : Select “Use the following IP address”, and fix in IP Address : 192.168.2.#

ex. The # is any number by 1 to 253

Subnet mask : 255.255.255.0

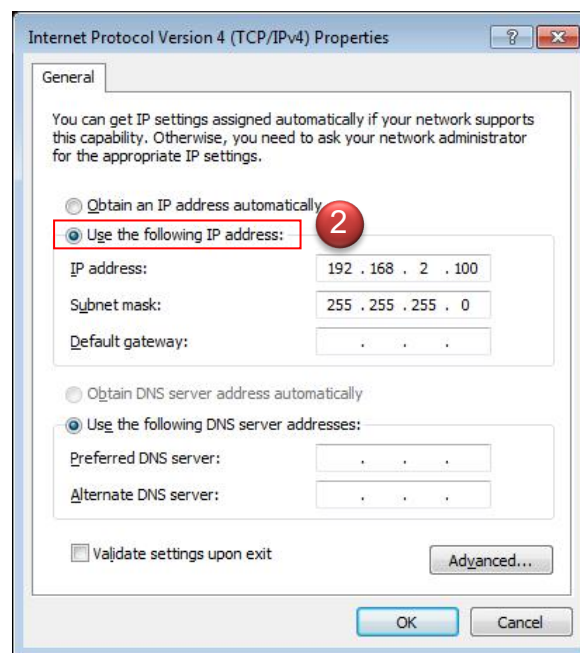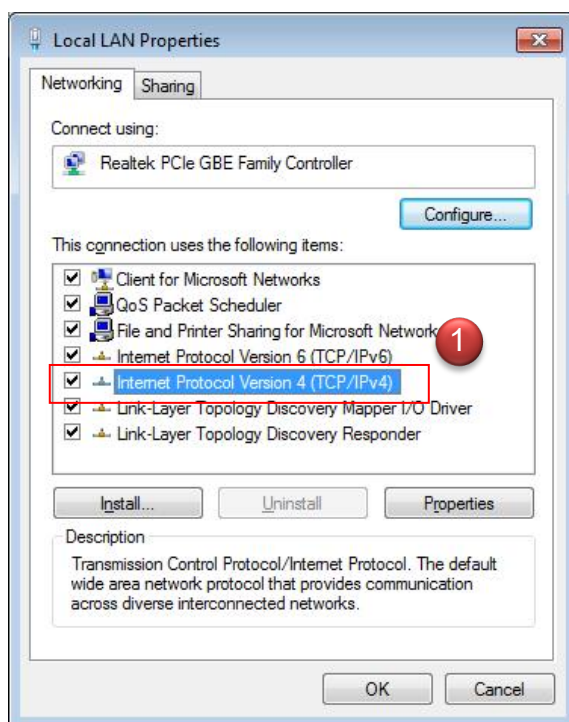

And Click "OK" to complete the fixed computer IP setting

1.3 Login Web Page

DR-4000-CA supports web-based configuration. Upon the completion of hardware installation, DR-4000-CA can be configured through a PC/NB by using its web browser such as Internet Explorer 6.0 or later version or similar browser.


- **Default IP Address:** 192.168.2.1
- **Default Subnet Mask:** 255.255.255.0
- **Default Username and Password**

| | |
|---------------------------|--------------|
| MODE | Router mode |
| Management Account | Root Account |
| Username | root |
| Password | default |


Notice Please note that the LAN IP addresses in each mode are different from each other and will not continue. For the first time after switching modes, always perform access management on the LAN default IP address of 192.168.2.1

Launch Web Browser

Open IE browser or other browsers such as Firefox, Chrome, and Edge, and enter the device default IP address in the URL address bar: <http://192.168.2.1> to open the WEB management interface.

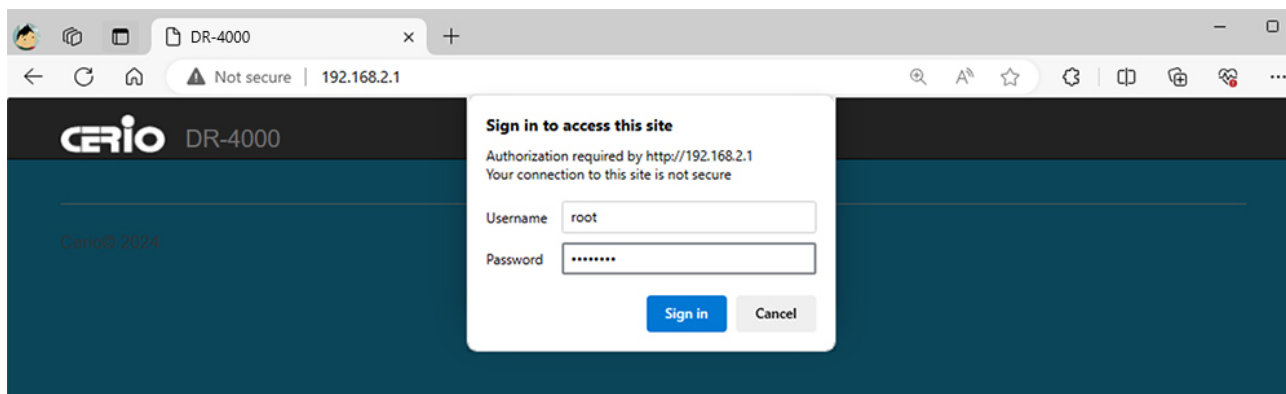


Please use default Users name: **“root”** and default password **“default”** to login.

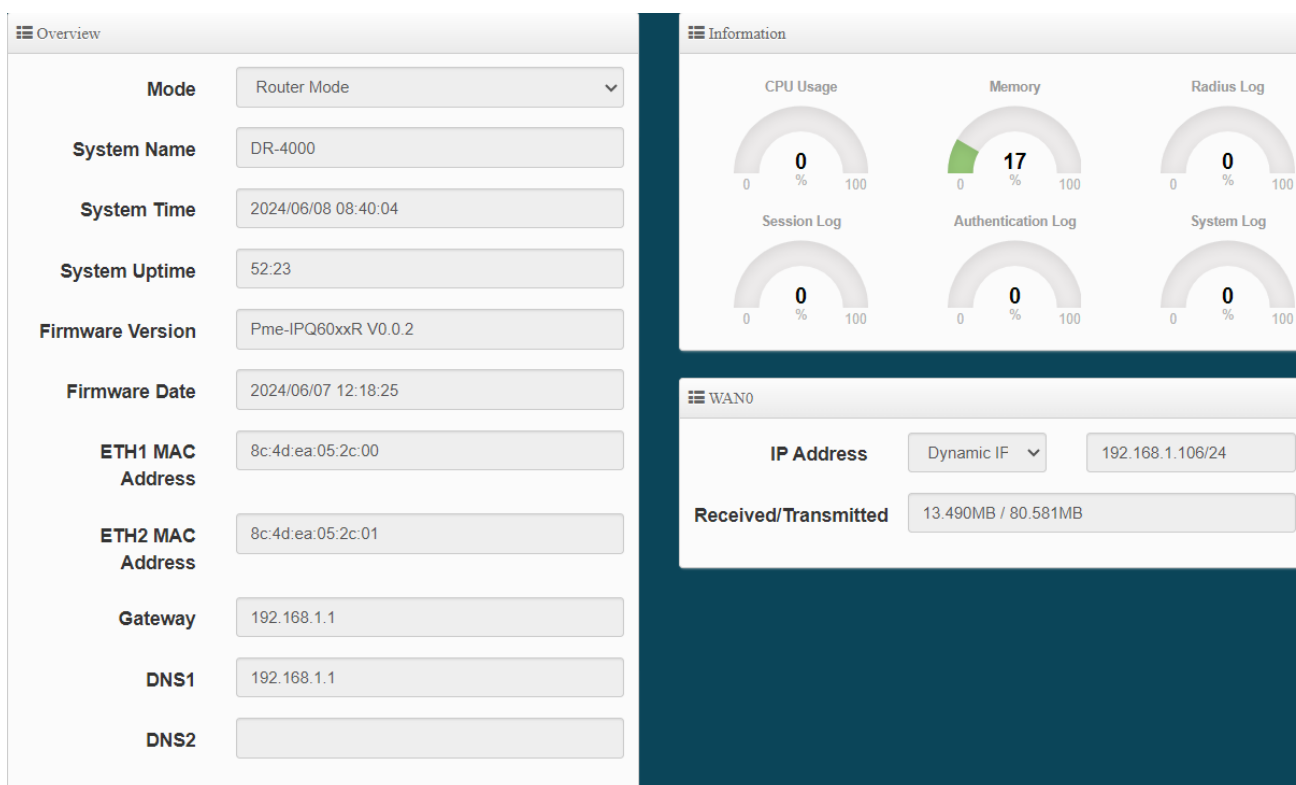

2. Operating Mode Introduction

2.1 Control Mode


When the Control Mode is selected then **DR-4000-CA** will be pure AP centralized management controller, the system built-in RADIUS server, system log server and support port VLAN (PVID) setup. The Control mode can via VPN tunnel go to centralized management AP's (The mode is no Router NAT function in this mode).

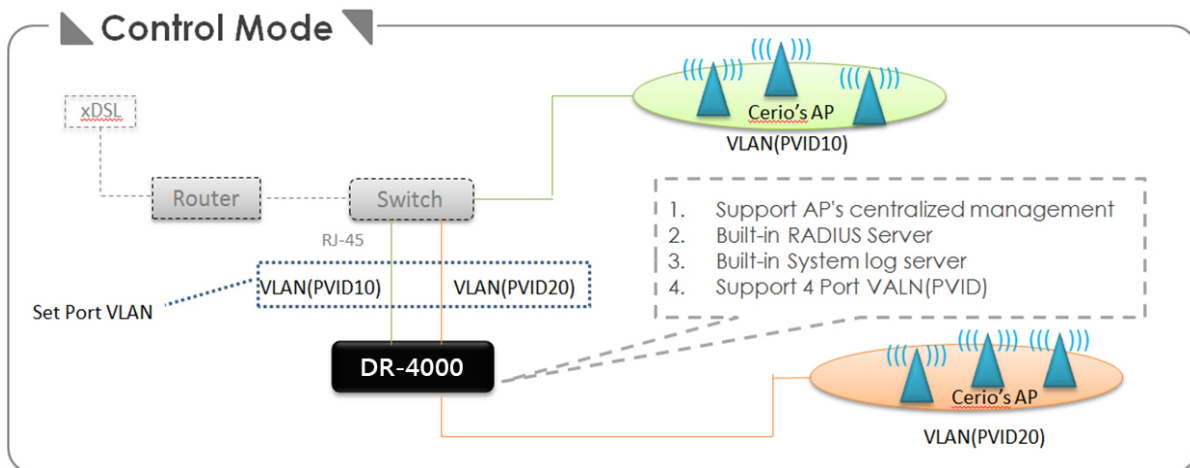


2.2 Router Mode

When administrator select use Route mode then system can set 1WAN 3LAN Router also can select 3WAN 1LAN outbound load balancer.

This Router mode support IP Routing setup/Firewall/HA/VPN/Multi-WAN/QoS enforcement and Built-in AAA Radius server

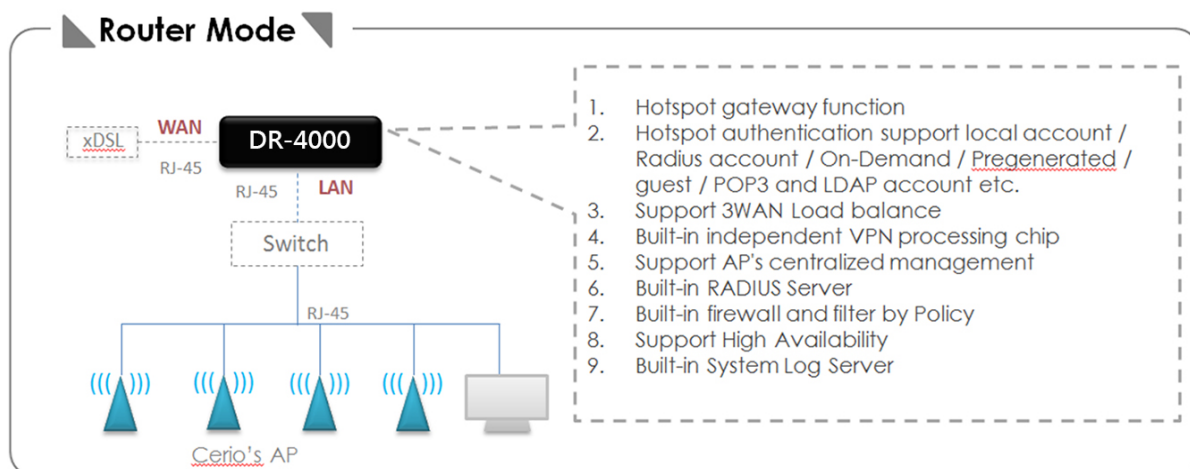

2.3 Captive Portal Mode

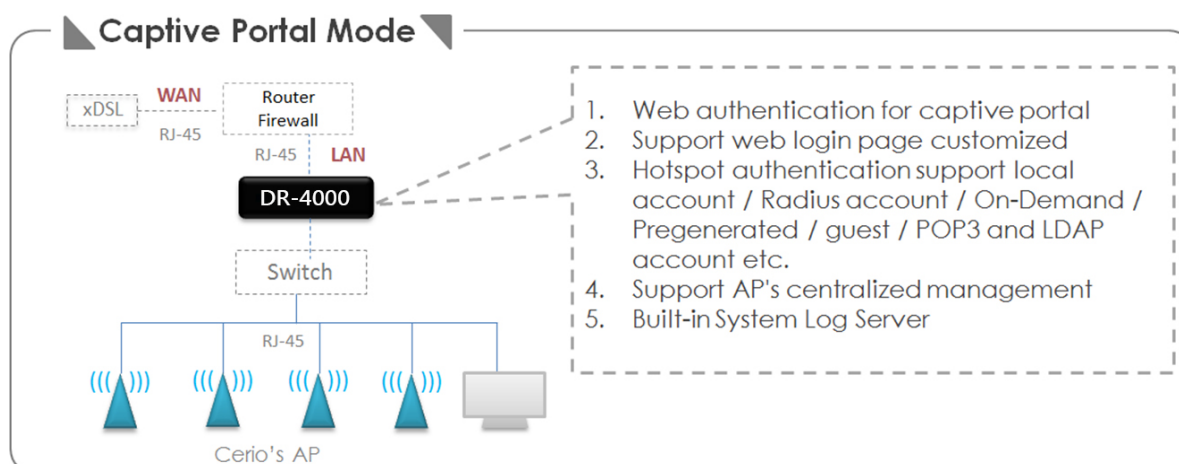

If the environment already has a router or firewall device, administrator demand is only to add the new page hotspot function, this time can be switched to Captive Portal mode and connected in parallel to the router or firewall equipment can be completed (The mode is no Router NAT function in this mode).

(The default IP of this mode is also 192.168.2.1, but it is not designed to be linked to the IP location of Router mode. When switching to this mode, please make sure that the IP network segment of the connected computer is also the same as 192.168.2.X. You have successfully entered this mode. model)


3. System Configuration

CERIO's **DR-4000-CA** is multifunctional authentication Gateway, support multi-WAN outbound load balance and can centralized managed CenOS5.0 AP. The **DR-4000-CA** Built-in hardware independent VPN engine administrator can build a secure tunnel in the network environment and support High Availability can make sure that the network is working normally.


3.1 WAN Setup

Administrator can set one WAN or multi-WAN load balance in the WAN Setup function.

Please click System → WAN Setup

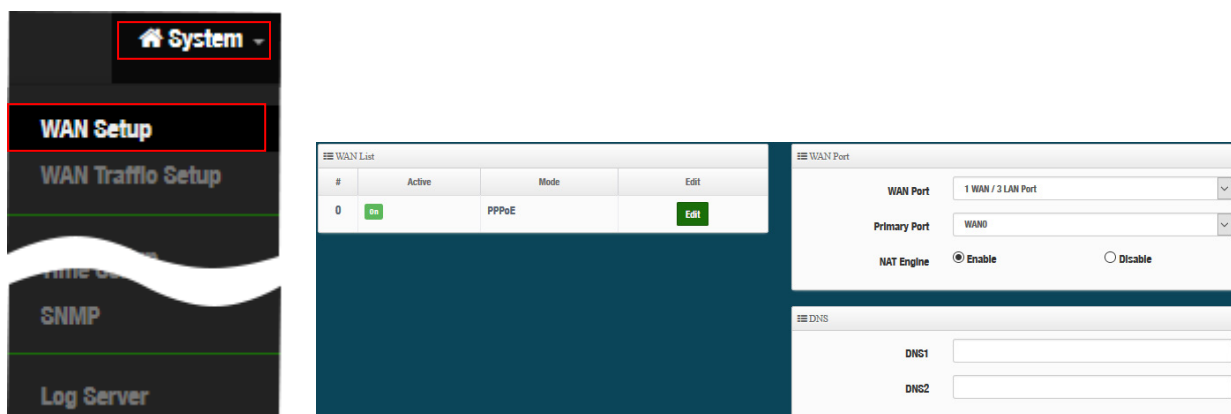


WAN Port Setup

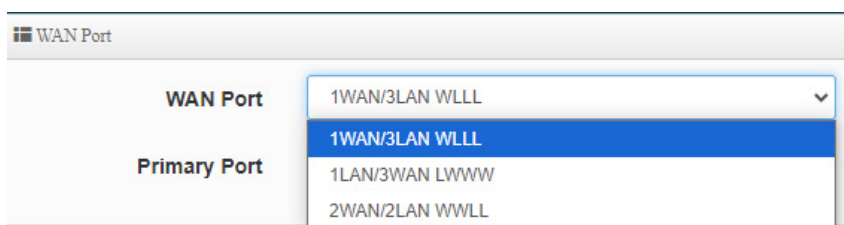

- **WAN Port:** Administrator can select 1WAN/3LAN or 1LAN/3WAN or 2WAN+/2LAN, the default is 1WAN/3LAN Port.


Physical Ethernet Ports Settings Detailed list of different WAN and LAN ports:

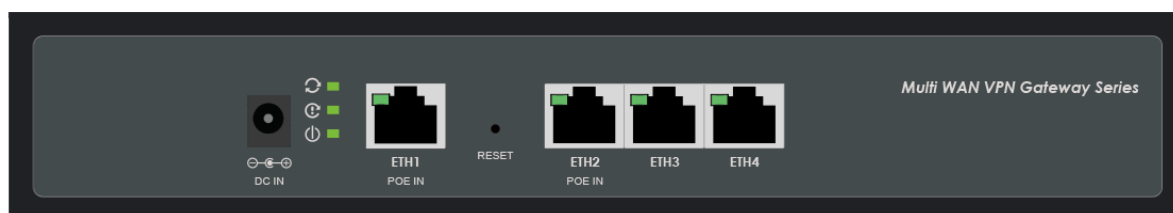

| Ethernet Speed | | 1Gb | 1Gb | 1Gb | 1Gb |
|----------------|------------------------------------|------|------|------|------|
| Mode / Port | | ETH1 | ETH2 | ETH3 | ETH4 |
| 1 | 1WAN(1Gb)/3WAN(1Gb+1Gb+1Gb) / WLLL | WAN | LAN | LAN | LAN |
| 2 | 1LAN(1Gb)/3WAN(1Gb+1Gb+1Gb) / LWWW | LAN | WAN | WAN | WAN |
| 3 | 2WAN(1Gb+1Gb)/2LAN(1Gb) / WWLL | WAN | WAN | LAN | LAN |

- **WAN List:** When selecting Multi-WAN, the WAN Priority setting will be displayed. Please click the Save button and the system will display the list of Multi-WAN.

| WAN List | | | |
|----------|-------------------------------------|------------|-------------------------------------|
| # | Active | Mode | Edit |
| 0 | <input checked="" type="checkbox"/> | Dynamlo IP | <input type="button" value="Edit"/> |
| 1 | <input checked="" type="checkbox"/> | Dynamlo IP | <input type="button" value="Edit"/> |
| 2 | <input checked="" type="checkbox"/> | Dynamlo IP | <input type="button" value="Edit"/> |



When selecting 2WAN up , you can set the load balancing priority setting on the WAN traffic setting function page.

- **WAN Priority** : The system will first determine the priority of 3WAN,The smaller the value, the higher the priority. If setting to 1/1/2, it is WAN0/WAN1 Load Balance, and WAN2 is used as Backup function. If it is setting to 1/1, it is WAN0/WAN1 Load Balance. If it is setting to 1/2, WAN2 is used as Backup function..

WAN Priority

WAN0 Priority

WAN1 Priority

WAN2 Priority

- **Primary Port:** If set 2 WAN or 3WAN function, administrator must select one primary for WAN Port, The WAN Port "primary port" setting,which mainly allows the system to use through the set WAN port, such as "system time" or DNS access, etc. If there is no special application, Please set to the default value "WAN0 ".
- **NAT Engine:** If enable the function then NAT will up performance, but firewall and routing rule of **DR-4000-CA** will auto disable.

WAN List

Administrator can set four connection types for the WAN port: Static IP, Dynamic IP, PPPoE and PPTP, at the same time can also Enable or Disable for NAT or DMZ functions.

Please click Edit button in WAN List.

| WAN List | | | |
|----------|-------------------------------------|------------|-------------------------------------|
| # | Active | Mode | Edit |
| 0 | <input checked="" type="checkbox"/> | PPPoE | <input type="button" value="Edit"/> |
| 1 | <input checked="" type="checkbox"/> | Dynamlo IP | <input type="button" value="Edit"/> |
| 2 | <input checked="" type="checkbox"/> | Dynamlo IP | <input type="button" value="Edit"/> |

➤ **Edit:** Administrator can set WAN function.

The image shows several configuration panels:


- WAN Setup:** WAN Enable Disable
- WAN Settings:** Mode
- PPPoE:** User Name
Password
MTU
Reconnect Mode
- NAT:** NAT Enable Disable
- DMZ Setup:** Mode
- MAC Clone:** Mode

- **WAN Setup:** Administrator can set Enable or Disable for the WAN Port function.
- **WAN Settings:** Administrator can select Static IP, Dynamic IP, PPPoE and PPTP type of the WAN Port.
- **MAC Clone:** The MAC address is a 12-digit HEX code uniquely assigned to hardware as identification. Some ISPs require you to register a MAC address in order to access to Internet. If not, you could use default MAC or clone MAC from a PC.
- **NAT:** Administrator can set Enable or Disable the NAT function. If Disable NAT function administrator must manual to set routing.
- **DMZ:** DMZ is a physical or logical sub-network that separates an internal local area network (LAN) from other untrusted networks, usually the Internet. External-facing servers, resources and services are located in the DMZ so they are accessible from the Internet but the rest of the internal LAN remains unreachable. This provides an additional layer of security to the LAN as it restricts the ability of hackers to directly access internal servers and data via the Internet.

3.2 WAN Traffic Setup

WAN Traffic setup function improves the distribution of workloads across multiple computing resources. WAN Traffic function aims to optimize network resource use maximize throughput or minimize response time and avoid overload of any single WAN port resource.

If administrator set multi-WAN configuration, administrator can assign weights or speed weights to WAN in the "**WAN traffic setup**" function to indicate the percentage of traffic that should be sent to each WAN.

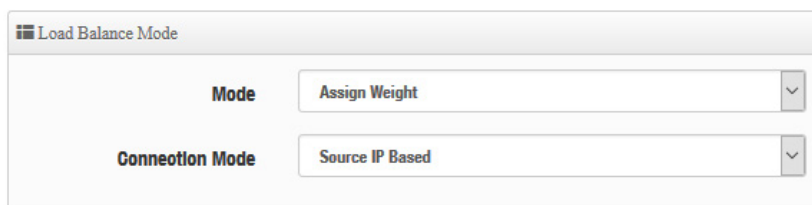

- **Mode:** If set multi-WAN, administrator can select Load Balance by Assign Weight or Line Speed Weight.
 - **Assign Weight:** The WAN Assign Weight function can setup handle more requests and handle fewer requests. Assigning weights to WAN allows the **DR-4000-CA** appliance to determine how much traffic each load balanced server can handle, and therefore more effectively balance load. The Weight set Max=10 unit.



- **Line Speed Weight:** The function requires administrator to definitely specify the real upload and download line speed of each WAN interface, the system will calculates the maximum bandwidth for all WAN interfaces and then the flow distribution.

☰ Line Speed Weight

| | | |
|----------------|--------------------------------------|--------------------------------------|
| WAN0 (U/D)kbps | <input type="text" value="1024000"/> | <input type="text" value="1024000"/> |
| WAN1 (U/D)kbps | <input type="text" value="1024000"/> | <input type="text" value="1024000"/> |
| WAN2 (U/D)kbps | <input type="text" value="1024000"/> | <input type="text" value="1024000"/> |

- **Connection Detect:** Enable connection detection, set the target IP of the specified Ping, and set the interval period of each Ping in "seconds". Set the Failure Count after the number of failures to truly enable WAN load balancing .

☰ Connection Detect

Service Enable Disable

IP Address to Ping

Ping Interval Second

Failure Count

3.3 VLAN Setup


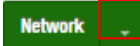
VLAN settings in default “Router mode”

The default Router mode supports 16 groups of virtual network services. By default, each virtual network supports the 802.1Q Tag VLAN function. The administrator only needs to click Enable, and the system will be able to complete the setting of 802.1Q Tag VLAN.

☰ VLAN List





















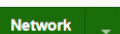






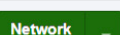







| # | VLAN Mode | Flag | IP Address | Netmask | Action |
|---|-------------------------------------|---------------|-----------------|---------------|---------|
| 0 | <input checked="" type="checkbox"/> | Native | 192.168.2.1 | 255.255.255.0 | Network |
| 1 | <input type="checkbox"/> | VLAN TAG: 101 | 192.168.101.254 | 255.255.255.0 | Network |
| 2 | <input type="checkbox"/> | VLAN TAG: 102 | 192.168.102.254 | 255.255.255.0 | Network |
| 3 | <input type="checkbox"/> | VLAN TAG: 103 | 192.168.103.254 | 255.255.255.0 | Network |
| 4 | <input type="checkbox"/> | VLAN TAG: 104 | 192.168.104.254 | 255.255.255.0 | Network |
| 5 | <input type="checkbox"/> | VLAN TAG: 105 | 192.168.105.254 | 255.255.255.0 | Network |
| 6 | <input type="checkbox"/> | VLAN TAG: 106 | 192.168.106.254 | 255.255.255.0 | Network |
| 7 | <input type="checkbox"/> | VLAN TAG: 107 | 192.168.107.254 | 255.255.255.0 | Network |

- **VLAN Mode** : Display on/off for the VLAN network.
- **Flag** : Display master VLAN and VLAN Tag No. information.
- **IP Address** : Display IP Address for VLAN Network.







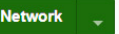














- **NetMask** : Display IP netmask.
- **Action** : click  button o set VLAN network functions , click  Pull-down menu to” Bandwidth Control” and “DHCP Server”.


VLAN settings in “Control mode”

When change to the "Control Mode" of non-routing NAT state , 16 groups of virtual network services are also supported. By default, each virtual network supports the 802.1Q Tag VLAN function. The administrator only needs to click Enable, and the system will The setting of 802.1Q Tag VLAN can be completed.

| # | VLAN Mode | Flag | IP Address | Netmask | Port | Action |
|---|---|---|-----------------|---------------|---|---|
| 0 |  |  | 192.168.2.1 | 255.255.255.0 |     |  |
| 1 |  |  | 192.168.101.254 | 255.255.255.0 |     |  |
| 2 |  |  | 192.168.102.254 | 255.255.255.0 |     |  |
| 3 |  |  | 192.168.103.254 | 255.255.255.0 |     |  |
| 4 |  |  | 192.168.104.254 | 255.255.255.0 |     |  |


- **VLAN Mode** : Display on/off for the VLAN network.
- **Flag** : Display master VLAN and VLAN Tag No. information.
- **IP Address** : Display IP Address for VLAN Network.
- **NetMask** : Display IP netmask.
- **Port** : Display the tags to be Flag by the four-port physical ethernet port. As shown in the following example, turn off the 3 and 4 operations under the second VLAN means that the 3 and 4 ports of the physical ethernet connection port do not have tag 101 but other ports have it tag 101.
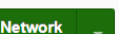
| # | VLAN Mode | Flag | IP Address | Netmask | Port | Action |
|---|---|---|-----------------|---------------|---|---|
| 0 |  |  | 192.168.2.1 | 255.255.255.0 |     |  |
| 1 |  |  | 192.168.101.254 | 255.255.255.0 |     |  |
| 2 |  |  | 192.168.102.254 | 255.255.255.0 |     |  |

- **Action** : click  button o set VLAN network functions , click  Pull-down menu to DHCP Server.

3.3.1 Network Button

Administrator can click  button to set VLAN network functions.

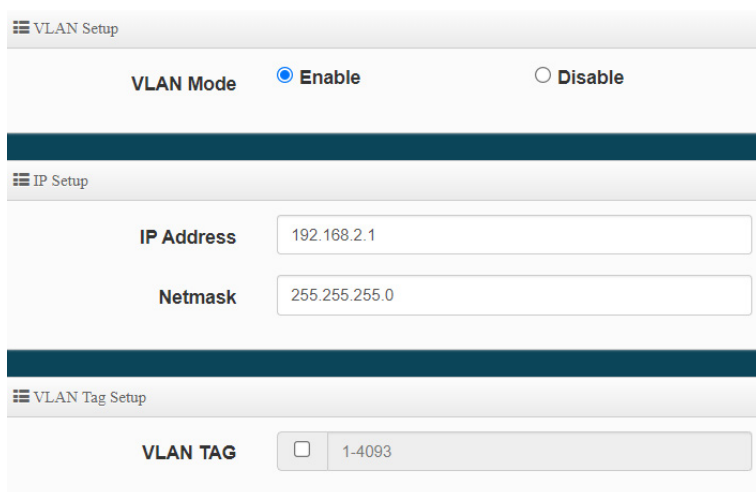

The screenshot shows the 'VLAN Setup' configuration page. It is divided into three sections: 'VLAN Setup', 'IP Setup', and 'VLAN Tag Setup'.
1. **VLAN Setup**: 'VLAN Mode' is set to 'Enable' (radio button selected).
2. **IP Setup**: 'IP Address' is '192.168.2.1' and 'Netmask' is '255.255.255.0'.
3. **VLAN Tag Setup**: 'VLAN TAG' is '1-4093' with an unchecked checkbox.

- ✓ **VLAN Mode** : Administrator can select Enable or disable for the VLAN Network.
- ✓ **IP Mode** : Administrator can select enable or disable function for VLAN IP.
- ✓ **IP Address/ NetMask** : Administrator can set IP address and netmask for the VLAN.



VLAN services and IP addresses must have at least one set of VLAN services. **Do not turn off the default set of virtual network service (VLAN) functions (equal to no LAN state), which will cause the need to return to the default values. Need to re-setting again for the device.**

The following functions can be set in “Control Mode”

- ✓ **VLAN Tag** : Administrator can set this VLAN to 802. 1Q Tag VLAN




The screenshot shows the 'Port' configuration page. It lists four ports, each with 'Enable' and 'Disable' radio buttons. All 'Enable' radio buttons are selected.

| Port | Enable | Disable |
|--------|----------------------------------|-----------------------|
| Port 1 | <input checked="" type="radio"/> | <input type="radio"/> |
| Port 2 | <input checked="" type="radio"/> | <input type="radio"/> |
| Port 3 | <input checked="" type="radio"/> | <input type="radio"/> |
| Port 4 | <input checked="" type="radio"/> | <input type="radio"/> |

- ✓ **Port** : Enable or disable this physical port to this tag VLAN

3.3.2 Pull-down menu @ Bandwidth Control

Administrators can set bandwidth limit the max/min bandwidth of the Wi-Fi users, Bandwidth control can set IP/MASK , IP Range, Port(Service), SIP, RTP/RTSP and WEB.

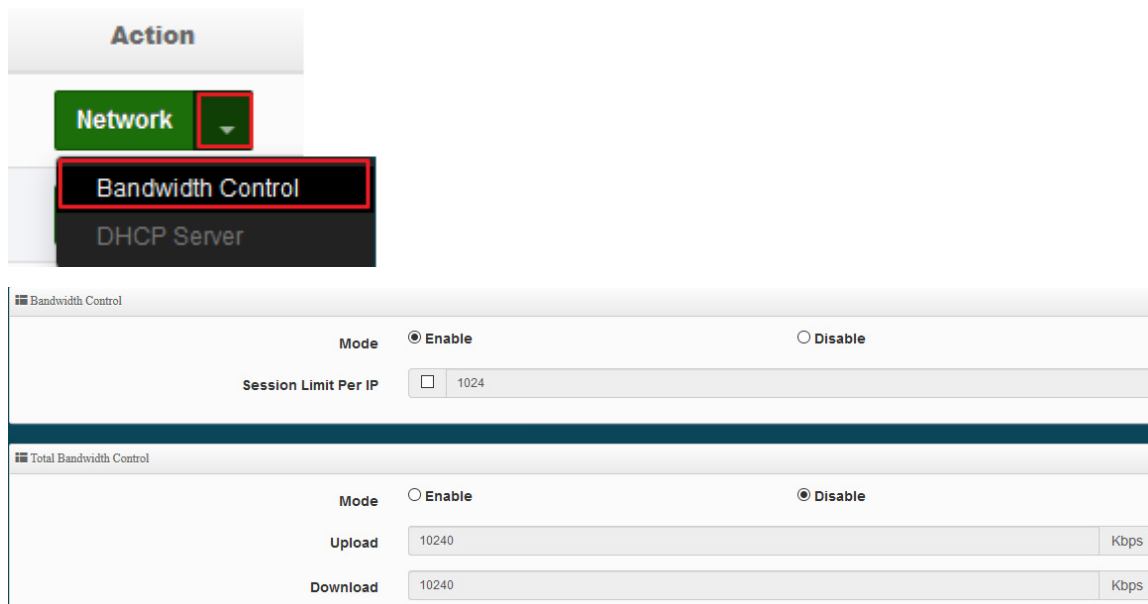

- **Mode : IP:** Administrators can choose to enable or disable bandwidth control function.
- **Session Limit Per IP:** Session limit by all IP address, The default value is to limit the use of each user IP to 1024 Sessions
- **Total Bandwidth Control:** UP/Download bandwidth limit by VLAN
- **OoS Rule List:** Administrator can set IP/MASK , IP Range, Port(Service), SIP, RTP/RTSP and WEB to management bandwidth, Max can set 10 rule.

| # | Active | Rule Mode | Value1 | Value2 | Upload(Kbps) | Download(Kbps) | Comment |
|---|-------------------------------------|-----------|--------|--------|--------------|----------------|---------|
| 1 | <input checked="" type="checkbox"/> | ANY | | | 1024 | 1024 | |
| 2 | <input type="checkbox"/> | ANY | | | 1024 | 1024 | |
| 3 | <input type="checkbox"/> | IP/Mask | | | 1024 | 1024 | |
| 4 | <input type="checkbox"/> | IP Range | | | 1024 | 1024 | |
| 5 | <input type="checkbox"/> | Port | | | 1024 | 1024 | |
| | | SIP | | | 1024 | 1024 | |
| | | RTSP | | | 1024 | 1024 | |
| | | RTP | | | 1024 | 1024 | |
| | | WEB | | | 1024 | 1024 | |

- **Any:** Bandwidth control by any protocol.
- **IP/MASK:** Bandwidth control by a subnet.
- **IP Range:** Bandwidth control by IP range.
- **Port:** Bandwidth control by port (service), ex. FTP port (20,21)
- **SIP:** Bandwidth control by Session Initiation Protocol.
- **RTSP/RTP:** Bandwidth control by Streaming.
- **WEB:** Bandwidth control by web protocol.

3.3.3 Pull-down menu @ DHCP Server

Administrator can set DHCP function. Please click **Network** pull-down button to set DHCP Server.

- ✓ **Mode:** Administrator can select enable / disable the function
- ✓ **DHCP Relay :** Administrator can select enable / disable the function

- **Server Interface :** For this function, you can choose to have DHCP Relay follow the interface, you can choose the enabled WAN0~2 interface, or choose the DHCP settings of other VLAN interfaces VLAN1~VLAN15.
 - ✓ **Start IP:** Set Start IP for DHCP Service.
 - ✓ **End IP:** Set End IP for DHCP Service.
 - ✓ **Netmask:** Set IP Netmask, the default is 255.255.255.0
 - ✓ **Gateway:** Set Gateway IP for DHCP Service.
 - ✓ **DNS (1-2) IP:** Set DNS IP for DHCP Service.
 - ✓ **WINS IP:** Enter IP address of the Windows Internet Name Service (WINS) server; this is optional.
 - ✓ **Domain:** Enter the domain name for this network.
 - ✓ **Lease Time:** The IP addresses given out by the DHCP server will only be valid for the duration specified by the lease time. Increasing the time ensure client operation without interruptions, but could introduce potential conflicts. Lowering the lease time will avoid potential address conflicts, but might cause more interruptions to the client while it will acquire new IP addresses from the DHCP server. Default is **86400** seconds

DHCP Client List

| # | IP Address | MAC Address | Hostname | Expired | Action |
|---|--------------|-------------------|-----------------|----------|--------|
| 1 | 192.168.2.10 | 08:00:20:08:00:08 | 192.168.2.10-PC | 20:0:43 | Fixed |
| 2 | 192.168.2.12 | 08:00:20:08:00:08 | | 18:48:16 | Fixed |

Static Lease IP Setup

Comment

IP Address

MAC Address Add

Static Lease IP List


| # | Comment | IP Address | MAC Address | Action |
|---|---------|------------|-------------|--------|
| - | - | - | - | - |

- **DHCP Client List:** Administrator can view IP address used status of client users on each DHCP Server.
- **Static Lease IP Setup:** Administrator can set be delivered fixed IP address to the users. **(This MAC Address binding IP address function can bind up to 100 sets of settings).**

3.4 Authentication(Hotspot Setup)

The function is for hotspot Authentication. It supports authentication for local users / RADIUS Server / OAuth2.0 and Guest. RADIUS Server authentication support PoP3 / LDAP(AD) and Package.

Please click on **System -> Authentication**

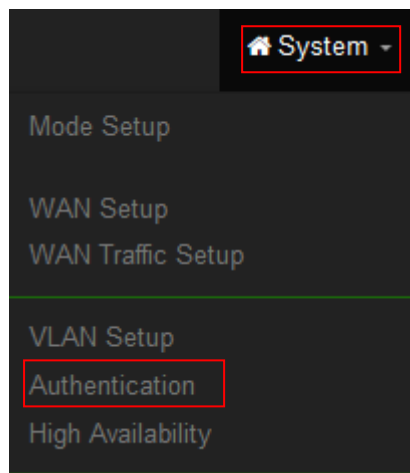

| VLAN List | | | |
|-----------|-----------|----------------|----------------|
| # | VLAN Mode | Authentication | Action |
| 0 | On | Off | Authentication |
| 1 | Off | Off | Authentication |
| 2 | Off | Off | Authentication |
| 3 | Off | Off | Authentication |
| 4 | Off | Off | Authentication |
| 5 | Off | Off | Authentication |
| 6 | Off | Off | Authentication |
| 7 | Off | Off | Authentication |

- # : Display 8 VLANs list of Authentication.
- **VLAN Mode** : Displays VLAN on/off status.
- **Authentication** : Displays VLAN# whether enable or disable web authentication.
- **Action** : The function has 2 buttons (Authentication and Dropdown)

Authentication Button:

Authentication : By clicking the Authentication button, administrator can enable or disable this function.


The screenshot displays a web management interface with three main sections:

- Authentication:** Features a toggle switch set to "Enable" (radio button selected).
- Authentication Setup:** Includes fields for "Multiple Login" (checkbox), "Login Timeout" (10 Minutes), "Redirect URL" (http://www.google.com), and "Login URL" (domain0.login). It also has "Authentication Log" and "Session Log" toggles, both set to "Disable".
- Local User Setup:** Features a toggle switch set to "Disable" (radio button selected) and a "Display Name" field containing "Local User".
- Radius Setup:** Features a toggle switch set to "Disable" (radio button selected) and a "Display Name" field containing "Radius User".

- **Authentication** : Administrator can enable or disable authentication function.
- **Multiple Login** : Administrator can set one account to multiple users simultaneously login and the users can set limit.(0 = not limited)
- **Login Timeout** : After account login for some time no traffic, system will automatic timeout for account. Administrator can enter a time(Minutes).
- **Redirect URL** : After the success of the login, system will redirect to URL. Administrator can enter web site URL.
- **Login URL** : Administrator can set URL for login page. Set the URL that automatically triggers the login page. When you start the web page and want to log in, directly enter the default login page URL <http://domain0.login>, and you can quickly jump to the complete login authentication login page <http://domain0.login/login/index.cgi> , if you want to use <https://domain0.login>, please be sure to confirm whether HTTPS login is enabled and open for use in the "Management Interface Login Settings". Please refer to 3.13 System Management → "Login Methods" Settings, or as shown below.


Login Methods

| | | | |
|--------|-------------------------------------|-----|------|
| HTTP | <input checked="" type="checkbox"/> | 80 | Port |
| HTTPS | <input checked="" type="checkbox"/> | 443 | Port |
| Telnet | <input checked="" type="checkbox"/> | 23 | Port |
| SSH | <input type="checkbox"/> | 22 | Port |

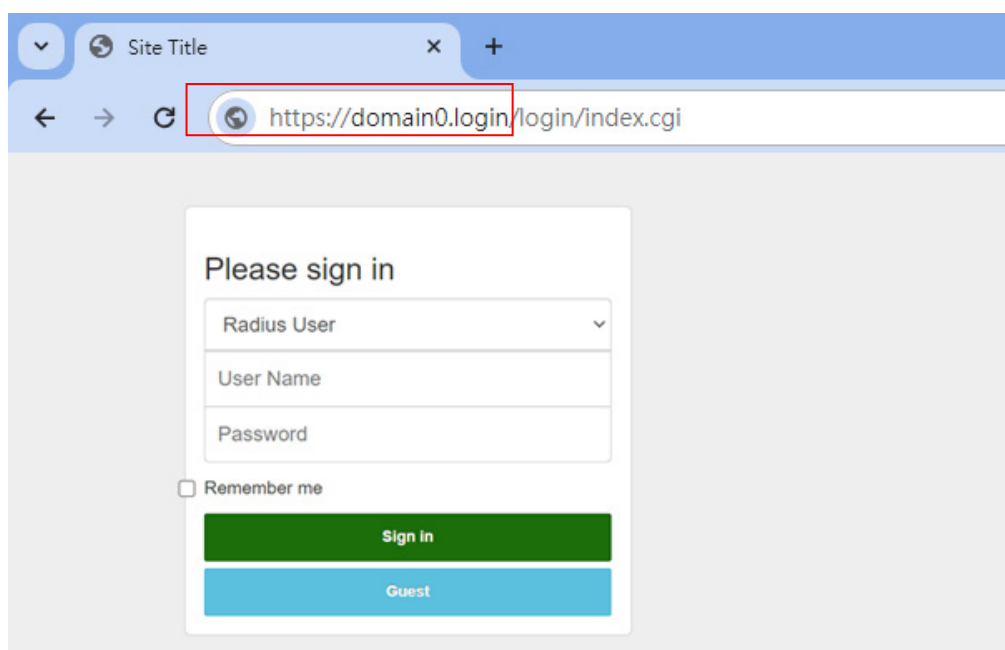


- **Authentication Log:** Account authentication log will copy to the device 's syslog server.
- **Session Log :** If network have Syslog server. Administrator can to system→management setting IP address for syslog server and enable the function. Account session log will copy to the device 's syslog server.
- **Local User :** Administrator can enable authentication for local user. Create user account can to reference "3.3.2 Local User".
- **RADIUS :** Authentication support remote RADIUS Server. Administrator can enter security information for remote RADIUS Server.

Authentication Dropdown Button

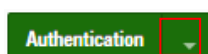


: By Clicking the Dropdown button, Administrators can set authentication functions.

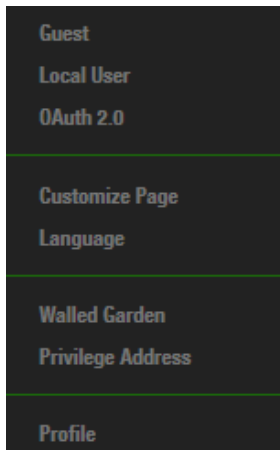

3.4.1 Guest


Administrator can enable or disable guest authentication. If enabled, the administrator can set guest Count Limit / login time and type and flow control.

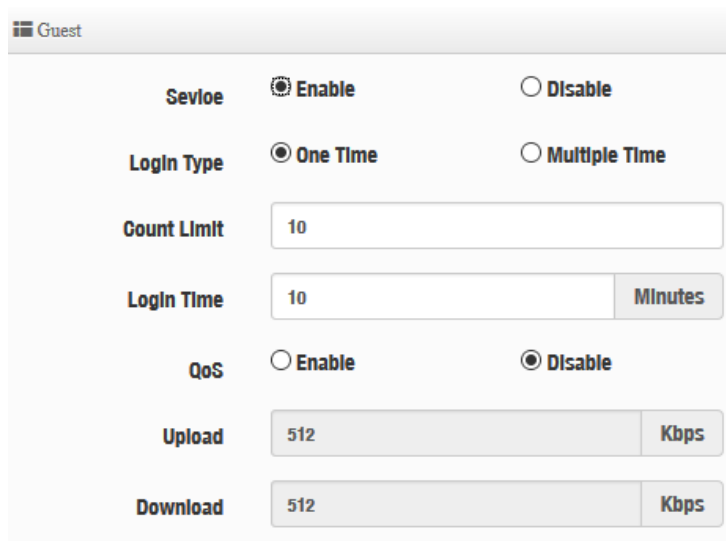

- **Service** : Administrator can select enable or disable this function.
- **Login Type** :
 - **One Time**: Login to start counting until the end of time.
 - **Multiple Times**: logout time will stop counting until the next re-login to time start counting.
- **Count Limit**: Administrator can set guest limit.
- **Login Time**: Within a certain timeframe with no traffic, the system will auto logout. (The default is 10 minutes, you can fill in 0-720 minutes and 0 is unlimited).
- **QoS**: Administrator can restrict the traffic of guest. Traffic management can set users upload and download traffic.

3.4.2 Local User

Administrator can create local user account for web login.

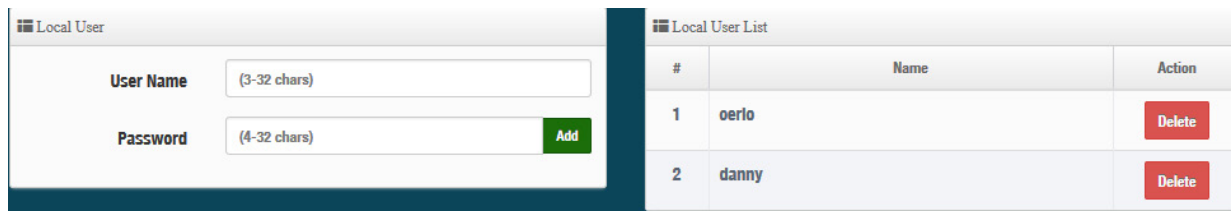


| # | Name | Action |
|---|-------|--------|
| 1 | oerio | Delete |
| 2 | danny | Delete |

- **User Name** : Administrator can create users account.
- **Password** : Set account password.

3.4.3 OAuth2.0

The OAuth2.0 function supports Facebook and Google by default. Users can add additional OAuth2.0 servers through UI settings.

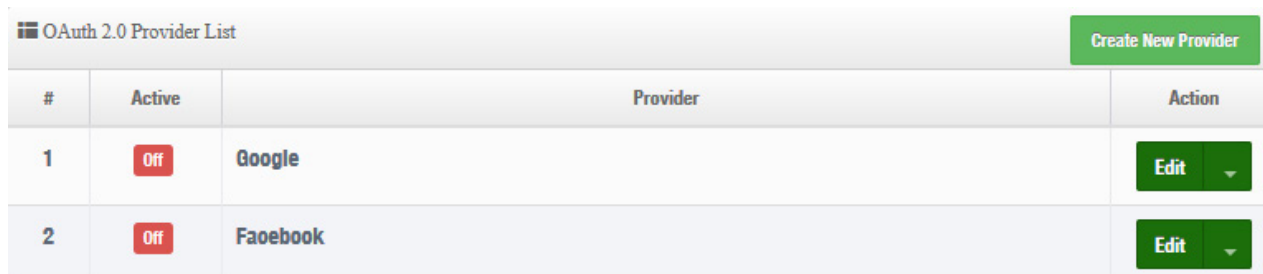

| # | Active | Provider | Action |
|---|--------|----------|--------|
| 1 | Off | Google | Edit |
| 2 | Off | Facebook | Edit |


- **#** : Display items.
- **Active** : Display on/off status for the authentication.
- **Provider** : Display authentication server. The system default use authentication server for Google and Facebook

➔ # Sample for Google OAuth2.0 setup

Please complete the application on the Google website to receive an account ID and password, follow the steps below.

Step.1 Please go to the **Google Developers Console page** and **create a project**

(Reference <https://developers.google.com/identity/protocols/OAuth2>)

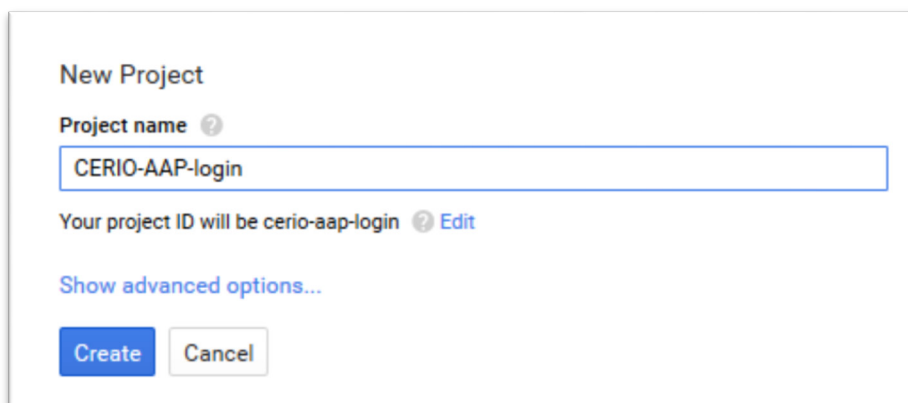

New Project


Project name ?
CERIO-AAP-login

Your project ID will be cerio-aap-login ? [Edit](#)

[Show advanced options...](#)

[Create](#) [Cancel](#)

Step.2 Click Credentials to create OAuth client ID in the API manager page.

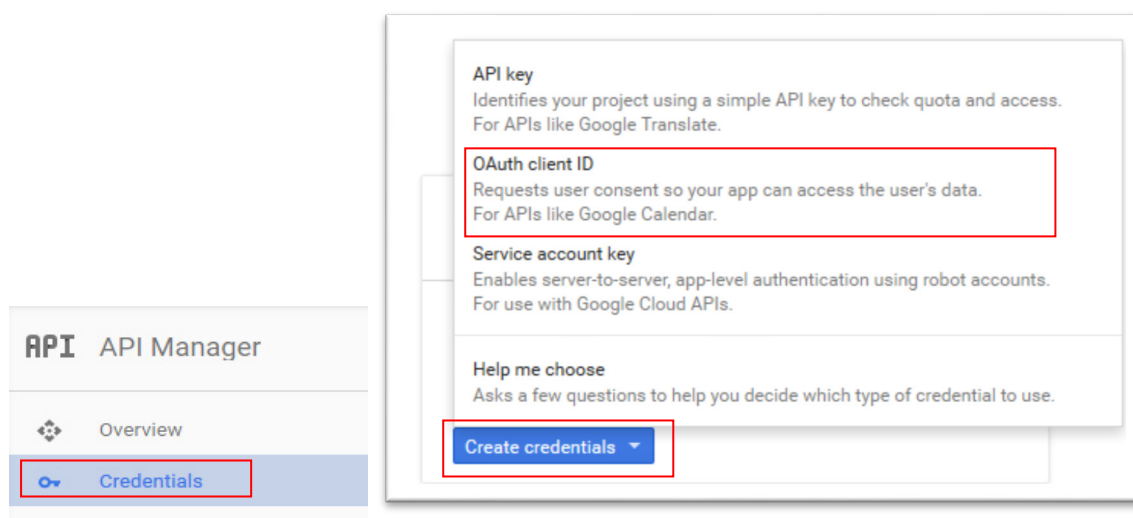

API API Manager

Overview

Credentials

API key
Identifies your project using a simple API key to check quota and access. For APIs like Google Translate.


OAuth client ID
Requests user consent so your app can access the user's data. For APIs like Google Calendar.

Service account key
Enables server-to-server, app-level authentication using robot accounts. For use with Google Cloud APIs.

Help me choose
Asks a few questions to help you decide which type of credential to use.

[Create credentials](#)

Step.3 Select web application in the “Application Type” section and set “Restrictions” URL.

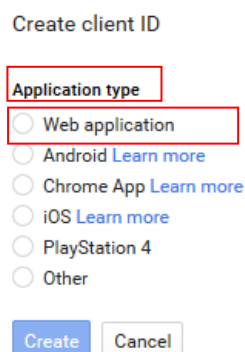

Create client ID

Application type

Web application

Android [Learn more](#)

Chrome App [Learn more](#)

iOS [Learn more](#)

PlayStation 4

Other

[Create](#) [Cancel](#)

Name

Web client 1

Restrictions

Enter JavaScript origins, redirect URIs, or both

Authorized JavaScript origins

For use with requests from a browser. This is the origin URI of the client application. It can't contain a wildcard (http://*.example.com) or a path (http://example.com/subdir). If you're using a nonstandard port, you must include it in the origin URI.

http://www.example.com

Authorized redirect URIs


For use with requests from a web server. This is the path in your application that users are redirected to after they have authenticated with Google. The path will be appended with the authorization code for access. Must have a protocol. Cannot contain URL fragments or relative paths. Cannot be a public IP address.

http://www.example.com/oauth2callback

Step.4 Set Authorized JavaScript origins and Authorized redirect URLs (**important**)

Administrator must set login URL in the device function. After complete set of login URL go to the “**Restrictions**” function in web page. Follow the steps below to set login URLs

- Setup login URL in the device. Please Click **system**➔**Authentication** and enable the function.
- The “Authentication Setup” page to set Login URL

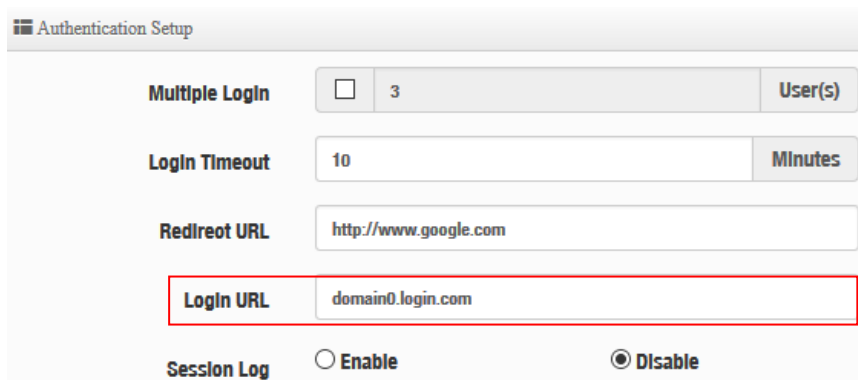

After complete set of login URL go to the “**Restrictions**” function in web page. Copy and paste the login URL from the system display into the “Restriction” page on the Google Developer website.

- Google Authorized JavaScript origins URL is **http://domain0.login.com** (same as Login URL)
- Google Authorized redirect URLs is **http://domain0.login.com/login/callback.cgi**

Authorized JavaScript origins

For use with requests from a browser. This is the origin URI of the client application. It can't contain a wildcard (http://*.example.com) or a path (http://example.com/subdir). If you're using a nonstandard port, you must include it in the origin URI.

Authorized redirect URIs

For use with requests from a web server. This is the path in your application that users are redirected to after they have authenticated with Google. The path will be appended with the authorization code for access. Must have a protocol. Cannot contain URL fragments or relative paths. Cannot be a public IP address.

Step.5 After completing the “Restrictions” setup, click the create button. An OAuth Client page will pop-up with your “client ID” and “client secret”. Administrators must copy and paste their client ID and secret into the OAuth 2.0 Setup page in our software UI.

OAuth client

Here is your client ID

Here is your client secret

OK

OAuth 2.0 Setup Advanced

Client ID


Client Secret

Save and reboot the AP system, complete the setup.


➔ # Sample for Facebook OAuth2.0 setup

Please complete the application on the Facebook website to receive an account ID and password, follow the steps below.

Step.1 Please to Facebook developer’s page and add a New App

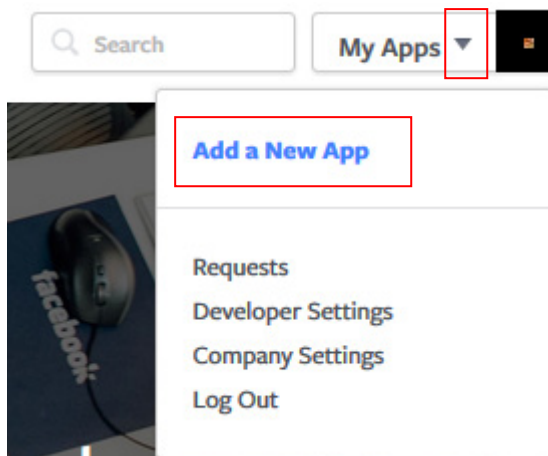

Step.2 Select WWW function

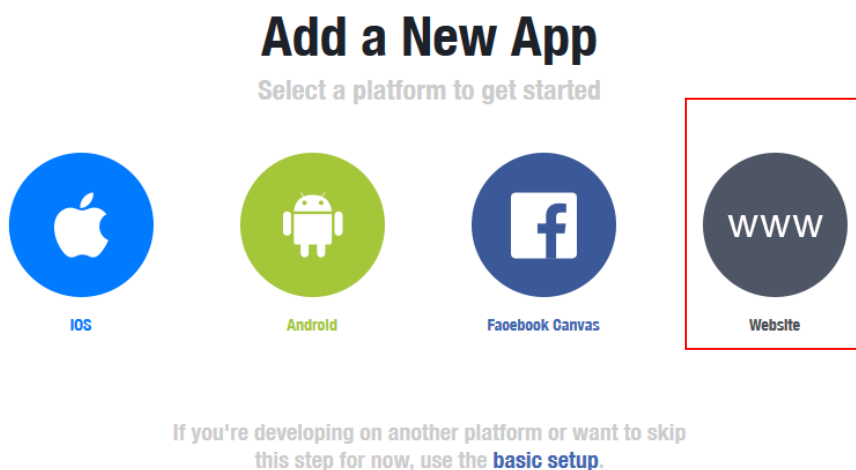

Step.3 Administrator must set www for your information.

Create a New App ID
Get started integrating Facebook into your app or website

Display Name


Namespace

Contact Email


Category

By proceeding, you agree to the [Facebook Platform Policies](#)

Step.4 Please click "Setting" and add Platform

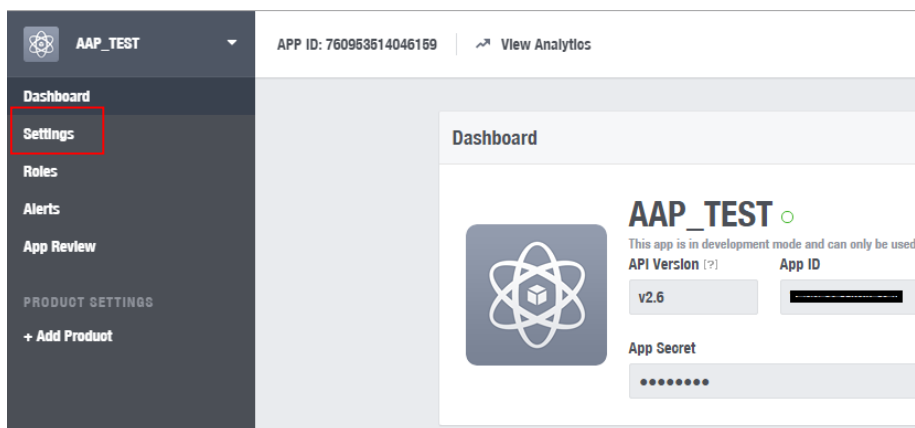

Step.5 Select Platform for “Website”

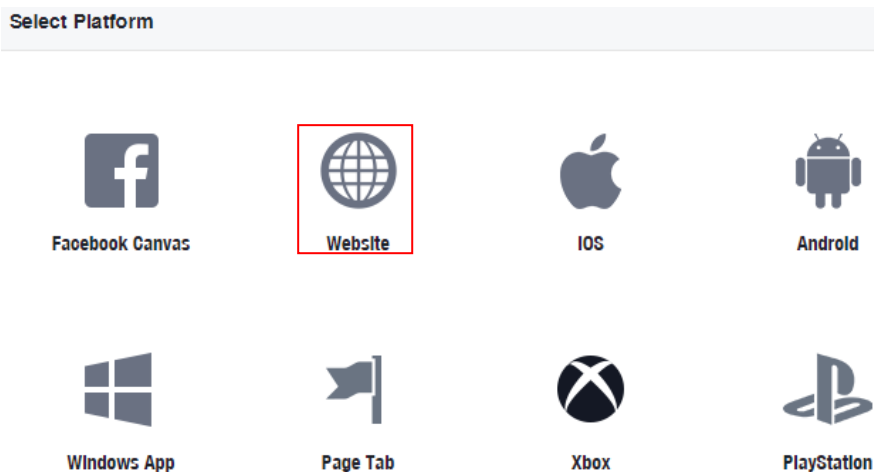


Step.6 Enter URL is <http://domain0.login.com/login/callback.cgi>



Administrator must set login URL in the device function. After complete set of login URL go to the “Facebook Site URL” function in web page. Follow the steps below to set login URLs

- Setup login URL in the device. Please Click **system** → **Authentication** and enable the function.
- The “**Authentication Setup**” page to set Login URL

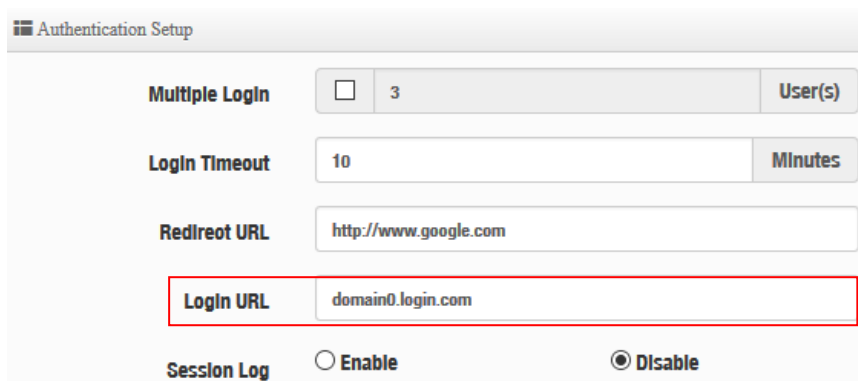

Authentication Setup

Multiple Login 3 User(s)

Login Timeout 10 Minutes


Redireot URL http://www.google.com

Login URL domain0.login.com

Session Log Enable Disable

After complete set of login URL go to the “Facebook Site URL” function in web page. Copy and paste the login URL from the system display into the “Site URL” page on the Facebook website.

Step.7 Click Advanced function to enable the “Native or desktop app?” and “Is App Secret embedded in the client?”

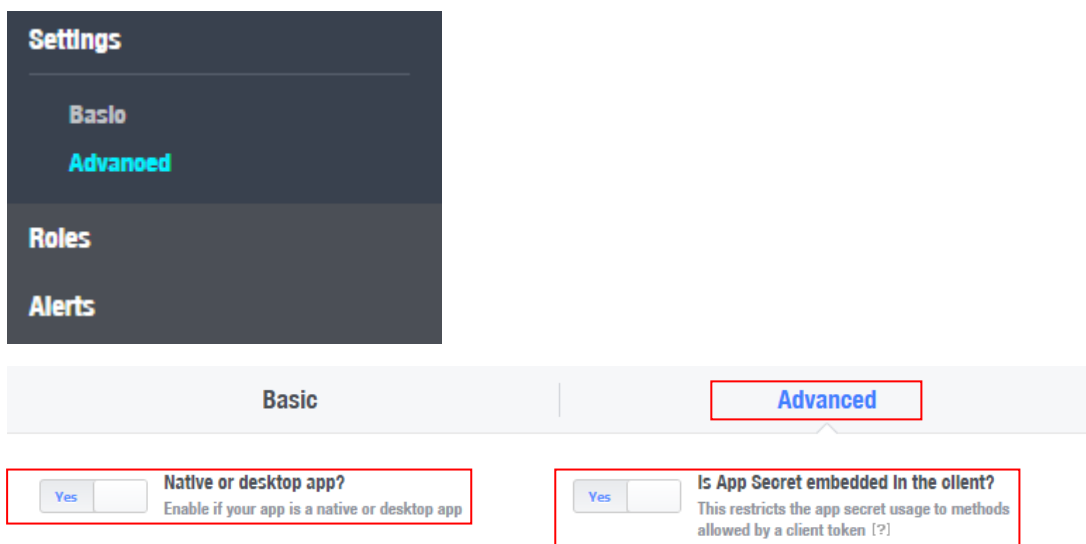

Settings


- Basic
- Advanced
- Roles
- Alerts

Basic | Advanced

Yes Native or desktop app?
Enable if your app is a native or desktop app

Yes Is App Secret embedded In the client?
This restricts the app secret usage to methods allowed by a client token [?]

Step.8 After completing the “Facebook Site URL” setup. Administrators must copy and paste their App ID and App secret into the OAuth 2.0 Setup page in our software UI.

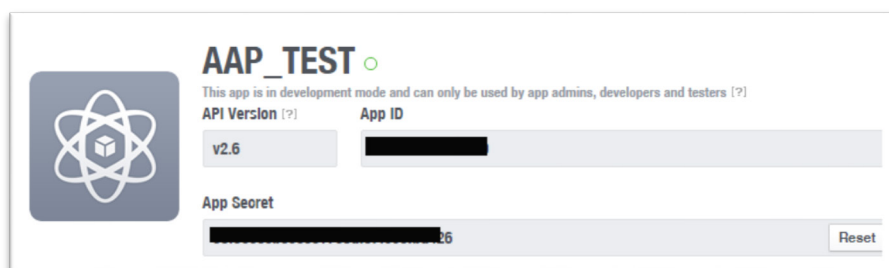

AAP_TEST

This app is in development mode and can only be used by app admins, developers and testers [?]

API Version [?] v2.6

App ID [REDACTED]

App Secret [REDACTED]6

Reset




The screenshot shows the 'OAuth 2.0 Setup' interface. It has a title bar with a hamburger menu icon, the text 'OAuth 2.0 Setup', and a green 'Advanced' button. Below the title bar, there are two input fields: 'Client ID' with a value ending in '9' and 'Client Secret' with a value ending in '26'.



Client ID and Client Secret setup by third parties such as Facebook and Google are subject to change. The instructions above follow the 2016 setup procedure. Any future changes to the Facebook/Google process may lead to our instructions becoming invalid.

3.4.4 POP3 Server

The purpose of this integrated function is to allow clients to link a POP3 server for receiving emails from a remote server.

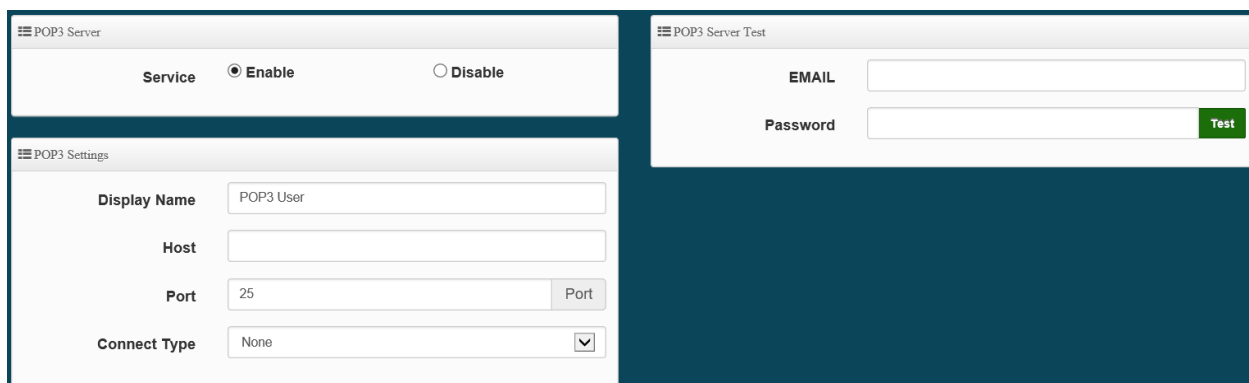


The screenshot shows two side-by-side forms. The left form is titled 'POP3 Server' and has a 'Service' section with 'Enable' selected and 'Disable' unselected. Below it is the 'POP3 Settings' section with fields for 'Display Name' (POP3 User), 'Host', 'Port' (25), and 'Connect Type' (None). The right form is titled 'POP3 Server Test' and has fields for 'EMAIL' and 'Password', with a green 'Test' button.

- **POP3 Server** : Click “Enable” or “Disable” to activate this function
- **Display Name** : Set the “Display Name” based on the appropriate POP3 user or client
- **Host** : Define the desired Host server name
- **Port** : Input the proper port number for the corresponding server
- **Connect Type** : Select the Connect type with options of “STARTTLS”, “SSL/TTL”, or “None”
- **POP3 Server Test** : Use this tool to test if the POP3 server is operating correctly with your selected email


3.4.5 Customize Page

This function is to customize the user Login Page. This supports Multiple Language and allows comprehensive customization through HTML editing.

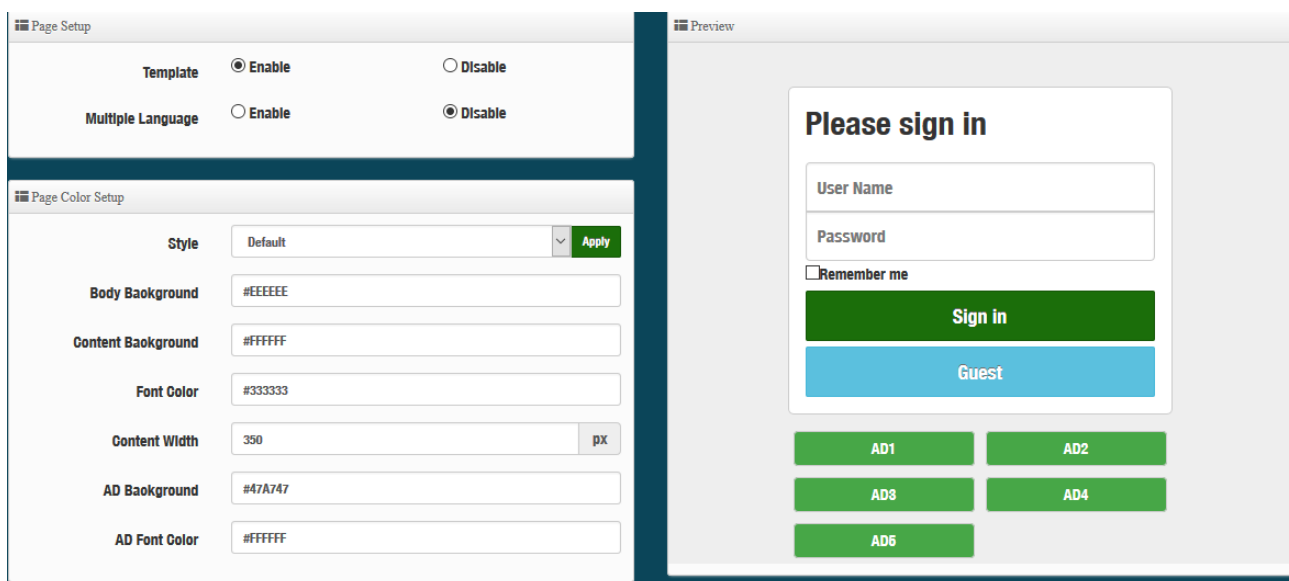


Page Setup

- **Template** : Administrator can select Enable or disable.
 - Select enable to active default Login Page

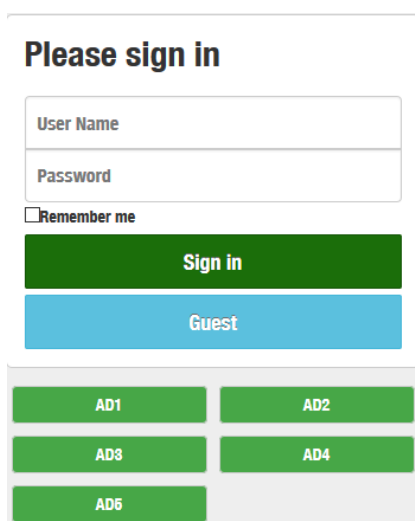

- Select disable to active HTML Source code window for customization

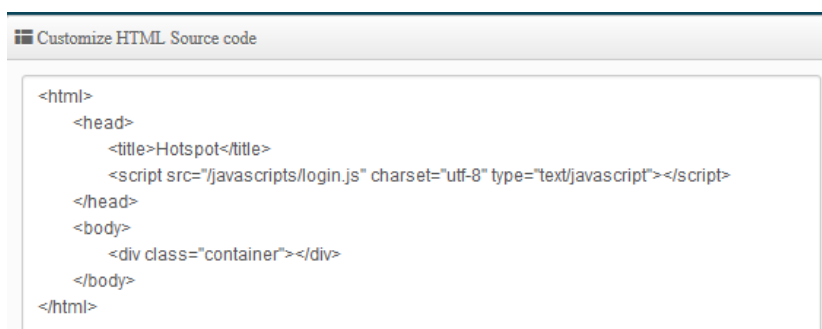

Sample: See sample login page below that is customized by html coding (*sample login page html code templates are available on Cerio website*)




Captive Portal Authentication Login Page for CenOS 5.0

The following function uses the enabled Template

- **Multiple Language** : Administrator can select enable or disable multiple language for login page. Administrator must to Language function create new language.
- **Page Color Setup** : Administrator can change the login page color.

3.4.6 Language

Administrator can create other language for login page.

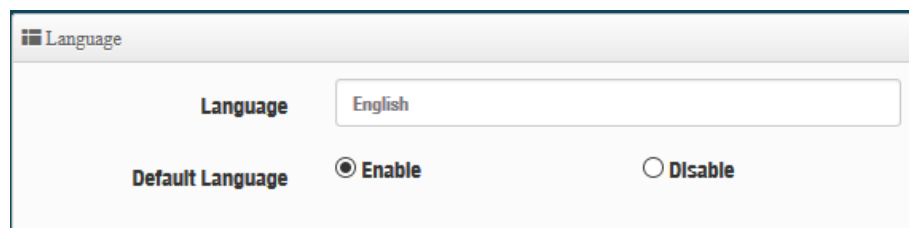

3.4.7 Walled Garden

This function provides certain free services or advertisement web pages for users to access the websites listed before login and authentication. User without the network access right can still have a chance to experience the actual network service free of charge in Walled Garden URL list.

- **Display Name:** Set name of Website.
- **IP Address/Domain:** Set IP or Domain of the Open the website.
- **Full URL:** Set full website name.


3.4.8 Privilege Address

This function provides local device can access Internet without authentication. If there are some workstations belonging NGS Access Point that need to access to network without authentication, enter the IP or MAC address of these workstations in this list.

- **Device Name:** Enter Device or Users Name.
- **IP Address:** Enter used IP Address of Device or Users PC.
- **MAC Address:** Enter MAC Address of Device or Users PC.

3.4.9 Profile

Administrator can backup current authentication configuration and login page for HTML Source code. But also can recover.

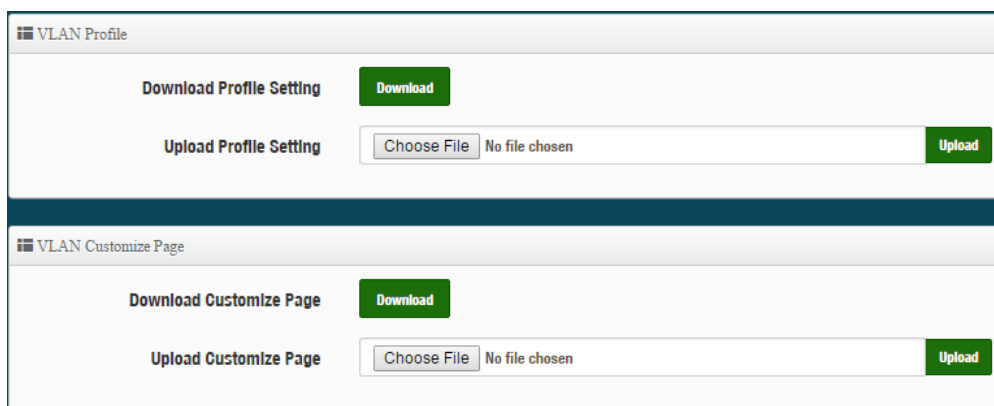


Click **“Save”** button to save your changes. Then click **Reboot** button to activate your changes.

3.5 High Availability

When Gateway systems downtime working, the all network will can't normal work. If administrator set the high availability feature will be able to reduce the accidental interruption of the network and prevent against data loss.

CERIO **DR-4000-CA** support system backup of the high availability function can mirror backup to many **DR-4000-CA**.

Please click **“System”** → **“High Availability”** to set the function.

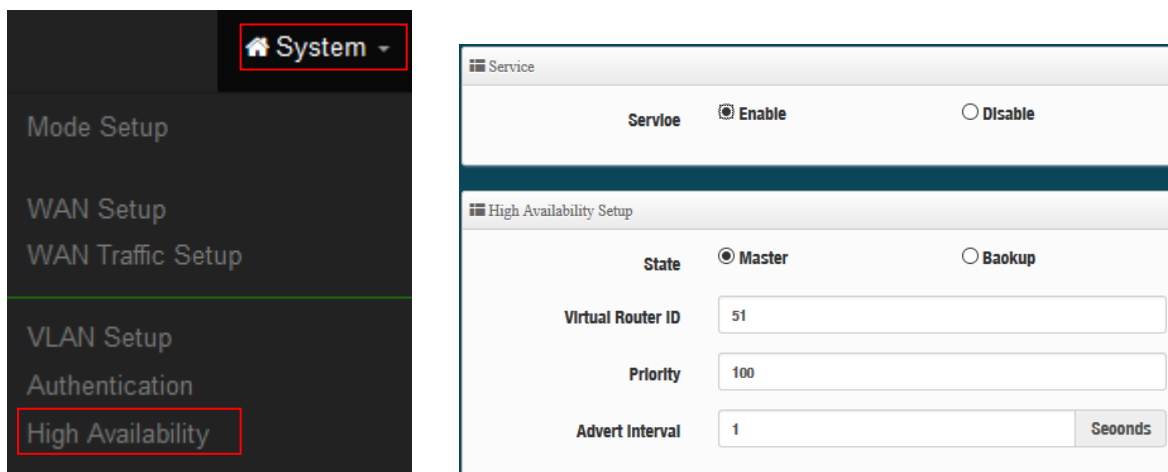

➤ **Service:** Administrator can select Enable or Disable the HA function.

High Availability Setup

- **State:** Administrator can set HA type of the Master or Backup.
- **Virtual Router ID:** Administrator must set same virtual router ID in all the high availability devices
- **Priority:** Administrator can set the priority level.
- **Advert Interval:** After how many sec to the recovery.

Virtual IP Setup: Administrator can set HA function in different VLAN.

| VLAN | Service | Virtual IP Address | Edit |
|------|--------------------------|--------------------|-------------------------------------|
| 0 | <input type="checkbox"/> | | <input type="button" value="Edit"/> |
| 1 | <input type="checkbox"/> | | <input type="button" value="Edit"/> |
| 2 | <input type="checkbox"/> | | <input type="button" value="Edit"/> |
| 3 | <input type="checkbox"/> | | <input type="button" value="Edit"/> |
| 4 | <input type="checkbox"/> | | <input type="button" value="Edit"/> |
| 6 | <input type="checkbox"/> | | <input type="button" value="Edit"/> |
| 6 | <input type="checkbox"/> | | <input type="button" value="Edit"/> |
| 7 | <input type="checkbox"/> | | <input type="button" value="Edit"/> |

Service Enable Disable


Virtual IP Settings

Virtual IP

Authentication Type PASS AH

Password

- **Virtual IP:** Administrator must set a Virtual IP address for HA device. (The following concepts)


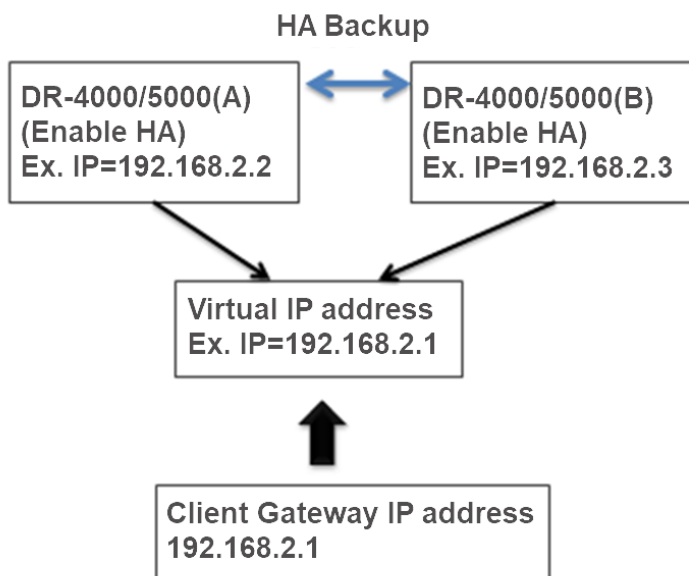


- **Authentication Type:** Administrator can select PASS or AH type for HA security.
- **Password:** Administrator can set password for the HA security.

3.6 VPN Server Setup

This VPN function support three protocol are VPN Server、PPTP/L2TP and IPsec, the VPN tunnel of these three types only select one VPN protocol to used it.

Please click “System”→”VPN Server Setup” create VPN function.

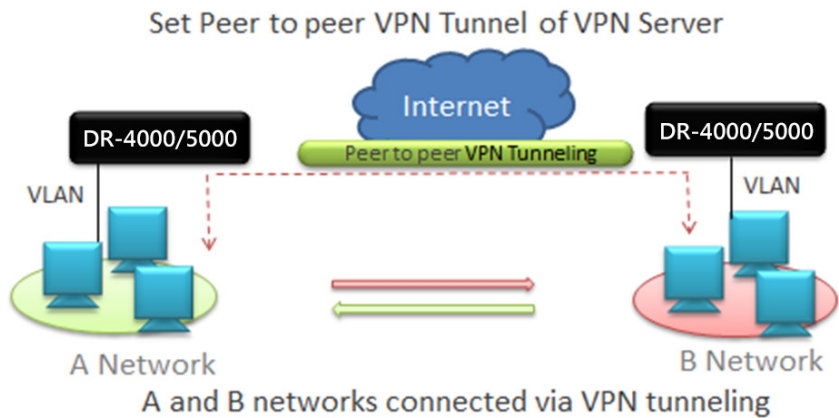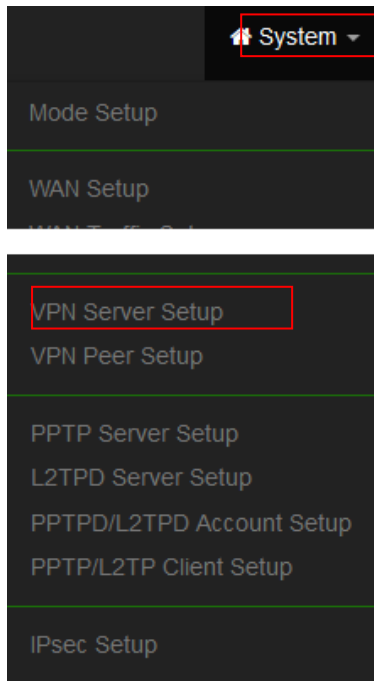

VPN Service

Mode Enable Disable

VPN Service

➤ **Mode:** Administrator can select Enable or Disable the VPA function.

VPN Server

Mode Enable Disable

VPN Settings

VPN Hostname: DR_VPN

Bridge Mode: Enable Disable

DHCP filter: Enable Disable

Bridge VLAN: VLAN0

VPN IP Address: [Empty]

VPN Netmask: 255.255.255.0

VPN Port: 656

Encryption: AES

VPN Public Key

```
-----BEGIN RSA PUBLIC KEY-----
MIIBCgKCAQEAXyglrEaVRZxOkW3Yk6pt0A1rnjpayo0B896+JAbmpSJetGASqwx
/Pv72klolOIt0GjwqaECWDFwnjrU9g9M/mKCVy9c5HNnMJMSgQ3yga/REI4TGz40
bCjnMhmkWT7/ZqbOfNHy/KmzgatAS+YTOR18priDhl07KsQx0g3d9W3Md58mTbs
XCKhuCbtqahnxL05v1eEmXLOE8jTgBZ69Aiksk0SU43E6CIMkhG8GVswcSladpBk
7LGRRbK0ITWgkxHNayQZKsr3dzyzxdbKpC9IOZt1QRJBD4pVllITxbGAA3TKOZ1
supCAbKOxskW47UBsiHWR9rWgs15utA0XnwiDAQAB
-----END RSA PUBLIC KEY-----
```

Generate Public Key

Download Public Key

VPN Settings

- **VPN Hostname:** Administrator can set a VPN host name. Each VPN host name can't be the same and can't have special symbols.
- **Bridge Mode:** Administrator can select bridge mode by VLAN or Manual.
- **DHCP filter:** You can choose to enable or disable it. When it is enabled, it can prevent the DHCP server IPs of the physical area network at both ends from sending IPs out of bounds. (You only need to enable this function unilaterally. If the DHCP filter is turned on at both ends, the network logic will be incorrect and the VPN cannot be successfully connected)
- **Bridge VLAN:** If bridge mode select VLAN, administrator can select set VLAN 0~7 for VPN bridge.
- **VPN IP Address/Netmask:** If bridge mode select manual, administrator must set an IP address/netmask for the VPN link and must set routing of LAN.



1. If administrator choose use bridge mode then VPN both sides beneath need use same class network.
2. If administrator choose use manual set IP address then must set IP routing of LAN

- **VPN Port:** Administrator can set Port for VPN.
- **Encryption:** Select VPN security of encryption type.

VPN Public Key

VPN Public Key

```

-----BEGIN RSA PUBLIC KEY-----
MIIBCgKCAQEAvp+C8pLMuhpJAvosinha0xPMgSbp0LSPhkLR1VNT65N6hqMvGcjH
166MrHJDAXMEaTp0Q0geh5Zr2MRAQUYErICrXwMnS4wqDqsjYtnLsGPMLSaRN+W
PVUaJBcZKXP16vaYPI0wN4VYLEAto/op7G0Bm2a0NZjIh4j0tEJorua/k3jSUYa2
H80qQF/vhZ16XVYONueB019at1b5cMieQpuMLoqjrZ7kLto/447o+4UxMYu2m05W
6+PPRQa+Yo5ZkfwcmREzbR+PofKzPLJGWze3/IM9h++AoLXmhWlvAU2Y3bbg/G3n
/6QDfu7UP304QFj03eJNdsN6VBsh9+TtQIDAQAB
-----END RSA PUBLIC KEY-----
            
```

Generate Publio Key

Gen Key

Download Publio Key

Download

- **Generate Public Key:** Administrator can click the button to regenerate the VPN public key.
- **Download Public Key:** Administrator can click the button to download the VPN public key.



3.7 VPN Peer Setup



When administrator set 3.6 VPN server is complete, this page must setup a real IP address and upload VPN key of the other end.

Administrator can create new VPN connection for the VPN Peer.

Please click “System” → “VPN Peer Setup”

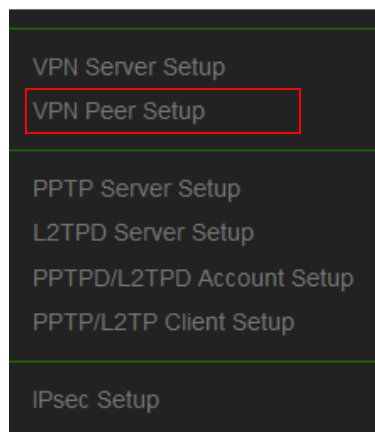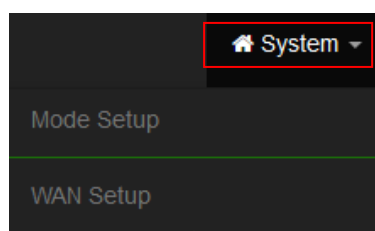

| VPN Peer List | | | | | | Create New Peer |
|---------------|------|----------|-------------|--------|--------|-----------------|
| # | Mode | Hostname | Description | WAN IP | Action | |
| - | - | - | - | - | - | - |

Create New Peer: Administrator can click the button to create a VPN bridge(peer to peer).

Up to 20 groups of VPN Peer settings can be created.


| Client Setting | |
|----------------|---|
| Mode | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| HostName | <input type="text"/> |
| Real IP/Domain | <input type="text"/> |
| VPN Port | <input type="text" value="656"/> |
| Description | <input type="text"/> |

- **Mode:** Administrator can select Enable or Disable the service.
- **HostName:** Administrator can set VPN host name in this field.
- **Real IP/Domain:** Administrator can set remote real IP address or Domain name in this field.
- **VPN Port:** Administrator can set connection Port for VPN.
- **Description:** Enter the description for the VPN Peer. **(This is optional fill in and will not affect VPN connection settings)**


Basic instructions for setting the program

In the two end points A and B for example

1. Set the VPN server on the A side, and download and store the VPN Public Key, the A Public Key upload it to the B endpoint for authentication. The same is true for the B endpoint setting. (Two-end exchange public key)

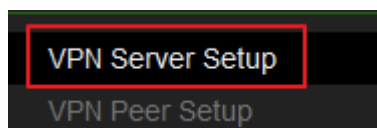

2. Establish remote VPN Server information and upload the remote Public Key to this location.

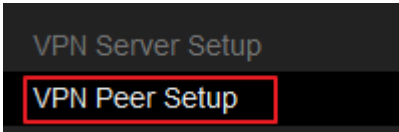


3. After completion, administrator can use ping command go to ping remote network IP address. If A ping to B side can get respond indicates that the VPN tunnel has been successfully established.


| | |
|---|--|
| <pre>Connection-specific DNS Suffix . : Description : Realtek Gaming USB 2.5GbE Family Controller Physical Address. : 00-E0-4C-68-00-B0 DHCP Enabled. : Yes Autoconfiguration Enabled : Yes Link-local IPv6 Address : fe80::6dbb:e9be:1a09:9973%10(Preferred) IPv4 Address. : 192.168.101.63(Preferred) Subnet Mask : 255.255.255.0</pre> | <pre>C:\Users\jacky>ping 192.168.2.1 -t Pinging 192.168.2.1 with 32 bytes of data: Reply from 192.168.2.1: bytes=32 time=3ms TTL=64 Reply from 192.168.2.1: bytes=32 time=1ms TTL=64 Reply from 192.168.2.1: bytes=32 time=2ms TTL=64 Reply from 192.168.2.1: bytes=32 time=1ms TTL=64 Reply from 192.168.2.1: bytes=32 time=2ms TTL=64 Reply from 192.168.2.1: bytes=32 time=16ms TTL=64</pre> |
| A Side | B Side |

4. Special attention to the fact that the respective Client settings of the final VPN server and the VPN Peer settings of both parties must be enabled for the VPN Peer connection to be successful.
5. Kindly remind, please set up correctly and enable the DHCP filtering function. When using DHCP Server to allocate IP, it can be enabled according to the environment to prevent the physical area networks at both ends from crossing the boundary and allocating IPs to each other, causing the IP obtained not to be the real IP allocation. You will then be unable to access the Internet normally. You must choose to enable filtering on either side to prevent non-local DHCP servers from assigning IPs and thus avoid cross-border assignments. Please pay special attention to this part and do not enable this feature on both ends. If DHCP filtering is enabled on both ends, a network logic error will occur, causing the VPN connection to fail.


3.8 PPTP Server Setup

| | |
|---|---|
|  | <p>This VPN function support three protocol are VPN Server 、PPTP/L2TP and IPsec, the VPN tunnel of these three types only select one VPN protocol to used it.</p> |
|---|---|

Use the PPTP protocol to build a VPN tunnel; administrator can setup PPTP server of the VPN tunnel in the function.

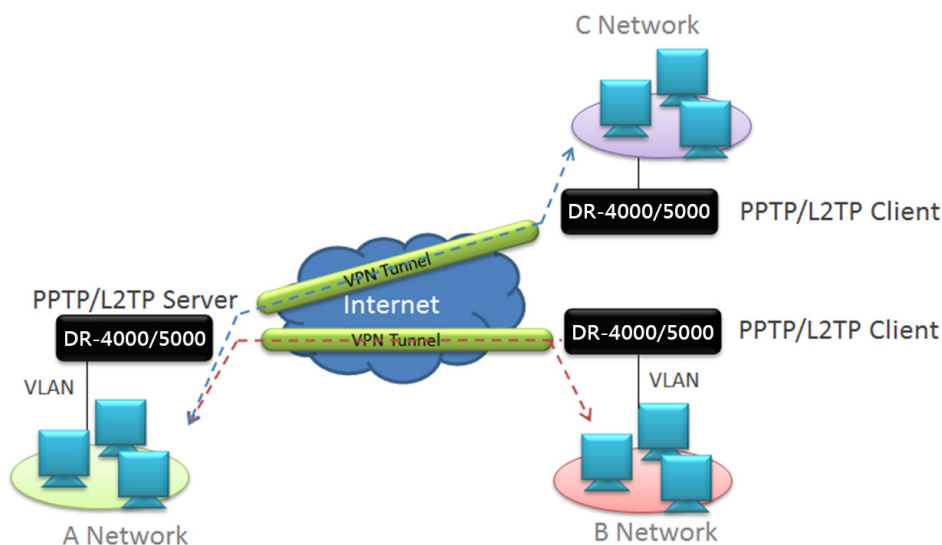

Please click "System" → "PPTP Server Setup"

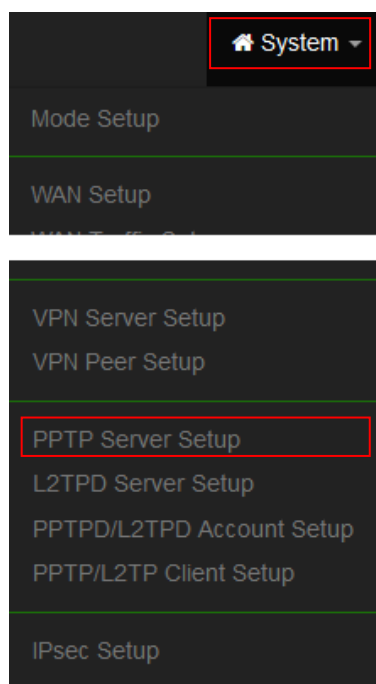

| PPTP Server Settings | |
|--------------------------------|---|
| Connections | <input type="text" value="10"/> |
| Local IP Address | <input type="text"/> |
| Remote Start IP Address | <input type="text"/> |
| Remote End IP Address | <input type="text"/> |
| MPPE40 | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| MPPE128 | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |

- **Connections:** Administrator can set connected VPN client Qty.
- **Local IP Address:** Set virtual IP address for VPN server.

Notice This IP address is set as a VPN-specific virtual IP address tunnel, the IP address can't set same subnet of the WAN and LAN (network).

- **Remote Start/ End IP Address:** Set start to end IP address for dynamic configuration, can give VPN client automatically obtain a virtual IP address.
- **MPPT40/128:** Administrator can choose use VPN security for 40 or 128 bit.

3.9 L2TP Server Setup



This VPN function support three protocol are VPN Server、PPTP/L2TP and IPsec, the VPN tunnel of these three types only select one VPN protocol to used it.

Same as PPTP, L2TP protocol to build a VPN tunnel; administrator can setup L2TP server of the VPN tunnel in the function.

Please click “System” → “P2TP Server Setup”

➤ **Local IP Address:** Set virtual IP address for VPN server.



This IP address is set as a VPN-specific virtual IP address tunnel, the IP address can't set same subnet of the WAN and LAN (network).

➤ **Remote Start/ End IP Address:** Set start to end IP address for dynamic configuration, can give VPN client automatically obtain a virtual IP address.

➤ **Mode:** Administrator can choose Enable or disable this function.


➤ **Pre-shared Key:** Set a security key for Pre-shared Key

- **Client IP:** Set a IP address of client.
- **WAN ID:** Select a access passage.

3.10 PPTP/L2TP Account Setup


Create PPTP / L2TP authentication account with maximum of 60 VPN accounts.

Please click “System” → “PPTP/L2TP Account Setup”

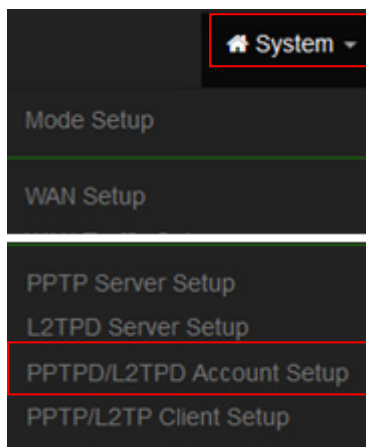

| Account List | | | | Create Account |
|--------------|----------|--------------|--------------|----------------|
| # | Username | PPTP Support | L2TP Support | Action |
| - | - | - | - | - |

- **Create Account:** Administrator can click the button to create authentication account of client.

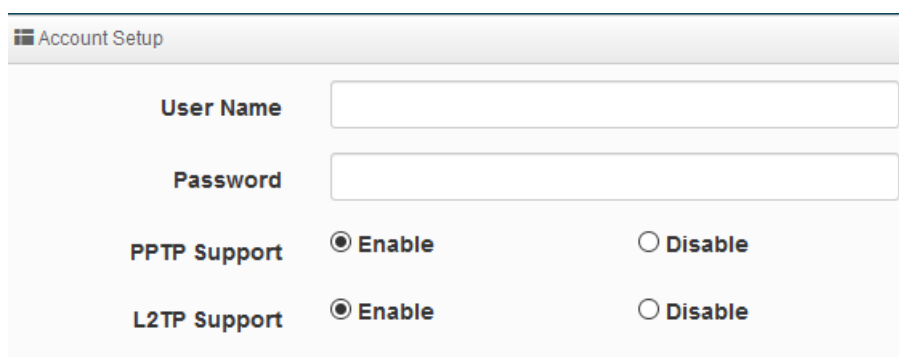


The image shows the 'Account Setup' form. It contains the following fields and options:

- User Name:** A text input field.
- Password:** A text input field.
- PPTP Support:** Radio buttons for 'Enable' (selected) and 'Disable'.
- L2TP Support:** Radio buttons for 'Enable' (selected) and 'Disable'.

- **User Name/Password:** Set authentication account of name/password.
- **PPTP/L2TP Support:** Set account used to PPTP or L2TP protocol.

Routing Rule:

Set routing of both network, As figure below, the local end is the Server endpoint and the remote end is the Client endpoint.

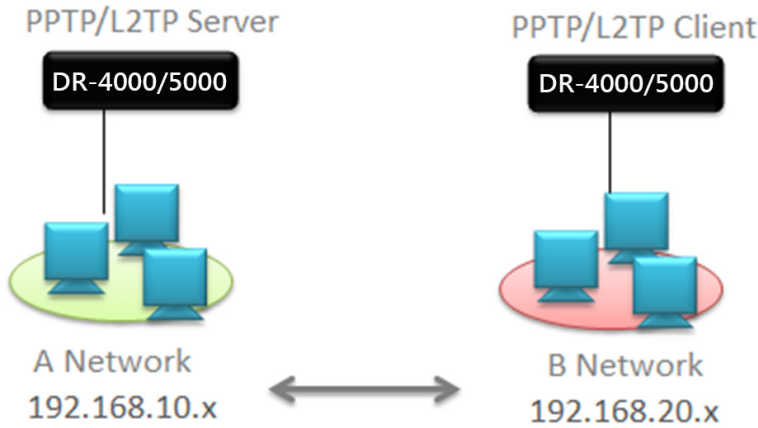

Example :
 Local Subnet: 192.168.10.0/24
 Remote Subnet : 192.168.20.0/24


Routing Rule


| | |
|----------------------|--|
| Local Subnet | 0.0.0.0/0 |
| Remote Subnet | 0.0.0.0/0 Add |

- **Local Subnet:** Set network subnet of local.
- **Remote Subnet:** Set network subnet of Remote.


3.11 PPTP/L2TP Client Setup

If remote have PPTP/L2TP VPN server, administrator can used PPTP/L2TP client function connection to remote VPN server.

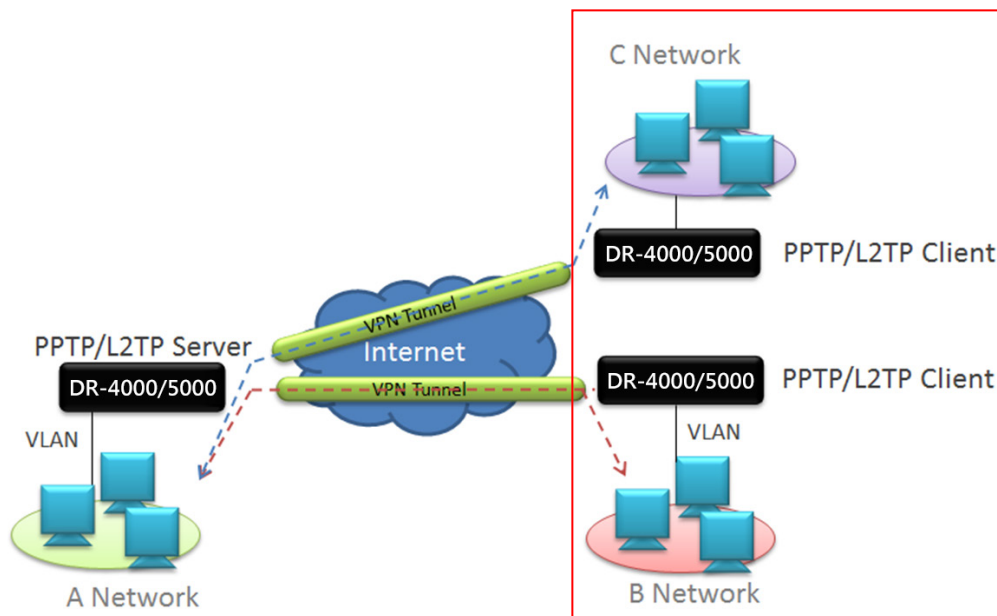

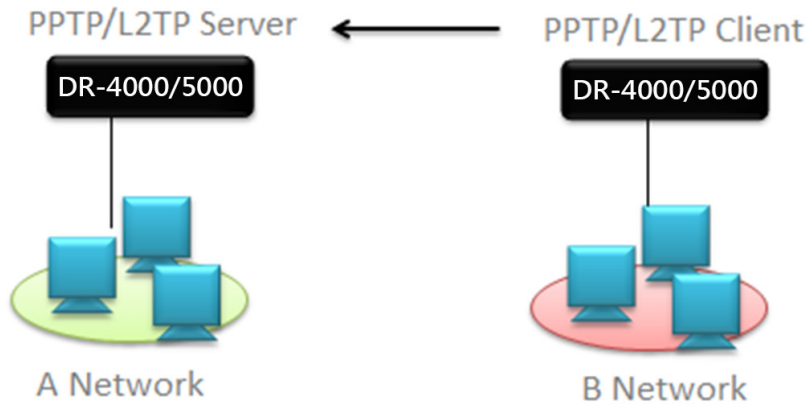

Please click "System" → "PPTP/L2TP Client setup"

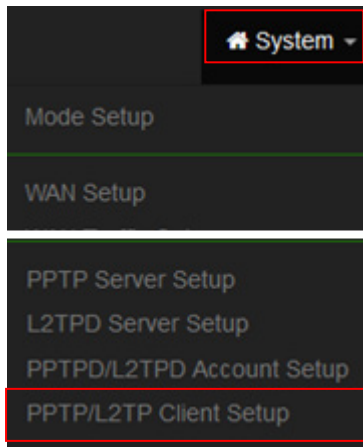


| Client List Create Client | | | | |
|--|--------|------|-------------------|--------|
| # | Active | Mode | Server IP Address | Action |
| - | - | - | - | - |

Please click the Create Client button to set client conditions. **U Up to 60 client of PPTP/L2TP Client can be created.**

The image shows two stacked forms. The top form, 'PPTP/L2TP Client Setup', has an 'Active' section with 'Enable' selected. The bottom form, 'PPTP/L2TP Client Settings', has a 'Mode' section with 'PPTP' selected, and three input fields for 'Server IP Address', 'User Name', and 'Password'.

- **Mode:** Administrator can select use PPTP or L2TP protocol connection to remote VPN server. If VPN server used PPTP Protocol then please choose PPTP.
- **Server IP Address:** Administrator must set remote VPN server used real IP address.
- **User Name / Password:** Set VPN authentication account and password (Please Refer to 3.9 Account Setup)

If you use PPTP protocol, please select the encryption type, as shown below

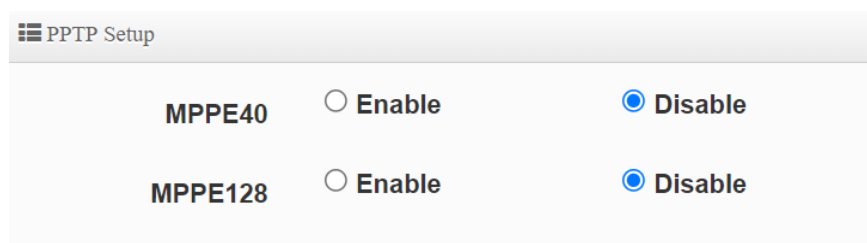


PPTP Setup

MPPE40 Enable Disable

MPPE128 Enable Disable

- **MPPE40/128:** Enable or disable security options based on using remote VPN servers.

If you use L2TP protocol, please enter the Pre-share Key and confirm which WAN to use as the external VPN channel, as shown below

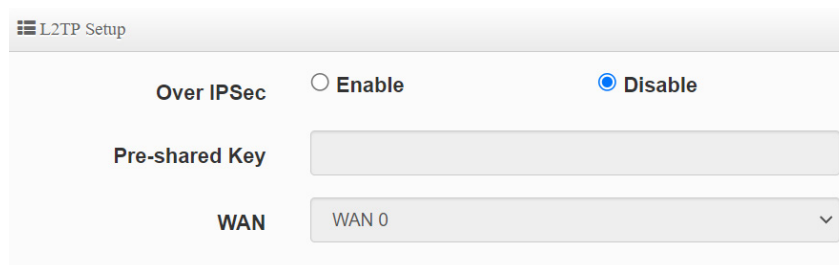

L2TP Setup


Over IPsec Enable Disable

Pre-shared Key

WAN

- **Over IPsec :** Choose to enable or disable the Over IPsec VPN protocol.
- **Pre-shared Key :** You can enter a set of password keys
- **WAN :** elect L2TP VPN through the WAN related user interface.

3.12 IPsec Setup






Notice


This VPN function support three protocol are VPN Server 、 PPTP/L2TP and IPsec, the VPN tunnel of these three types only select one VPN protocol to used it.

Administrator can create new VPN connection for the IPsec.

Please Click "System" → "IPSec Setup"

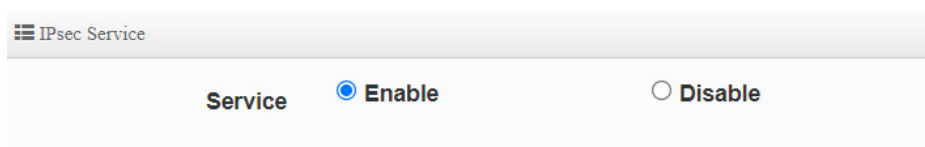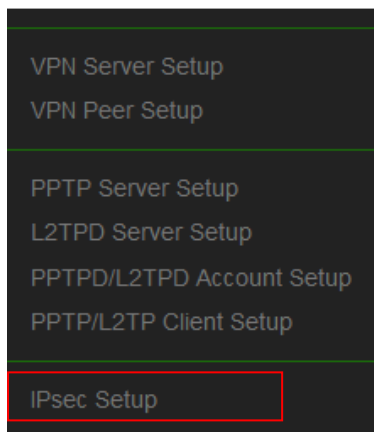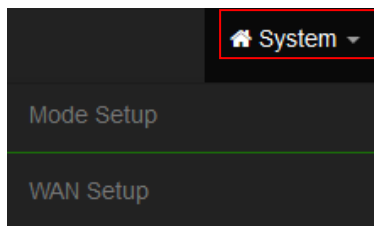

➤ **Service:** You can choose to turn on or off this function service

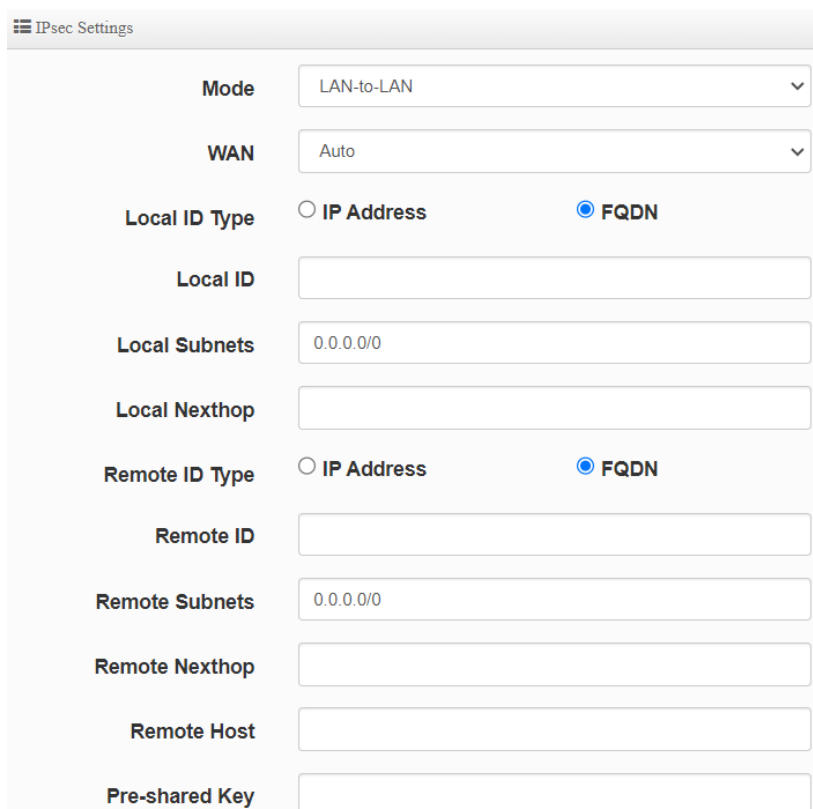

- **Mode:** Administrator can be according to different needs select use LAN to LAN or Client to LAN.
- **WAN:** Administrator can choose use specific WAN Port connection.
- **Local ID Type:** Administrator can select use IP address or FQDN for Local IP Type.
- **Local Subnet:** Administrator must set Local Subnet for the VPN "LAN to LAN".

- **Local Nexthop:** Administrator can add a VPN Next hop address for Local.
- **Remote ID Type:** Administrator can select use IP address or FQDN for Remote IP Type.
- **Remote Subnet:** Administrator must set remote Subnet for the VPN "LAN to LAN".
- **Remote Nexthop:** Administrator can add a VPN Next hop address for Remote
- **Pre-shared Key:** Enter Pre-shared Key for VLAN.

| | |
|--------------------|---|
| DPD | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| DPD Delay | 30 |
| DPD Timeout | 120 |

- **DPD:** DPD (Dead peer detection) is a method that network devices use to verify the current existence and availability of other peer devices. The system can waiting for DPD acknowledgements (R-U-THERE-ACK messages) from the peer. **The DPD function must be enabled on both ends of the VPN host. The system on one side can wait for a delay time packet access from the remote stationary device and respond with the packet to ensure that the host knows that both parties are active. normal status. When no response message is received from the host after the set Timeout time, the host will use the DPD mechanism to automatically start the VPN reconnection process. This feature is enabled by default. Administrators are recommended to use this feature. This is to avoid the possibility of the VPN not being able to automatically reconnect after being disconnected.**
- **DPD Delay:** Administrator can set delay time (seconds) for DPD. **(The default value is 30 seconds for packet access to the opposite VPN host.)**
- **DPD Timeout:** Administrator can set timeout of times for DPD. **(The default value is 120 seconds. When the peer host does not respond normally according to the access period set by Delay, the DPD automatic VPN connection process is automatically started.)**

IKE Policy:

This function is verification the VPN identity. The VPN to establish a connection with each other must be certified to establish a trust relationship between each other, this function supports IKE Phase 1/2.

☰ IKE Policy

| | |
|---------------------------|---|
| IKE Mode | <input type="radio"/> Main <input type="radio"/> Aggressive |
| IKE Authentication | MD5 ▼ |
| Encryption | 3DES ▼ |
| DH Group | DH1 ▼ |

- **IKE Mode:** Administrator can select Main or Aggressive of the IKE. If device uses Router mode then suggest use Main mode is high security.
- **IKE Authentication:** Administrator can select authentication method for MD5, SHA1, SHA2_256.
- **Encryption:** Set encryption method for IKE. Administrator can select use 3DES and AES128/192/256.
- **DH Group:** Diffie-Hellma is key exchange. Allows two devices to establish a shared secret over an unsecure network. In terms of VPN it is used in the in IKE or Phase1 part of setting up the VPN tunnel. This DH Group support DH1/2/5/14.

IPSec Policy:

IPsec Policy


| | |
|--------------------------------|--|
| Security Protocol | <input type="text" value="ESP"/> |
| ESP Authentication | <input type="text" value="MD5"/> |
| ESP Encryption | <input type="text" value="3DES"/> |
| Perfect Forward Secrecy | <input type="radio"/> Enable <input type="radio"/> Disable |
| DH Group | <input type="text" value="DH1"/> |

- **Security Protocol:** The IPSec security use ESP protocol.
- **ESP Authentication:** Administrator can select authentication method for MD5, SHA1, SHA2_256.
- **ESP Encryption:** Set encryption method for ESP. Administrator can select use 3DES and AES128/192/256.
- **Perfect Forward Secrecy:** Administrator can select enable or disable for DH Group.
- **DH Group:** Diffie-Hellman is a key exchange and supports DH1/2/5/14. This function mainly allows two parties to create keys through an unsecured channel without requiring any information from the other party.

3.13 Management

Administrators can specify geographical location of the system via instructions in this page and modify system login password and select use system login protocol by 80, 443, 23, 22 Port. The management page support syslog server function and system auto reboot function.

Please Click **“System”** ➔ **“Management”**

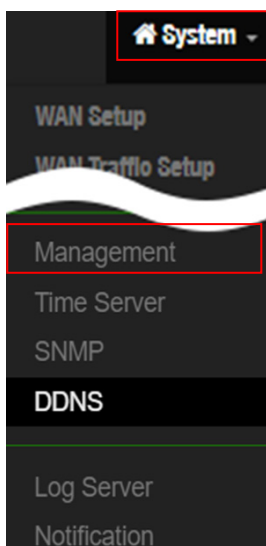

System Language

Language:

System Information

System Name:

Description:

Location:

Root Password

New Root Password:

Check Root Password:

Ping Watchdog

Ping Watchdog: IP Address:

Jumbo Frame

Jumbo Frame:

1Gbe port jumbo frames are 9K bytes

Login Methods

HTTP: 80 Port

HTTPS: 443 Port

Telnet: 23 Port

SSH: 22 Port

Host Key Fingerprint: [Generate Key](#)

Access WAN0: Enable Disable

Access WAN1: Enable Disable

Access WAN2: Enable Disable

System Log Setup

Remote Server: IP Address:

Port: Port

Auto Reboot

Type:

Wake On LAN


Type:

- **Language:** Administrators can choose to change the language of the English or Chinese.
- **System Information:** Administrator can set the system name / Description and Location.
- **Root Password:** Administrator can change system login password.
- **System Log Setup:** Administrator can be backup system log or authentication log to remote server. Please enter IP address and port of remote syslog server.

System Log Setup

Remote Server 127.0.0.1

Port 514 Port

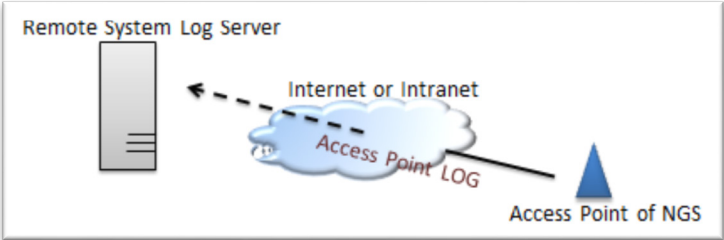

- **Remote Server:** Set the IP address of the remote system Log server .
- **Port:** Set the port number of the remote system Log server. The default Port is 514.

➤ **Ping Watchdog :** Ping Watchdog helps administrator to automatically reboot the system when its not working properly.

Ping Watchdog

Ping Watchdog IP Address


Interval 60 Seconds

Delay 100 Seconds


Times of faults 3 times

- **Ping Watchdog :** Set the IP address to be monitored for ping.
- **Interval :** Set the interval to ping the IP address.
- **Delay :** When ping fails, how long should you delay before ping again.
- **Times of faults :** When the above conditions are true multiple times, let the system reboot.

➤ **Jumbo Frame :** Can be enabled or disabled to determine whether all physical Ethernet ports use Gigabit 9K Jumbo Frame as the primary packet transmission format.

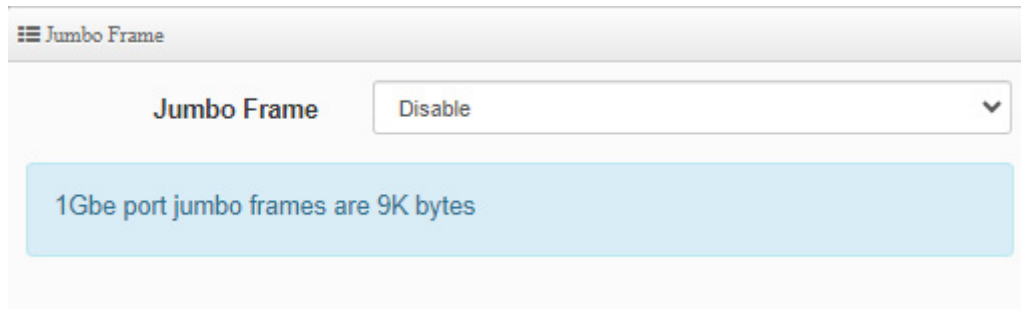

- **Login Methods:** Administrator can set system login protocol of the http/https/telnet and ssh.

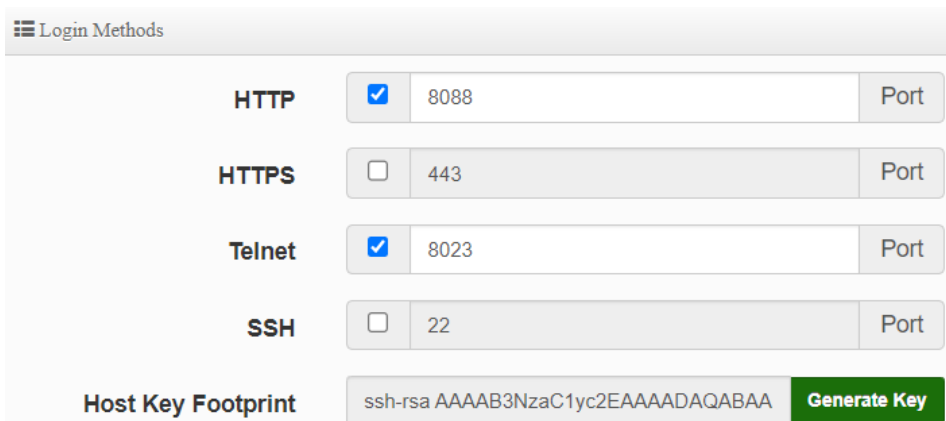


- **HTTP Management** : Check this item will enable the WEB interface to enter the management interface. The default is port 80. (recommended port number between 1025 and 65535)
- **HTTPS Management** : Check this item will enable the WEB interface to enter the management interface. The default is port 443. (recommended port number between 1025 and 65535)
- **Telnet Management** : Check this item will enable Telnet to enter the management interface. The default is port 23. (recommended port number between 1025 and 65535)
- **SSH Management** : Check this item will allow SSH to enter the management interface. The default port is 22.
- **Host key Footprint** : Click to generate SSH certificate key.

- **Access WAN#:** If enable this WAN# then external (Internet) will can access management interface for DR-4000-CA. The default is Disable. (This function can only be used in Router mode).


➤ **Auto Reboot:** The functions can Auto-reboot the system by Date/time management.

- **Daily :** Setting time to system reboot.

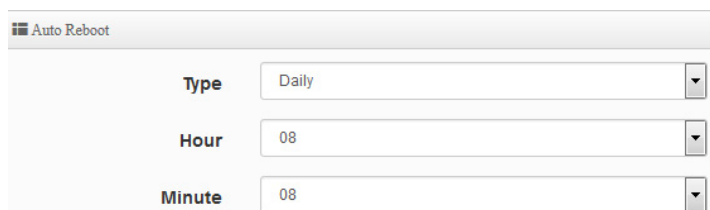


The screenshot shows the 'Auto Reboot' configuration interface. The 'Type' dropdown is set to 'Daily'. The 'Hour' dropdown is set to '08' and the 'Minute' dropdown is set to '08'.

- **Weekly :** Setting frequency (ex. Weekly) and time of system reboot

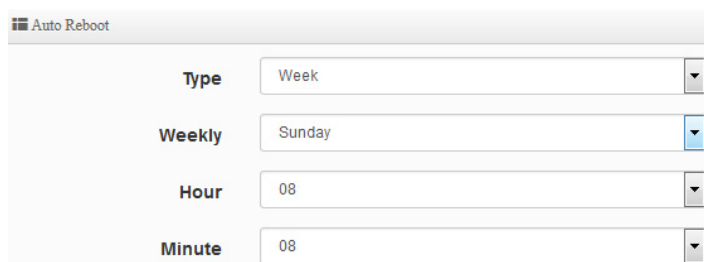

The screenshot shows the 'Auto Reboot' configuration interface. The 'Type' dropdown is set to 'Week'. The 'Weekly' dropdown is set to 'Sunday'. The 'Hour' dropdown is set to '08' and the 'Minute' dropdown is set to '08'.


- **Monthly :** Setting Every month, fixed date and time to system reboot

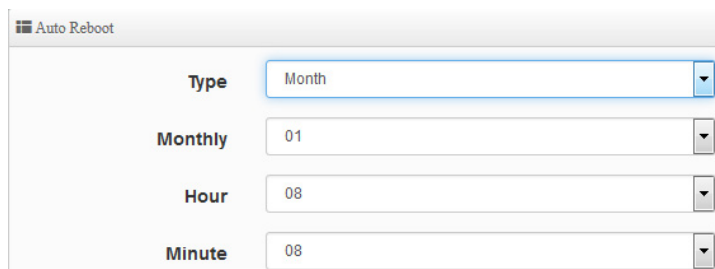

The screenshot shows the 'Auto Reboot' configuration interface. The 'Type' dropdown is set to 'Month'. The 'Monthly' dropdown is set to '01'. The 'Hour' dropdown is set to '08' and the 'Minute' dropdown is set to '08'.

➤ **Wake On LAN:** This function can fix in the remote MAC address of network card to allow the system to wake up a remote network MAC address device immediately or periodically.

- **Daily :** Setting every day time for the system to wake up a device with a remote network MAC address.

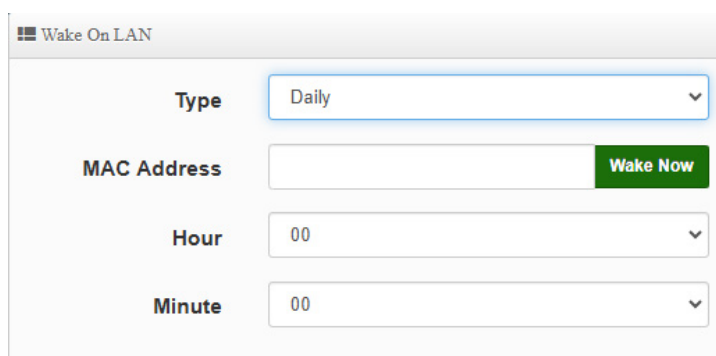

The screenshot shows the 'Wake On LAN' configuration interface. The 'Type' dropdown is set to 'Daily'. The 'MAC Address' field is empty, with a green 'Wake Now' button to its right. The 'Hour' dropdown is set to '00' and the 'Minute' dropdown is set to '00'.

- **Weekly :** Setting frequency (ex. Weekly) time for the system to wake up a device with a remote network MAC address.

Wake On LAN

Type: Week

MAC Address: [input field] **Wake Now**

Weekly: Sunday

Hour: 00

Minute: 00

- **Monthly** : Setting Every month time for the system to wake up a device with a remote network MAC address.

Wake On LAN

Type: Month

MAC Address: [input field] **Wake Now**

Monthly: 01


Hour: 00

Minute: 00

3.14 Time Server

Administrator can select manual or via a NTP server to modify system time for the right local time. If select update the system time for manual, when administrator reboot system the system time will reply default.

If select update the system time for the NTP Server, system must set gateway and DNS server, the system can be connected internet.

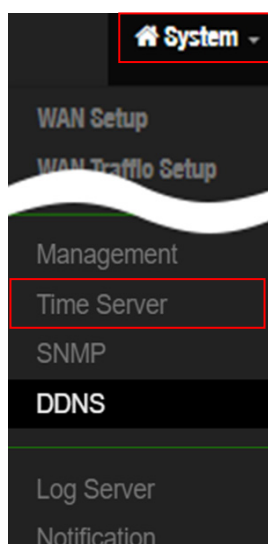

System Time

Local Time: 2015/12/02 21:01:49

Mode: NTP Server Manual

User Setup


Date(Y/M/D): 2016 / 10 / 20

Time(H:M:S): 19 / 28 / 10 (GMT+8:00)




The screenshot shows the 'NTP Server' configuration window. It includes a 'Default NTP Server' dropdown menu with 'time.stdtime.gov.tw' selected. Below it is a text input field for 'NTP Server' containing 'time.stdtime.gov.tw'. The 'Time Zone' is set to '(GMT+08:00) Beijing, Hong Kong, Singapore, Taipei'. At the bottom, there are radio buttons for 'Daylight Saving Time', with 'Disable' selected.

- **Mode:** Administrator can select NTP Server or Manual.
- **NTP Server:** System can auto update the system time. Administrator needs setting as NTP Server. **For example, select the time server of "cerio.com.tw" on the Internet as the basis for NTP time calibration as follows.**

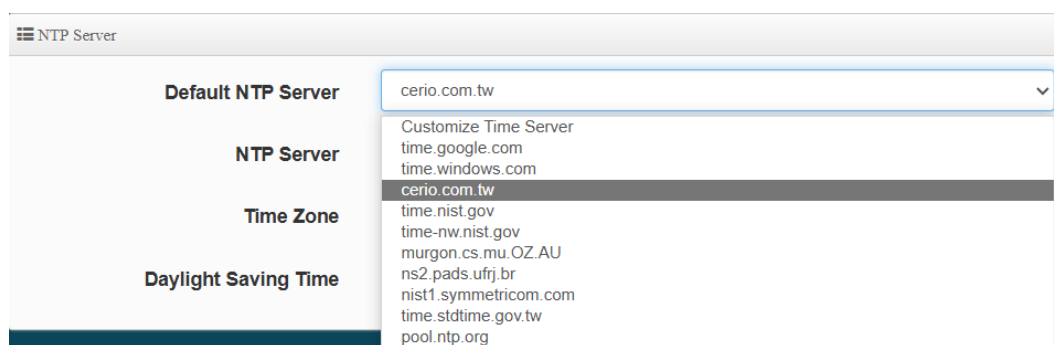


This screenshot shows the 'NTP Server' configuration window with the 'Default NTP Server' dropdown menu open. The list of options includes 'cerio.com.tw', 'time.google.com', 'time.windows.com', 'time.nist.gov', 'time-nw.nist.gov', 'murgon.cs.mu.OZ.AU', 'ns2.pads.ufrj.br', 'nist1.symmetricom.com', 'time.stdtime.gov.tw', and 'pool.ntp.org'. 'cerio.com.tw' is highlighted in the list.

- ✓ **Default NTP Server:** Administrator can select NTP Server.
- ✓ **NTP Server:** Administrator can setting as NTP Server.
- ✓ **Time Zone:** Administrator can select a desired time zone from the drop-down list.
- ✓ **Daylight saving Time:** Enable or disable Daylight saving.
- **Manual:** Administrator need to set the system time.





The screenshot shows the 'User Setup' configuration window. It features two rows of dropdown menus for setting the date and time. The 'Date(Y/M/D)' row has values 2015, 9, and 9. The 'Time(H:M:S)' row has values 17, 49, and 15. A '(GMT+8:00)' label is positioned to the right of the time settings.

**Notice** This product supports hardware battery power supply to RTC (Real Time Clock Module) IC real-time clock memory storage module design. When "Manual Update" is selected, if the time cannot be saved and it will always be invalid and return to the default time, then The machine board hardware battery must be checked and replaced.

3.15 SNMP

SNMP is an application-layer protocol that provides a message format for communication between SNMP managers and agents. By enabling SNMP function, the administrator can obtain the system information remotely.


Please click on **System** -> **SNMP** and follow the below setting.

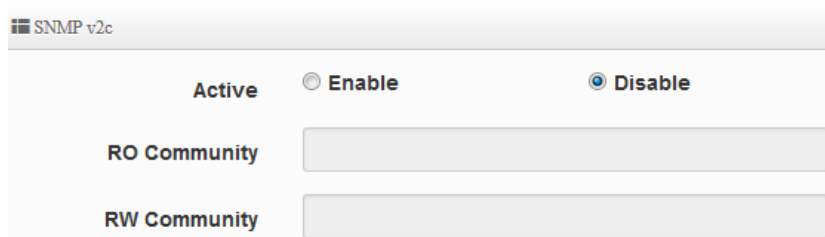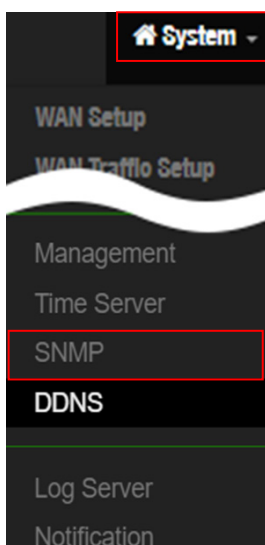

SNMP v2c function

- **Active:** Administrator can select Enable or Disable the service.
- **RO Community:** Set a community string to authorize read-only access.
- **RW Community:** Set a community string to authorize read/write access.

SNMP v3 function

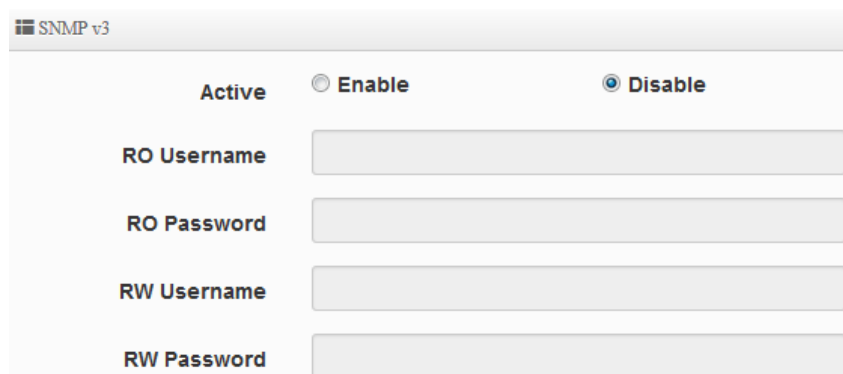

- **Active:** Administrator can select Enable or Disable the service.
- **RO username:** Set a community string to authorize read-only access.

- **Ro password:** Set a password to authorize read-only access.
- **RW username:** Set a community string to authorize read/write access.
- **RW password:** Set a password to authorize read/write access.

SNMP Trap

Events such as cold start interface up & down, and association & disassociation will report to an assigned server.


The screenshot shows the 'SNMP Trap' configuration window. At the top, there are three radio buttons: 'Active', 'Enable', and 'Disable'. The 'Disable' radio button is selected. Below the radio buttons are five input fields: 'Community', 'IP 1', 'IP 2', 'IP 3', and 'IP 4'. All input fields are currently empty.

- **Active:** Administrator can select Enable or Disable the service.
- **Community:** Set a community string required by the remote host computer that will receive trap messages or notices send by the system.
- **IP(1~4) :** Enter the IP addresses of the remote hosts to receive trap messages.

3.16 DDNS

Dynamic Domain Name Server, referred to as DDNS dynamic DNS technology. According to the Internet domain name establishment rules, domain names must follow a fixed IP address. However, the dynamic DNS system provides a fixed name server (Name server) for the dynamic domain, which allows external users to connect to the dynamic user's URL through real-time updates. **This system has built-in support for 2 service providers, namely dyndns and no-ip.**

Please click on **System** -> **DDNS** and follow the below setting.

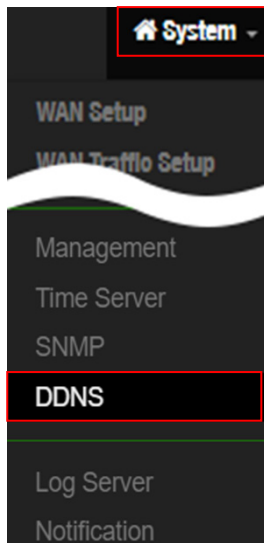

Select and edit settings according to the corresponding WAN. Supports 3 sets of corresponding WAN IP settings..

☰ DDNS List

| # | Active | Provider | WAN | Hostname | Edit |
|---|----------|----------|------|----------|------|
| 0 | InActive | dyndns | Auto | | Edit |
| 1 | InActive | dyndns | Auto | | Edit |
| 2 | InActive | dyndns | Auto | | Edit |

☰ DDNS Setup

Active Enable Disable

Provider

WAN

Hostname

Username

Password


Interval Minute

- **Active:** Choose to enable or disable the function.
- **Provider:** Choose the Service provider , **built-in support for 2 service providers, namely dyndns and no-ip.**
- **WAN:** Select the port for external connection of this machine
- **Hostname:** Enter the host name
- **Username/Password:** Enter the account password applied by the DDNS service provider
- **Interval:** Enter the interval for the host to automatically provide the physical address to the DDNS service provider.

3.17 Log Server Setup


If devices used CERIO products and support syslog server function, the devices log can be transferred to this server and record devices log. Administrator can set storage space for the session/authentication and devices system log.

System can use e-mail send log Message to administrator.

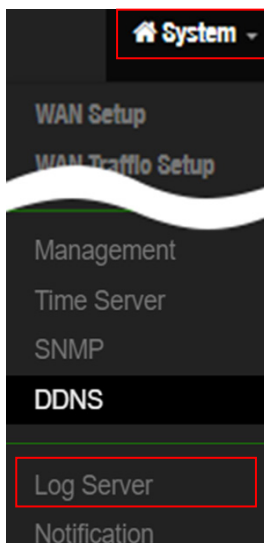

| | |
|----------------------------|--------|
| ☰ Radius Log Setup | |
| Radius Log Size | 256 MB |
| ☰ Session Log Setup | |
| Session Log Size | 256 MB |
| Reorder Mode | Cycle |
| ☰ Authentication Log Setup | |
| Authentioation Log Size | 256 MB |
| Reorder Mode | Cycle |
| ☰ System Log Setup | |
| System Log Size | 256 MB |
| Reorder Mode | Cycle |

- **Log Size:** Administrator can set storage space for RADIUS/session/authentication and system log.(max.512MB)
- **Recorder Mode:** The function can auto clear Log information or stop services.
 - **Cycle:** System will auto clear log by cycle.
 - **Retention Period:** System will auto clear log by Retention Period. Administrator can set days for retention period. (Max. 90 days)

| | |
|---|---|
|  Notice | When the log record file exceeds the set space size, the system will stop recording, so be sure to calculate the retention days and space size. For example, if the retention period is set to 7 days, but the storage space is full on the third day, the system will automatically stop recording at this time. |
|---|---|

- **Stop Service:** If the system storage is full, the system will auto stop recording.

E-Mail Message setting

Administrator can set E-Mail messenger format and set **3.16 Notification Setup** function send e-mail to administrator.

☰ E-Mail Message Format

Subject

Subject: Radius Log happend Full In 2016-11-21 16:26
Message: 2016-11-21 16:26, DR-3000, Radius Log, Full, 256MB, 95%



☰ Message Format

| Format | Description |
|--------|--|
| %h | Hostname |
| %t | Time |
| %l | Log Type(Radius Log/Session Log/Authentication Log/System Log) |
| %s | File Size |
| %p | File Percentage |
| %e | Event Type(Full/ Stop Service/ Start Service) |


3.18 Notification Setup

Administrator can automatically send the notification of Radius Log, Session Log, Authentication Log and System Log of 2 particular E-mail addresses. The E-Mail notification setting support SMTP server test, once administrator completed setting up of SMTP, server will able to use the test tool to confirm SMTP is working properly.


Please click **“System”** → **“Notification,”** functions of Notification E-mail Setup will appear, and fill in the related information, and select the desired function, and then, click on **“Save”** to apply the settings.

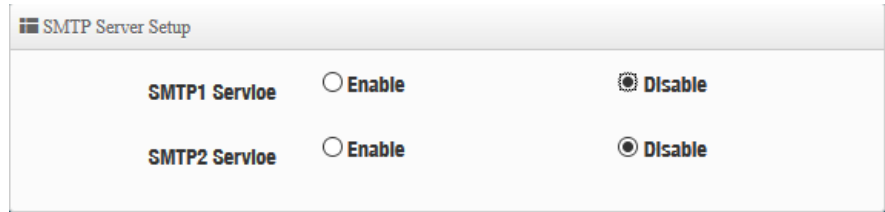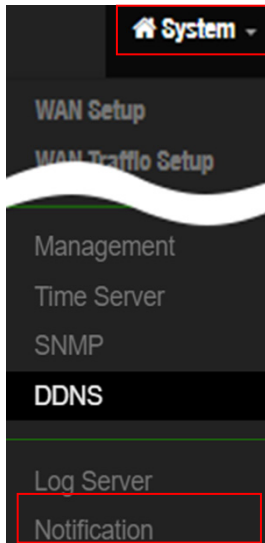

- **SMTP1/2 Service:** Administrator can select Enable or Disable the SMTP functions. If administrator select enable the function will following explains how to configure the SMTP functions.

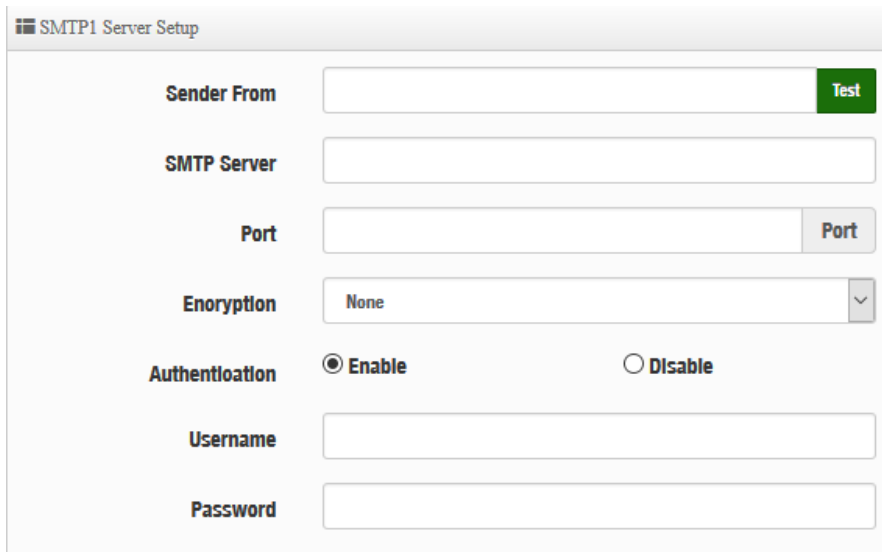

- **Sender From:** Administrator can set E-Mail address by from.
- **SMTP Server:** Administrator can set E-Mail SMTP server.
- **Port:** Administrator can set SMPT Server used Port.
- **Encryption:** Administrator can select use TLS or SSL encryption type for the SMPT Server.

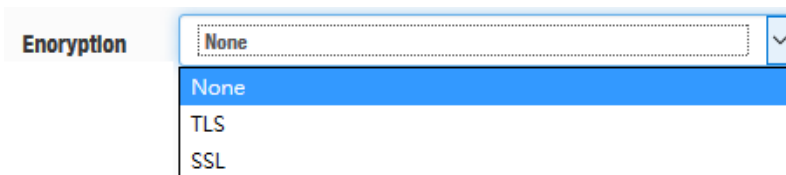

- **Authentication:** If SMTP Server must use authentication, Administrator can select enable the SMTP server authentication for E-Mail user account.

Notification Setup

Administrator can set frequency or time for the RADIUS, Session, Authentication and System Log Capacity, Location Tracking Log Capacity, and AP Detection, and send to administrator E-Mail.

For example:

Detect Event Frequency Setup

| | | |
|---------------------------------------|---------------------------------|---------|
| Radius Log Capacity | <input type="text" value="2"/> | Minutes |
| Session Log Capacity | <input type="text" value="2"/> | Minutes |
| Authentication Log Capacity | <input type="text" value="2"/> | Minutes |
| System Log Capacity | <input type="text" value="20"/> | Minutes |
| Location Tracking Log Capacity | <input type="text" value="2"/> | Minutes |
| AP Detection | <input type="text" value="10"/> | Minutes |

Receiver E-Mail List

Administrator can click “Create Receiver E-Mail” button to add administrator E-mail address(es.)

| Receiver E-Mail List | | | | | | | | Create Receiver E-Mail |
|----------------------|------------------------|--------|----------------|---------|--------|-------------------|--------------|---|
| # | Receiver E-Mail | Radius | Authentication | Session | Syslog | Location Tracking | AP Detection | Action |
| 1 | ████████@cerio.com.... | Off | Off | Off | On | Off | On | Edit ▼ |
| 2 | ████████@net.net | Off | On | Off | On | Off | On | Edit ▼ |
| 3 | ████████@gmail.com | Off | Off | Off | On | Off | On | Edit ▼ |
| 4 | ████████@net.net | Off | Off | Off | On | Off | On | Edit ▼ |
| 5 | ████████@gmail.com | Off | Off | Off | On | Off | On | Edit ▼ |

- **Receiver E-Mail:** Administrator can set receiver e-mail addresses.
- **Edit:** Administrator can select the **Radius, Authentication, Session, and System Log, Location Tracking and AP Detection** to receiver Emails through **Edit** function.

Deleting the Notification

Administrator can delete the notifications setting of receiver E-mail set previously.

| Create Receiver E-Mail | |
|------------------------|--------|
| AP Detection | Action |
| On | Edit |
| On | Delete |

4. AP Control


This function is primarily to control all the CERIO managed AP.

Administrator can use AP Control functions to centralize management of APs in the network architecture. AP control Setting functions have “Scan Device”, “Batch Setup”, “AP Setup”, “Group / Map setup” and Authentication Profile setup etc..

Please click “AP Control” to enter AP Management settings

4.1 Scan Device

This management page can discover all managed APs in the network. Administrator can set IP address / Password and VLAN tag for managed APs. After the setup is complete, Administrator must import all managed APs to databases.

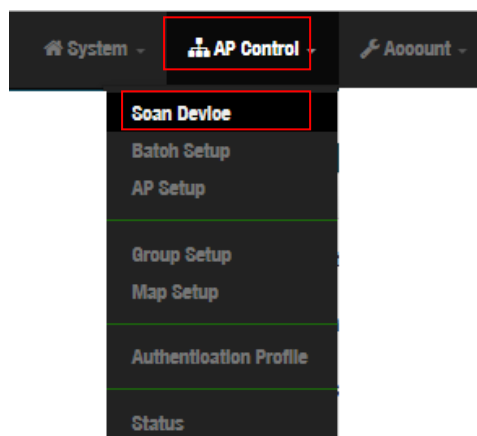

Centralized Management APs operating Instructions:

- 1) Click “Scan Device” to discover Access Points in the network architecture.
- 2) Set IP address for all managed Access Points and reboot managed Access Points.
- 3) Re-Scan managed APs and Import to databases.
- 4) Centralize managed AP settings by clicking “AP control” → “Batch setup”
- 5) After the setup is complete for managed APs function, administrator must reboot all managed APs.

This management page can discover all managed APs in the network. Administrator can set IP address / Password and VLAN tag for managed APs. After the setup is complete, Administrator must import all managed APs to databases.



- **VLAN#** : Administrator can select VLAN network to discovery managed Aps
- **Default Password**: Set login system password by managed Aps.
- **Sort**: Administrator can select discovery managed Aps Type. (IP or MAC)

| Scan Result | | | | | | | | | | Default | Import |
|-------------|--------|----------------|-------------------|----------|-----------|------------------------------|---------------------|----------------|---------------|---------|--------|
| # | Device | IP Address | MAC Address | Password | Host Name | F/W Version | F/W Date | IP Address | Netmask | Action | |
| 1 | | 192.168.20.254 | 8c:4d:ea:05:1c:6f | ***** | CW-500-R1 | Pme-CPE-IPQ60XX-CERIO V0.0.2 | 2024/06/03 20:19:28 | 192.168.20.254 | 255.255.255.0 | Info | |

[Save & Reboot](#)

- **#** : Display managed APs items.
- **Device** : Administrator can select all or single for managed Aps.
- **IP Address** : Display IP address for managed AP.
- **MAC Address** : Display MAC address for managed AP.
- **Host Name** : Display host name for managed AP.
- **F/W Version** : Display firmware version for managed AP.
- **F/W Date** : Display firmware Release date for managed AP.
- **IP Address** : Administrator can set single IP address for Managed AP.
- **Netmask** : Administrator can set single Netmask for Managed AP.
- **Default** : Administrator click the button will can reset to default for select managed APs.

Update IP Address/Netmask

Control Port

VLAN TAG

IP Address


Netmask [Apply/Reboot](#)

- **Control Port** : Administrator can change VLAN network for managed APs.
- **VLAN TAG** : Administrator can set VLAN TAG ID for managed APs.
- **IP Address** : Administrator can set IP address for managed APs, the IP address is auto-incrementally.
- **NetMask** : Administrator can set NetMask for managed APs.


When the setting managed APs is completed, please click Apply & Reboot button to complete the setup process.

4.2 Batch Setup


The AP control function supports centralized configuration of managed APs. Administrator can change VLAN network / Group and batch setup for managed APs.

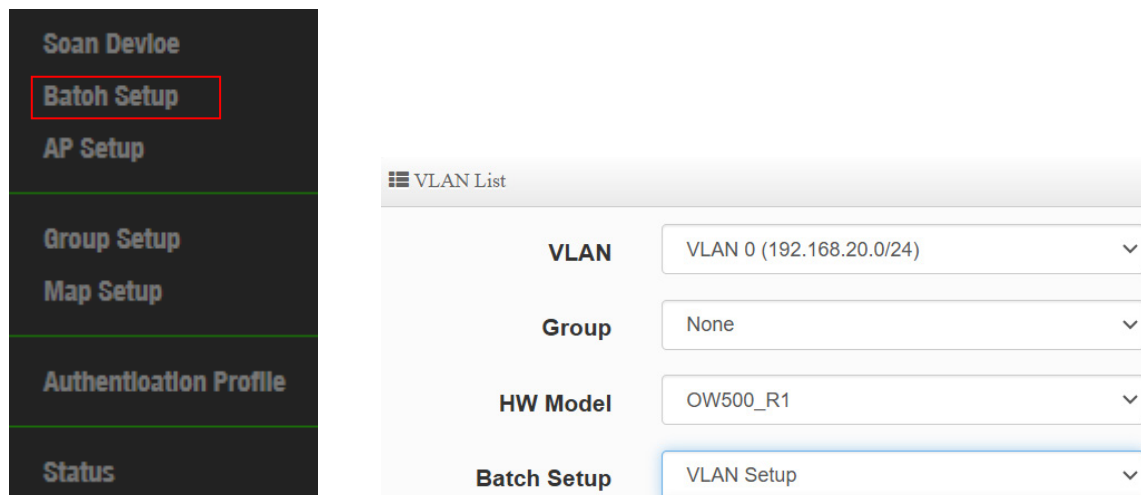

- **LAN :** When VLAN Tag function is enabled (please refer to 3.3 System VLAN Setup), administrator can change VLAN tag for managed APs.
- **Group :** When AP Groups are created (please refer to 4.4 Group setup), Administrators can select and change group settings of managed APs.
- **Batch Setup :** Administrator can centralize setting changes for managed APs.

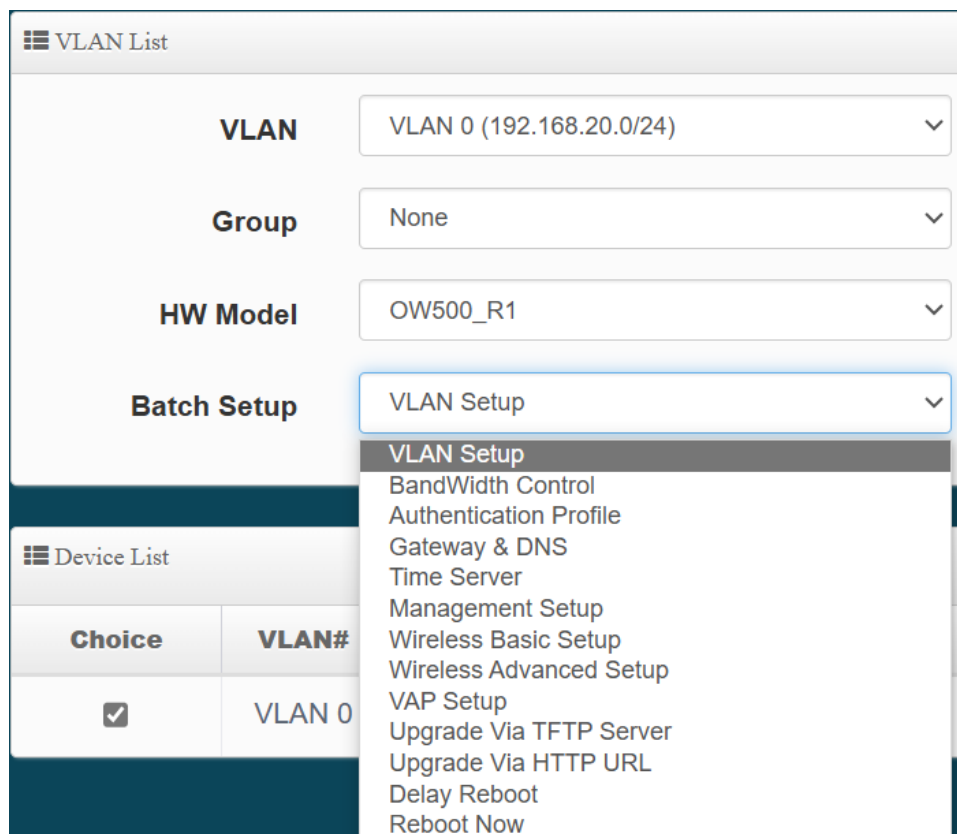

- **VLAN Setup** : Administrator can set VLAN Tag, IP address and Wi-Fi on/off for the managed APs.
- **BandWidth Control** : The maximum/minimum bandwidth can be managed. User bandwidth management can limit the bandwidth limits of IP/MASK, IP Range, Port(Service), SIP, RTP/RTSP, WEB, etc.
- **Authentication Profile** : After creating Profiles, See: “4.6 Authentication Profile” users can conveniently apply Authentication profiles
- **Gateway & DNS:** Setting Gateway and DNS for managed APs.
- **Time Server:** Setting System Time for managed APs. (
- **Management Setup:** Setting system name/ system login port and system log server service for managed APs. (Please refer to 3.13 system management)
- **Wireless Batch Setup:** Setting Wi-Fi configurations for managed APs.



Wireless AP station: If the managed AP is a 2.4G frequency,, Radio 0 (2.4G) must be selected, and if it is a 5G frequency and Radio 1 (5G) must be selected.

- **Wireless Advanced Setup:** Setting Wi-Fi Advanced settings for managed APs.
- **VAP Setup** : Wi-Fi SSID / channel or security settings for managed APs.
- **Upgrade via TFTP Server:** Administrator can centrally upgrade firmware via TFTP Server for the managed APs.
- **Upgrade via HTTP Server:** Administrator can centrally upgrade firmware via HTTP Server for the managed APs.
- **Delay Reboot:** Administrators can set managed APs to reboot after the wait time
- **Reboot:** Administrator can reboot managed APs.

4.3 AP Setup

Administrator can monitor statuses and modify managed APs information.

Soan Device

Batoh Setup

AP Setup

Group Setup

Map Setup

Authention Profile

Status

Device Setup

VLAN List

VLAN VLAN 0 (192.168.20.0/24)

Device List
Create New Device
Choice All
Delete
Refresh


| VLAN# | Device | Status | System Name | IP Address | MAC Address | Uptime | Comment | Action |
|-------|--------------------------|--------------------------------------|-------------|----------------|-------------------|--------|---------|---|
| VLAN0 | <input type="checkbox"/> | ⏻ | CW-500-R1 | 192.168.20.254 | 8c:4d:ea:05:1c:6f | 11:50 | | Setup |

#Device List

- **VLAN** : Select desired VLAN for AP setup
- **Device** : Select a specific managed AP.
- **Status** : Displays whether the managed AP is currently offline or online. (Green means online operation, red means offline)
- **System name** : If the managed AP has a system name set, the system name of the managed AP will be displayed.
- **IP address** : Displays the IP address of the currently managed AP
- **MAC Address** : Displays the MAC address of the currently managed AP
- **Uptime** : Displays the startup time of the currently managed AP system.
- **Comments** : Display customized comments.
- **Action** : You can delete the managed AP's list in the management database, or modify the IP address and information of the managed AP, etc..

Active for Setup

- **Setup** : Administrator can modify IP addresses, system login passwords, and web login port for managed APs. If administrator has change AP devices, administrator can modify MAC address of the new managed AP.

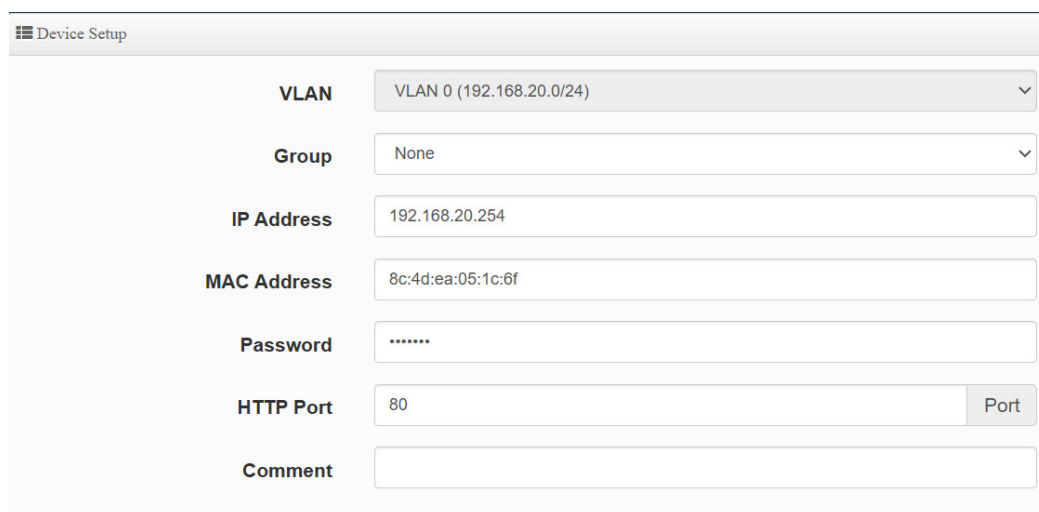

The screenshot shows a web interface titled "Device Setup". It contains several input fields for configuring a managed AP:



- VLAN**: A dropdown menu showing "VLAN 0 (192.168.20.0/24)".
- Group**: A dropdown menu showing "None".
- IP Address**: A text input field containing "192.168.20.254".
- MAC Address**: A text input field containing "8c:4d:ea:05:1c:6f".
- Password**: A text input field with masked characters "*****".
- HTTP Port**: A text input field containing "80", with a "Port" label to its right.
- Comment**: An empty text input field.

- **VLAN**: Displays the VLAN to which this wireless base station belongs.
- **Group**: You can choose to add this wireless base station to a group or change the group.
- **IP address**: Displays the IP address of this wireless AP station. You can also change the IP address here.
- **MAC Address**: Display the MAC address of this wireless AP station.
- **Password**: You can modify the management interface login password of this wireless AP station.


- HTTP Port: The port number used to log in to the management interface of this wireless AP station. The default is 80 Port.
- Comments: You can customize your own comments here.

4.4 Group Setup

Administrator can create Groups within the same VLAN.

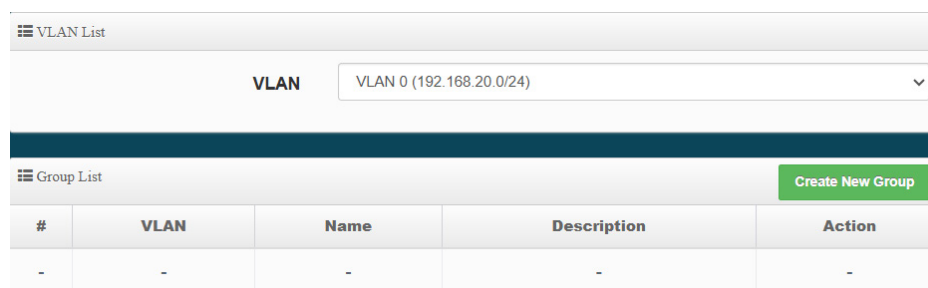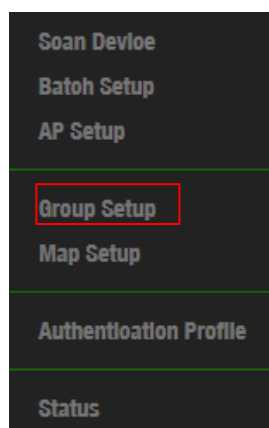

- **VLAN** : Select VLAN, Administrators can choose which VLAN to create the group under

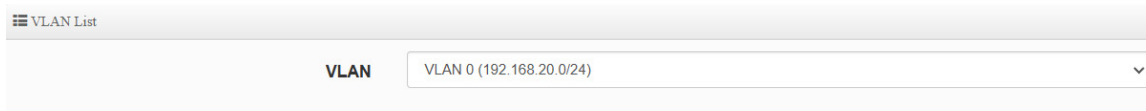

- **Create New Group** : Click the button to create a new AP Group

| Group List | | | | | Create New Group |
|------------|--------|--------|-------------|--------|------------------|
| # | VLAN | Name | Description | Action | |
| 1 | VLAN 0 | Group0 | Office-1F | Device | |
| 2 | VLAN 0 | Group1 | Office-2F | Device | |
| 3 | VLAN 0 | Group2 | Office-3F | Device | |

- ✓ **Device** : Administrator can select the **Device button** managed APs and import them into the Group.

| Device List | | | Choice All | Delete |
|-------------|------------|-------------|------------|--------|
| Choice | IP Address | MAC Address | | |
| - | - | - | | |

| Free List | | | Choice All | Add |
|-------------------------------------|----------------|-------------------|------------|-----|
| Choice | IP Address | MAC Address | | |
| <input checked="" type="checkbox"/> | 192.168.20.254 | 8c:4d:ea:05:1c:6f | | |

- ✧ The above list is the list of APs currently managed by this group. If you select a specific wireless base station and press the "Delete" button, the selected wireless base station will be kicked out of the group. °
- ✧ The above list is a list of managed APs that are not currently added to the group. Administrators can select the wireless base station they want to add and click the "Add" button. The selected wireless base station will enter the "AP Device List" field. , indicating that the selected wireless base stations are indeed in the same group °

4.5 Map Setup

The Map Setup feature allows administrators to upload a floor plan image to **DR-4000-CA** server and then use the image to import the map into the AP user interface. Once the image is uploaded, administrators can use the Map Setup function to map out the locations of the AP network.

| Map List | | | | Create New Map |
|----------|------|-------------|--------|----------------|
| # | Name | Description | Action | |
| - | - | - | - | |

Administrator can click **“Create New Map”** button to upload Map image.


| Map Setting | |
|-------------|-----------------------------------|
| Map Name | <input type="text" value="Map1"/> |
| Description | <input type="text"/> |

- **Map Name:** Administrator can set Map name.
- **Description:** Administrator can set description for map.

| Map List | | | Create New Map |
|----------|------|-------------|----------------|
| # | Name | Description | Action |
| 1 | Map0 | | View |

View : Once the Map is created and properly in the Map List, administrators can click the “Layout” button in the action tab to map out the AP network. Managed APs will appear in the “Device List” section of the layout page. Administrators can simply drag the AP (IP Address) to the correct installation location.

Operation sequence for View Pull-down menu

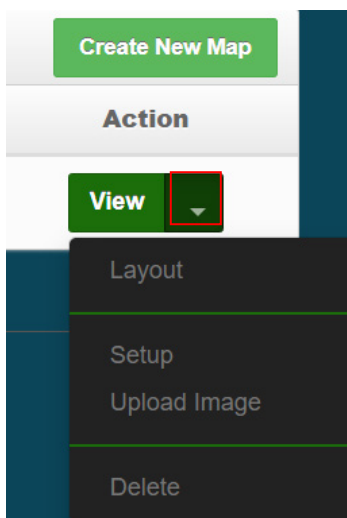

- **Layout:** This function can mainly drag the AP to the location where it is set up on the map, so that the administrator can clearly know the location of the AP and facilitate management. As shown in the figure below, the upper field is the wireless base station. Use the mouse drag method to pull the AP to the correct installation position. After confirming that it is completed, click the Save button to complete the saving action..
- **Setup:** You can re-modify the name and description of the Map.
- **Upload Image :** Upload area floor plan.
- **Delete:** Delete this Map data.

- 1) Administrator must first click “**Upload Image**” to upload the image.
- 2) Administrators can click the “**Layout**” function to map out the AP network.




3) Once complete, administrators can click the “**View**” button to monitor AP statuses and locations.




| | |
|-------------|--------------------------|
| IP Address | 192.168.20.254 |
| MAC Address | 8c:4d:ea:05:1c:6f |
| Hostname | CW-500-R1 |
| Uptime | 27:02 |
| Channel | 5 / 48 |
| Rate | 573.5 Mb/s / 1083.3 Mb/s |
| Client | 0 |

4) If administrator must modify the description of the Map, please click “Setup” to modify.

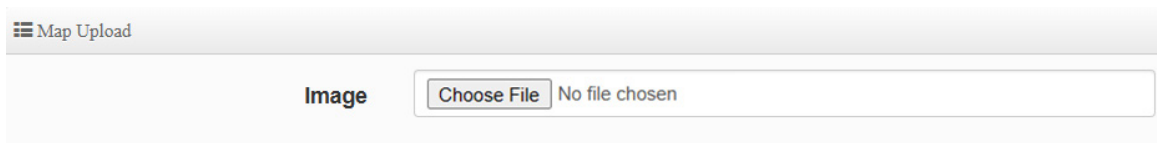

4.6 Authentication Profile

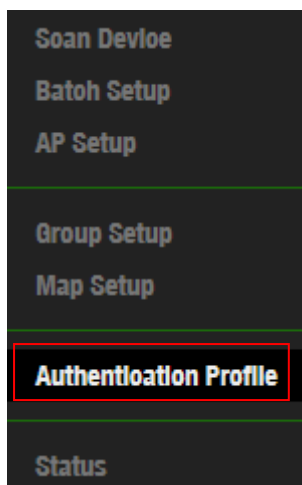

Authentication Profile List a [Create New Profile](#)

| # | Name | Description | Authentication | Edit | Action |
|---|------|-------------|----------------|--|--|
| 0 | TRST | | Off | Authentication ▼ Guest Local Users OAuth 2.0 POP3/IMAP Server <hr/> Customize Page Language <hr/> Walled Garden Privilege Address Bulk MAC Address <hr/> Profile | Setup ▼ Delete |

Cerio© 2024


- a : Create an authentication profile, name and description, etc.
- b: Displays the name of the authentication profile.
- c: Display the description of the profile.
- d: Displays whether the web authentication function of this profile should be enabled.
- e: Edit the functional conditions for web page authentication. Once this condition is set, the setting values for multiple managed APs can be applied in "4.2 Batch Settings", so that the web page authentication conditions of all managed APs can be applied. All use this profile.




For advanced instructions on setting this drop-down item function, please refer to Chapter 3.4 "Authentication" Function Detailed Instructions.

f: You can delete this profile or modify the name description of this profile.

➤ **Create New Profile** : Administrator can create authentication profile.

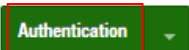➤ **Edit** :  Click the Authentication button to Enable or Disable authentication function.

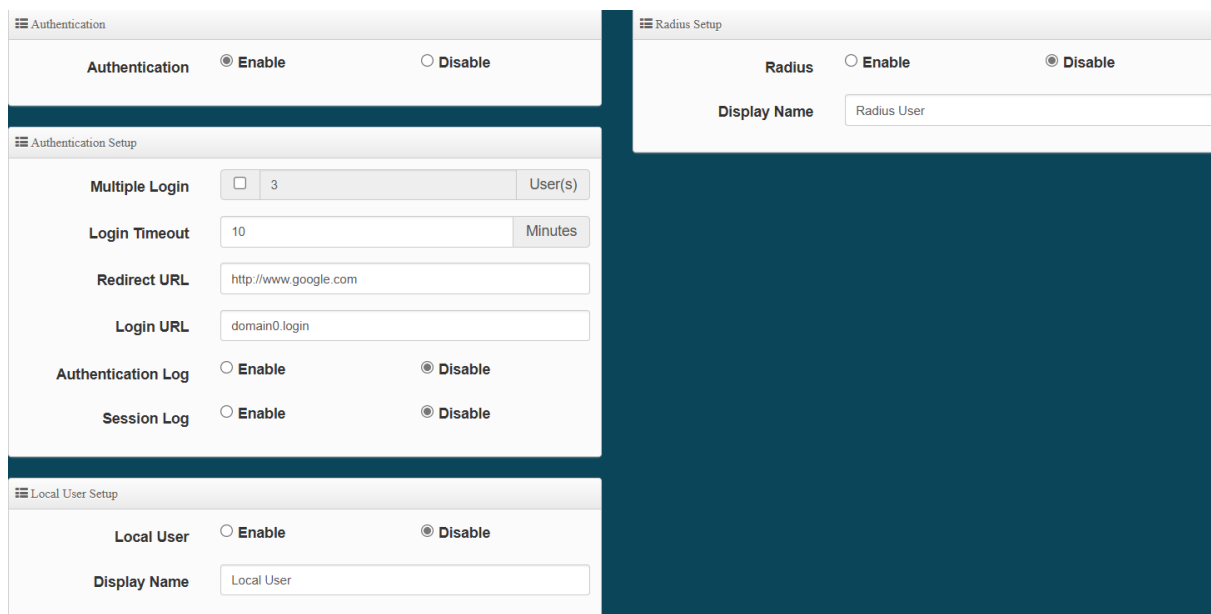

The screenshot displays three configuration panels:


- Authentication**: Includes radio buttons for **Enable** (selected) and **Disable**.
- Authentication Setup**: Contains fields for **Multiple Login** (checkbox, value 3, unit User(s)), **Login Timeout** (input 10, unit Minutes), **Redirect URL** (input http://www.google.com), **Login URL** (input domain0.login), and radio buttons for **Authentication Log** and **Session Log**, both with **Disable** selected.
- Local User Setup**: Includes radio buttons for **Local User** (Enable/Disable) with **Disable** selected, and a **Display Name** field containing "Local User".

On the right side, the **Radius Setup** panel is partially visible, showing radio buttons for **Radius** (Enable/Disable) with **Disable** selected, and a **Display Name** field containing "Radius User".



For instructions on setting this "Authentication function", please refer to Chapter 3.4 Detailed Description of "Authentication" Function.


4.7 Status

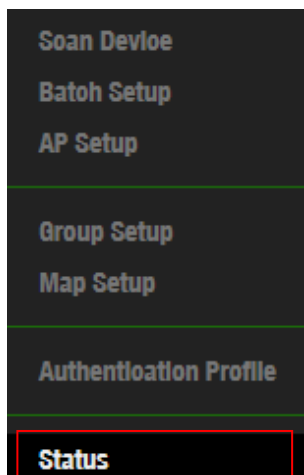

Administrator can monitor Tx/Rx flow information, show online users and check system CPU / Memory information and on/off line for the managed APs. The information data display support graphical interface.

| VLAN List | | | | | | | |
|-------------|--------|-------------|----------------|--------|---------------------------------|---------|------------------------|
| | | VLAN | | ALL | | | |
| Device List | | | | | | | |
| VLAN# | Status | System Name | IP Address | Uptime | Radio Information | User(s) | Action |
| VLAN0 | | CW-500-R1 | 192.168.20.254 | 11:14 | 5(573.5 Mb/s) / 36(1201.0 Mb/s) | 2 | Detail |

- **VLAN#** : Displays the VLAN information to which the managed AP belongs.
- **Status** : Displays the operating status of the managed AP, whether offline or online.
- **System name** : Displays the name information of the managed AP.
- **IP address** : Displays the IP address information used by the managed AP.
- **Uptime** : Displays the operating time of the managed AP.
- **Radio information** : Displays the WiFi channel information enabled by the managed AP.
- **User(s)** : Displays the current client users of Wi-Fi connections to the managed AP.
- **Action** : Click “Detail” to enter, including viewing the system’s CPU/Memory usage and displaying traffic charts as images.

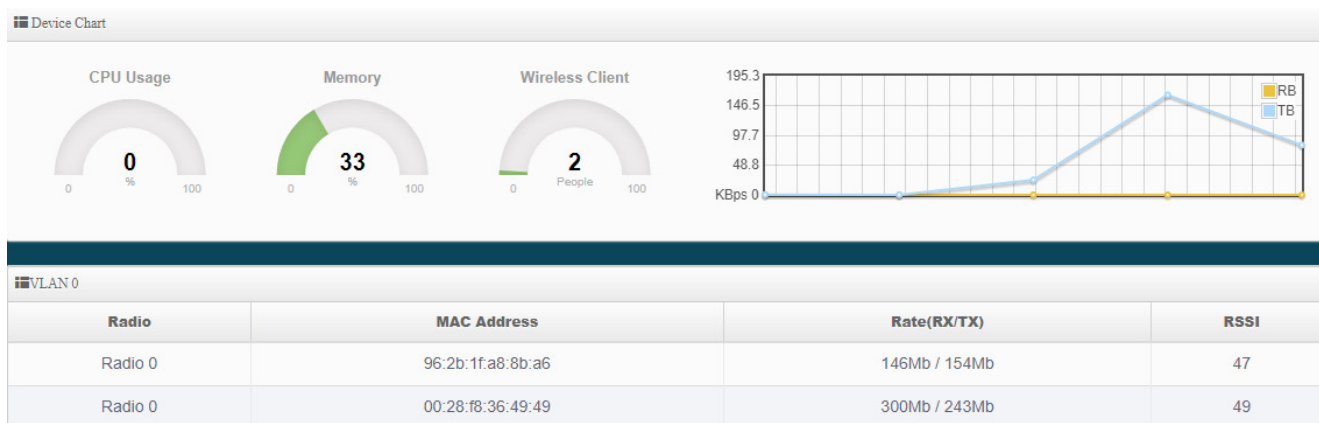


- **Radio** : Displays the Radio information accessed by the connected wireless network. Radio is a 2.4Ghz AP and Radio1 is a 5Ghz AP.
- **MAC Address** : WiFi users connected to the WiFi AP for access client card MAC address information.
- **Rate(RX) Reception** : Displays the WiFi receiving connection speed of the managed AP.
- **Rate(TX) Transmission** : Displays the managed AP wireless transmission connection speed.
- **RSSI** : The connection quality of the wireless network access connected to the WiFi AP station, expressed in RSSI. The higher the value, the better the quality.

5. Account

This function is a RADIUS server, and allows managed Cerio APs to utilize the RADIUS server authentication of **DR-4000-CA**, and its many authentication types. When managed Cerio APs enable authentication through external RADIUS server, administrators must first set the IP address of **DR-4000-CA** in each managed access point to properly redirect authentication clients.

Cerio's **DR-4000-CA** Account functions support Package, Pregenerated Tickets and remote LDAP(AD) authentication type.

5.1 RADIUS Server

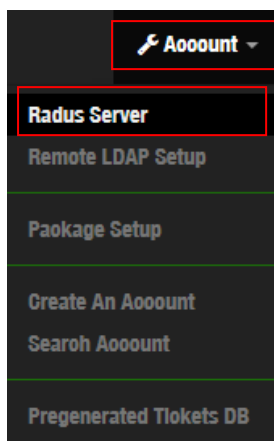

- **Service:** Administrator can select Enable or Disable the RADIUS Server.
- **Authentication Port:** Administrator can set authentication port for RADIUS Server, the default port is 1812.
- **Accounting Port:** Administrator can set accounting port for RADIUS Server, the default port is 1813.
- **Radius Secret:** Administrator can set password (Secret key) for RADIUS Server.

5.2 Remote LDAP Setup

Remote LDAP Setup enables Remote LDAP authentication for managed access points.

Administrators wishing to enable Remote LDAP authentication must copy and paste

DR-4000-CA's LDAP Server **"RADIUS Port"** number into the managed APs **"Authentication Port"** box, which is found in the managed Cerio APs **"Radius Setup"** window.

Administrator can set up 4 remote LDAP Server.



- **Service:** Administrator can select Enable or Disable the authentication function.
- **Radius Port:** Administrators can set the Radius server port of the **DR-4000-CA** to provide Cerio managed APs links. If Cerio managed APs set this Radius Port will can use remote LDAP(AD) type to authentication.
- **Radius Secret:** Administrator can set password (Secret key) for RADIUS Server.

| LDAP Server List | | | | |
|------------------|---------|------------|---------|--------|
| # | Service | IP Address | Base DN | Action |
| 1 | Off | | | Edit |
| 2 | Off | | | Edit |
| 3 | Off | | | Edit |
| 4 | Off | | | Edit |

➤ **Edit:** Administrator can click Edit to set remote LDAP Server information.

LDAP Server Setup

Service Enable Disable

IP Address

Port

Username

Password

Base DN

Account Attribute

Identity

- **Service:** Administrator can select Enable or Disable the function.
- **IP Address:** Set IP address for remote LDAP(AD) server.
- **Port:** Set Port for remote LDAP(AD) server.
- **Username:** Set login account for remote LDAP(AD) server.
- **Password:** Set login account use password for remote LDAP(AD) server.
- **Base DN:** Set Base DN path for remote LDAP(AD) server.
- **Account Attribute:** Set LDAP cn account for remote LDAP(AD) server.

LDAP Setting

Administrator can set remote LDAP(AD) timeout.

LDAP Settings

Timeout Seconds

Time Limit Seconds

Net Timeout Seconds

5.3 Package Setup

Administrator can set internet time rules for package authentication type.

| Package List | | | | | | | Create New Package |
|--------------|--------|-------------------------|--------------|----------------|--------------|------------|--------------------|
| # | Name | Description | Session Time | Traffic Volume | Expire After | Expiration | Action |
| 0 | TEST-1 | no time | | 0B | | | Edit |
| 1 | test-2 | 60Mbps Trafflo | | 60.00MB | | | Edit |
| 2 | test-3 | use 120 minutes time | 2Hour(s) | 0B | | | Edit |
| 3 | Test-4 | use 120 minutes expl... | | 0B | 2Hour(s) | | Edit |

- **Create New Package:** Administrator can click “**Create New Package**” button to set package rules.
- **# :** Package list (0~9) is Network control server (SP-800) code, administrator can choose code to print account.

Package Setup

Package Name (4-32 chars)

Description (4-64 chars)

Traffic Volume MB

Session Time Minutes

Expire After Minutes

Expiration

- **Package Name:** Administrator can set Identify name for the package rules.
- **Description:** Administrator can set the description for package rules.
- **Traffic Volume:** Administrator can set authentication account use traffic limit for the package rules.
- **Session Time:** Administrator can set authentication account use session limit for the package rules. (After the account is signed in, the system will begin counting until the set time is used up. The counting will stop when users log out, and begin counting again once the user signs back in.)
- **Expire After:** Administrator can set authentication account use how many hours expire.(After the account is signed in, the system start counted time until the end time.)
- **Expiration:** Administrator can select Unlimited or Per Day or Until Time.

| | | |
|------------|------------|---|
| Expiration | Unlimited | ▼ |
| | Unlimited | |
| | Per Day | |
| | Until Time | |

- ✓ **Unlimited:** After the account is signed in, the system does not count the time
- ✓ **Per Day:** After the account is signed in, the system start counted time until the end time.
- ✓ **Until Time:** After the account is signed in, the system will begin counting until the set time is used up. The counting will stop when users log out, and begin counting again once the user signs back in.

Account Rule

User Name Length

User Name Type

Digit Letters Mix
 No L/I/1 No O/0 No U/V

Password Length

Password Type


Digit Letters Mix
 No L/I/1 No O/0 No U/V

- **User Name Length:** Administrator can set account length limit for package rules.
- **User Name Type:** Administrator can create account use digit or Letters or Mix for package rules. If administrator select Letters or Mix can filter L/I/digit 1 and O/ digit 0 and U/V for letters and Mix.
- **Password Length:** Administrator can set password length limit for account.
- **Password Type:** Administrator can set password use digit or Letters or Mix for account. If administrator select Letters or Mix can filter L/I/digit 1 and O/ digit 0 and U/V for letters and Mix.

5.4 Create An Account

Administrator can set and create an account of validity for the RADIUS Server.

Please click “Account” → “Create an account”

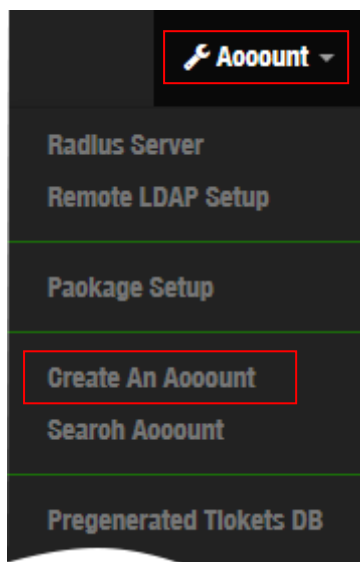

Account Setup

User Name

Password

Package

Traffic Volume

Session Time

Expire After

Expiration Disable Enable

- **User Name** : Administrator can set an account for RADIUS Server.
- **Password** : Enter Password for user name account.
- **Package**: Administrator can choose apply mechanically Package function policy.
- **Traffic Volume**: Administrator can set authentication account use traffic limit for the package rules.
- **Session Time**: Administrator can set authentication account use session limit for the package rules. (After the account is signed in, the system will begin counting until the set time is used up. The counting will stop when users log out, and begin counting again once the user signs back in.)

- **Expire After:** Administrator can set authentication account use how many hours expire.(After the account is signed in, the system start counted time until the end time.)
- **Expiration:** Administrator can select Unlimited or Per Day or Until Time.


| | |
|-------------------|---|
| Expiration | <input type="text" value="Unlimited"/> |
| | <ul style="list-style-type: none"> <li style="background-color: #0070C0; color: white; padding: 2px;">Unlimited <li style="padding: 2px;">Per Day <li style="padding: 2px;">Until Time |


- **Unlimited:** After the account is signed in, the system does not count the time
- **Per Day:** After the account is signed in, the system start counted time until the end time.
- **Until Time:** After the account is signed in, the system will begin counting until the set time is used up. The counting will stop when users log out, and begin counting again once the user signs back in.

5.5 Search Account

Administrator can search all account in the databases. The search function built-in smart-search engine, administrator can set want to query account the conditions.

Please click **“Account”** → **“Search Account”**

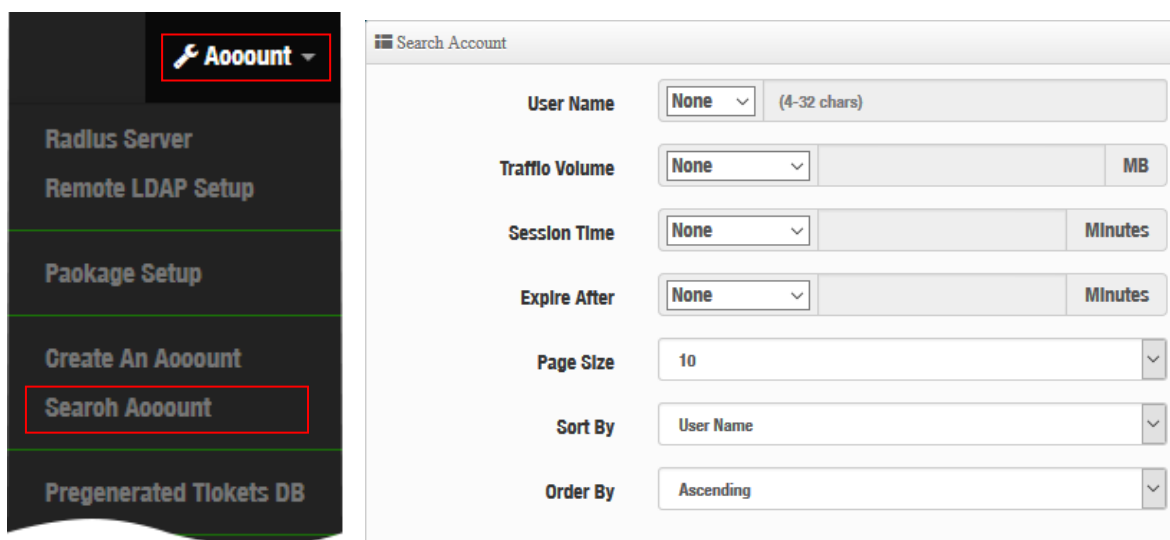

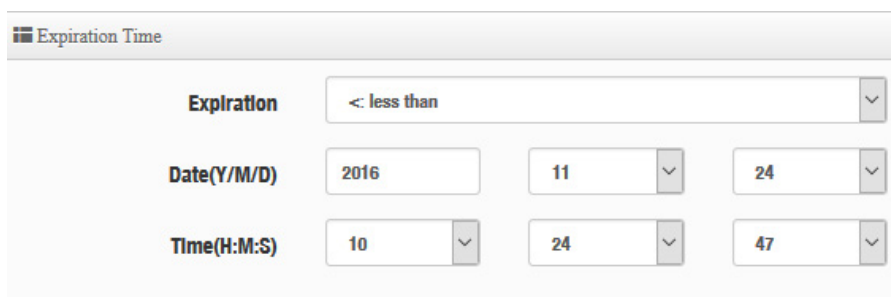

Expiration Time

Expiration: < less than

Date(Y/M/D): 2016 11 24

Time(H:M:S): 10 24 47


Administrators can choose different data type in the search engines.

- **None:** The program doesn't judge characters, search all the information
- **Greater then:** Search values for greater than
- **Equal:** Search values for equal.
- **Less then:** Search values for less then.
- **Between:** Search values for between.
- **Like:** Search similar strings.

5.6 Regenerated Tickets DB

Administrators can use system auto create accounts in a databases.

Please click “Account” → “Regenerated Tickets DB” to create databases.

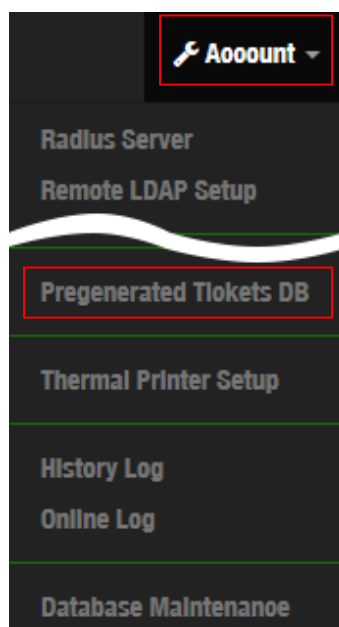

Import DB

Type: SQL

File: 瀏覽... 未選擇檔案。 Import

未選擇檔案。

DB List Create New Project

| # | Project | Session Time | Traffic Volume | Expire After | Expiration | Count | Action |
|---|---------|--------------|----------------|--------------|------------|-------|--------|
| - | - | - | - | - | - | - | - |

Administrator can click Create New Project to set function.

Project Setup

Project Name

Traffic Cycle

Traffic Volume MB

Session Time Cycle

Session Time Minutes

Expire After Minutes

Expiration Disable Enable

- **Project Nama:** Administrator can set a Databases name.

Traffic Cycle

Traffic Volume

Session Time Cycle

Total
Total
Daily
Weekly
Monthly

- **Traffic Cycle:** There is a reset period for traffic usage, and the pre-vouched account password will be eligible for repeated active use due to this reset period.
 - ✓ **Total :** Based on a one-time total calculation, the total amount of pre-ticketed account traffic will no longer be usable after it is exhausted.
 - ✓ **Daily :** Set "Daily" as the limit traffic reset to zero cycle period. The system fixes 00:00 every day as the "Day" reset point.
 - ✓ **Weekly :** Set "weekly" as the cycle period for the quota traffic to be reset to zero. The system fixes 00:00 every Sunday as the "week" reset point.
 - ✓ **Monthly :** Set "monthly" as the cycle period for resetting the limit traffic to zero. The system fixes 00:00 on the last day of each month as the "month" reset point.
- **Traffic Volume:** Administrator can set authentication account use traffic limit for the package rules.

| | |
|---------------------------|---------|
| Session Time Cycle | Total |
| Session Time | Total |
| Expire After | Daily |
| | Weekly |
| | Monthly |

- **Session Time Cycle:** The session time uses a reset period, and the pre-ticket account password will be eligible for repeated and active use due to this reset period.
 - ✓ **Total :** Calculated based on a one-time total, the pre-voucher account password Session time expires and can no longer be used.
 - ✓ **Daily :** Set "Daily" as the Session available time reset to zero cycle period, and the system fixes 00:00 every day as the "Day" reset span point.
 - ✓ **Weekly :** Set "weekly" as the reset zero cycle period for the session's available time. The system fixes 00:00 every Sunday as the "week" reset span point.
 - ✓ **Monthly :** Set "monthly" as the reset zero cycle period for the session's available time. The system fixes 00:00 on the last day of each month as the "month" reset point.
- **Session Time:** Administrator can set authentication account use session limit for the package rules. (After the account is signed in, the system will begin counting until the set time is used up. The counting will stop when users log out, and begin counting again once the user signs back in.)
- **Expire After:** Administrator can set authentication account use how many hours expire.(After the account is signed in, the system start counted time until the end time.)
- **Expiration:** Administrator can select Unlimited or Per Day or Until Time.

| | |
|-------------------|------------|
| Expiration | Unlimited |
| | Unlimited |
| | Per Day |
| | Until Time |

- **Unlimited:** After the account is signed in, the system does not count the time
- **Per Day:** After the account is signed in, the system start counted time until the end time.
- **Until Time:** After the account is signed in, the system will begin counting until the set time is used up. The counting will stop when users log out, and begin counting again once the user signs back in.

Pre-generated Rule

User Name Length

User Name Type Digit Letters Mix

No L/I/1 No O/0 No U/V

Password Length

Password Type Digit Letters Mix

No L/I/1 No O/0 No U/V

Ticket Number


- **User Name Length:** Administrator can set account length limit for package rules.
- **User Name Type:** Administrator can create account use digit or Letters or Mix for package rules. If administrator select Letters or Mix can filter L/I/digit 1 and O/ digit 0 and U/V for letters and Mix.
- **Password Length:** Administrator can set password length limit for account.
- **Password Type:** Administrator can set password use digit or Letters or Mix for account. If administrator select Letters or Mix can filter L/I/digit 1 and O/ digit 0 and U/V for letters and Mix.
- **Ticket Number:** Administrator can set number in the databases, the system will auto create accounts

5.7 Thermal Printer Setup


The function must match Account Ticket Generator POS System for Cerio's SP-800-PRINTER / SP-800-QRCPR.

Application architecture is as follows.

Match SP-800-PRINTER

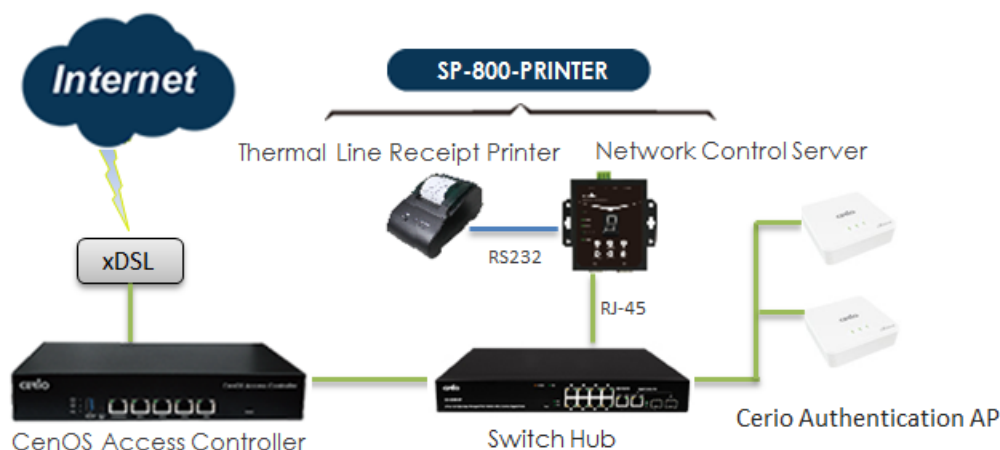

Match SP-800-QRCPT

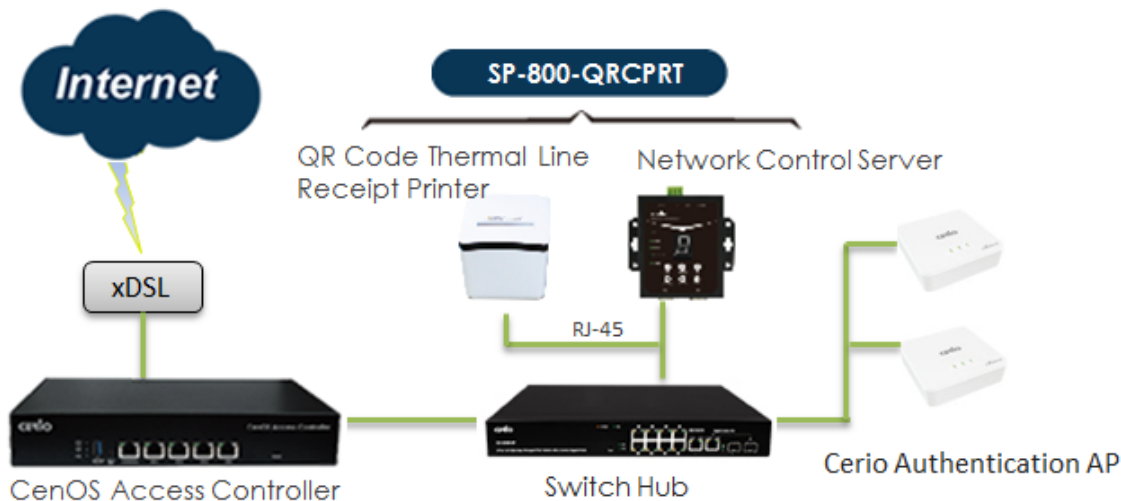

| Printer Setup | |
|-------------------|------------------------|
| IP Address | 192.168.2.253 |
| Command Port | 5000 |
| Printer Type | Normal Thermal Printer |
| GOM Port | COM1 |
| New Look Password | 1234 |
| Description | |

- **IP Address:** Please set IP address for Network control server (SP-800)
- **Command Port:** Enter command port for Network control server (SP-800)
- **Printer Type:** Administrator can select Normal Thermal Printer or QR Code Thermal Printer.

- **Normal Thermal Printer:** If use Cerio’s SP-800-PRINTER POS system, administrator can select Normal Thermal Printer function.
- **QR Code Thermal Printer:** If use Cerio’s SP-800-QRCPRT POS system, administrator can select QR Code Thermal Printer function.
- **COM Port:** Administrator can select connected COM1/2 or RJ-45 for Printer Port.
 - **RJ-45:** If printer type selected QR Code Thermal Printer, administrator can select use RJ-45 and set Printer IP address.

| | |
|---------------------------|---------------|
| COM Port | RJ-45 |
| Printer IP Address | 192.168.2.252 |
| Printer Port | 9100 |
| QRCode Type | Small |

- ✓ **Printer IP Address:** Administrator can set IP address for QR code Printer.
- ✓ **Printer Port:** Administrator can set Port for QR code Printer. The default Port is 9100 for Cerio’s SP-800-QRCPRT
- ✓ **QR Code Type:** Administrator can select print QR Code size or close.
- **New Look Password:** The password is Network control server(SP-800) connect to **DR-4000-CA** use key lock. Administrator can change password, default password is 1234
- **Description:** Administrator can enter Description.

Package List

Print tickets account must have created Package; administrator can refer to “[4.3 Package Setup](#)” description.

| Package List | | | |
|--------------|--------------------------|--------|-------------------------|
| Package# | Enable | Name | Description |
| 1 | <input type="checkbox"/> | TEST-1 | no time |
| 2 | <input type="checkbox"/> | test-2 | 60Mbps Trafflo |
| 3 | <input type="checkbox"/> | test-3 | use 120 minutes time |
| 4 | <input type="checkbox"/> | Test-4 | use 120 minutes expl... |

Administrator can choose box to enable Packages rule.

5.8 History Log

The Page can display account login/logout information.

| History Log | | | | | | | | | | |
|-------------|----------|------------|-------------|----|-----|-------------|--------------|-------|--------|--------|
| # | Username | Login Time | Logout Time | IP | MAC | Input Bytes | Output Bytes | AP IP | AP MAC | Status |
| - | - | - | - | - | - | - | - | - | - | - |

5.9 Online Log

The Page can display online user information. The online user information must match Cerio's AP's; Administrator must enable RADIUS Accounting Port 1813 in the Cerio's AP's, as follows

Cerio's APs for CenOS5.0 interface

Radius Setup

Radius Enable Disable

Display Name:

Primary Server IP:

Secondary Server IP:

Authentication Port: Port

Accounting Service: Port

Authentication Type: PAP CHAP

Secret Key:

DR-4000-CA online Log page

| Online Log | | | | | | | | | | |
|------------|----------|------------|--------------|----|-----|-------------|--------------|-------|--------|--------|
| # | Username | Login Time | Session Time | IP | MAC | Input Bytes | Output Bytes | AP IP | AP MAC | Status |
| - | - | - | - | - | - | - | - | - | - | - |

5.10 Database Maintenance

Administrator can clear account for Expiration / Pregenerated / All databases.

Account Database

| | | |
|--------------------------------|---|--|
| Expiration of Account | 0 | Clear |
| Pregenerated of Account | 0 | Clear |
| All of Account | 0 | Clear |



Administrator click "Clear" button, the databases all account will be deleted.


6. Advance

6.1 IP Filter

Can allow or deny filter ingress or egress packets from specific source and/or to destination IP address on wired (LAN) or Wireless (WAN) ports. Filter rules support IP/ Port Groups, could be used to filter unicast or multicast packets on different protocols as shown in the IP Filter Setup. Important to note that IP filter rules has precedence over Access control rules.

Administrator can set IP Filter rules: 64

Please click "Advance" → "IP Filter" setup.

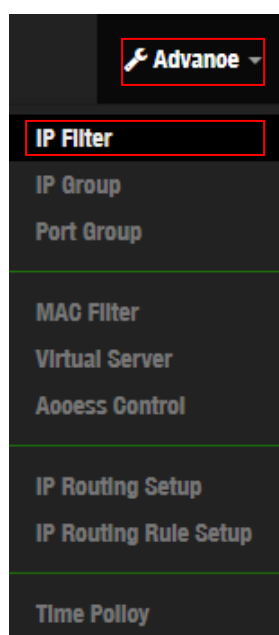

| # | Active | Comment | Protocol | Action | Source Address/Mask | Source Port | Destination Address/Mask | Destination Port | Edit |
|----|----------|---------|----------|--------|---------------------|-------------|--------------------------|------------------|---|
| 1 | Inactive | - | ALL | Deny | - | - | - | - | Edit |
| 2 | Inactive | - | ALL | Deny | - | - | - | - | Edit |
| 3 | Inactive | - | ALL | Deny | - | - | - | - | Edit |
| 4 | Inactive | - | ALL | Deny | - | - | - | - | Edit |
| 5 | Inactive | - | ALL | Deny | - | - | - | - | Edit |
| 6 | Inactive | - | ALL | Deny | - | - | - | - | Edit |
| 7 | Inactive | - | ALL | Deny | - | - | - | - | Edit |
| 8 | Inactive | - | ALL | Deny | - | - | - | - | Edit |
| 9 | Inactive | - | ALL | Deny | - | - | - | - | Edit |
| 10 | Inactive | - | ALL | Deny | - | - | - | - | Edit |
| 11 | Inactive | - | ALL | Deny | - | - | - | - | Edit |
| 12 | Inactive | - | ALL | Deny | - | - | - | - | Edit |
| 13 | Inactive | - | ALL | Deny | - | - | - | - | Edit |

- Please click **Edit** button to setting IP filter.

The screenshot shows the 'IP Filter Rules' configuration form. It includes a section for 'Active' status with radio buttons for 'Enable' and 'Disable', where 'Disable' is selected. Below this is a 'Comment' field represented by an empty text input box.

- **Active:** Administrator can selected Enable or Disable for the IP filter rules function.
- **Comment:** Enter rule description.

IP Filter Rules

The screenshot shows the 'IP Filter Rules' configuration form. It includes a 'Policy' section with radio buttons for 'Deny' and 'Pass', where 'Deny' is selected. Below this are two dropdown menus: 'Protocol' set to 'ALL' and 'Schedule' set to 'Always'.

- **Policy:** Administrator can select Deny or Pass for IP filter rules.
- **Protocol:** Administrator can select type for IP protocol.
- **Schedule:** Can choose to use rule by “Time Policy”.

Source Rule

The screenshot shows the 'Source Rule' configuration form. It includes a 'Self' status section with radio buttons for 'Enable' and 'Disable', where 'Disable' is selected. Below this are three fields: 'Source Address/Mask' (text input), 'Source IP Group' (dropdown menu set to 'None'), and 'Interface' (dropdown menu set to 'WAND').

- **Self:** Administrator can choose Enable or Disable, if administrator select Enable, the source is self.
- **Source Address/Mask:** Administrator can set IP address and Mask for source.
- **Source IP Group:** Administrator can select belonging to group for IP Address.
- **Interface:** Administrator can select interface for source.

Destination Rule

Self Enable Disable

Destination Address/Mask


Destination IP Group

Interface

- **Self:** Administrator can choose Enable or Disable, if administrator select Enable, the source is self.
- **Destination Address/Mask:** Administrator can set IP address and Mask for destination.
- **Destination IP Group:** Administrator can select belonging to group for IP Address.
- **Interface:** Administrator can select interface for destination.

6.2 IP Group

Administrator can create IP group for IP address range or subnet.

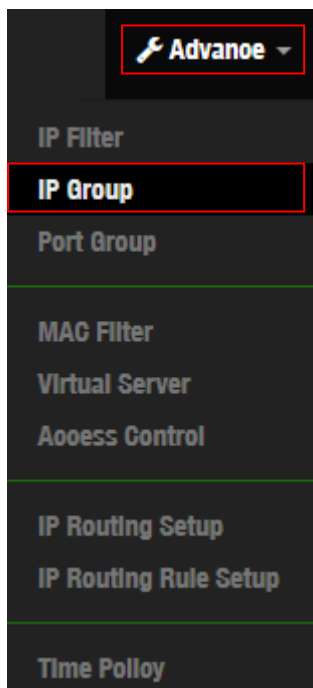

| # | Comment | Edit |
|---|------------|----------------------|
| 1 | IP Group 0 | Edit |
| 2 | IP Group 1 | Edit |
| 3 | IP Group 2 | Edit |
| 4 | IP Group 3 | Edit |
| 5 | IP Group 4 | Edit |

Please click “**Edit**” button to create new IP Groups.

IP Group Setting

Comment

➤ **Comment:** Enter IP Group description.

IP Address Setup

IP Address Type

IP Address

Comment

➤ **IP Address Type:** Administrator can select single / range / subnet type to set IP Address.

IP Address Type

Single IP Address

Single IP Address


Range

Subnet

- **Single IP Address:** Enter single IP Address.
- **Range:** Enter start / end IP address.
- **Subnet:** Enter Net/Mask.


6.3 Port Group

Administrator can create Port group

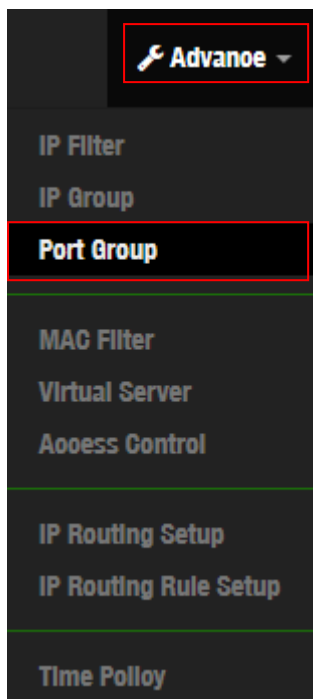

| # | Comment | Edit |
|---|--------------|----------------------|
| 1 | Port Group 0 | Edit |
| 2 | Port Group 1 | Edit |
| 3 | Port Group 2 | Edit |
| 4 | Port Group 3 | Edit |
| 5 | Port Group 4 | Edit |
| 6 | Port Group 5 | Edit |


Please click “**Edit**” button to create new Port Groups.

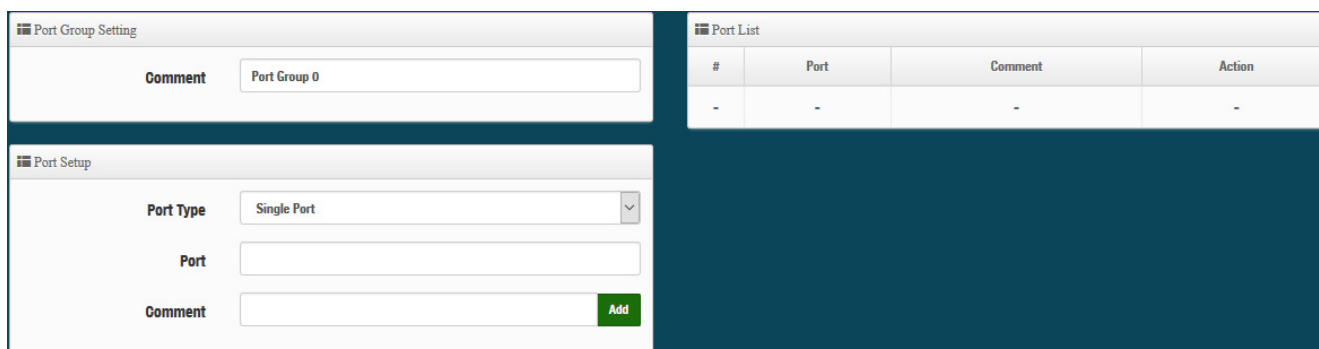

- **Comment:** Enter Port Group description.
- **Port Type:** Administrator can select single or range Port.
- **Port:** Administrator can set service port.

6.4 MAC Filter

Allows creating MAC filter rules to allow or deny unicast or multicast packets from limited number of MAC addresses. Important and must note. That MAC filter rules have precedence over IP Filter rules.

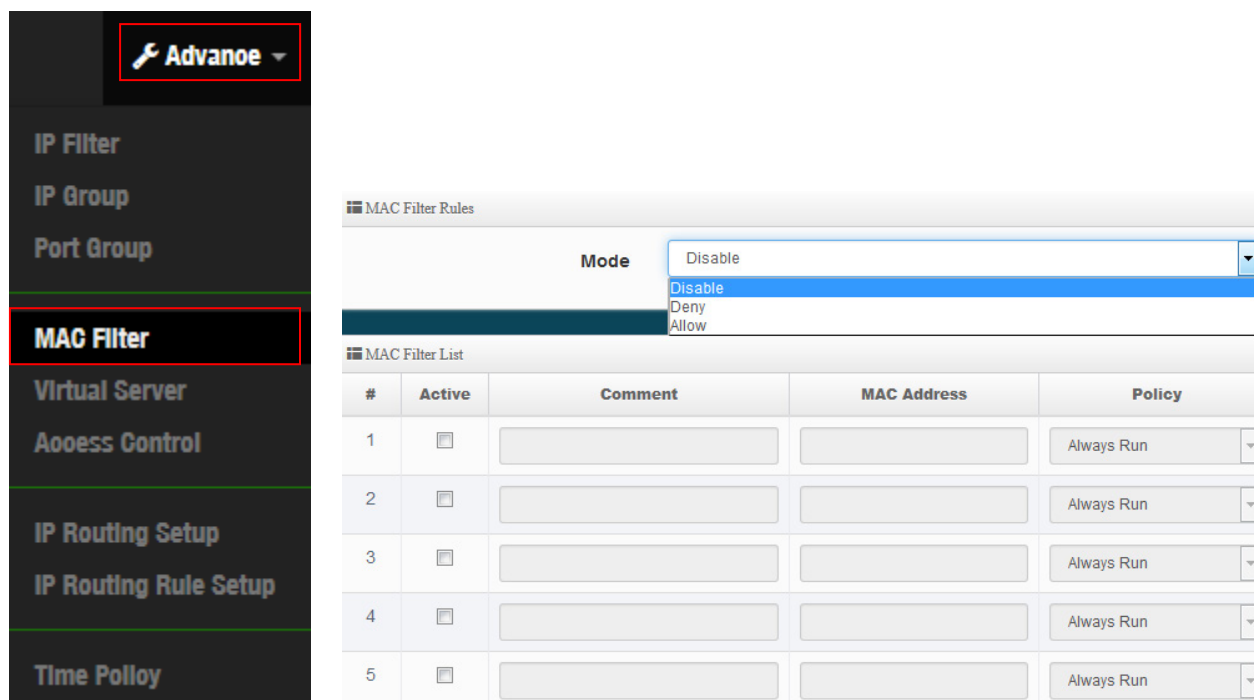

| # | Active | Comment | MAC Address | Policy |
|---|--------------------------|---------|-------------|------------|
| 1 | <input type="checkbox"/> | | | Always Run |
| 2 | <input type="checkbox"/> | | | Always Run |
| 3 | <input type="checkbox"/> | | | Always Run |
| 4 | <input type="checkbox"/> | | | Always Run |
| 5 | <input type="checkbox"/> | | | Always Run |

- **Mode:** Administrator can select Deny or Allow.
 - **Deny:** The MAC Filter List will be **denied** to access (LAN to WAN). Others will be allowed.
 - **Allow:** The MAC Filter List will be **allowed** to access (LAN to WAN). Others will be denied.
- **Comment:** Enter the description of MAC filter rule.
- **MAC Address:** Enter MAC address (e.g. aa:bb:cc:00:00:0a) and click “**Add**” button, then the MAC address should display in the MAC Filter List.
- **Policy:** Administrator can select to use rule by “**Time Policy**”.

6.5 Virtual Server

The “**Virtual Server**” can also referred to as “Port Forward” as well and used interchangeably. Resources in the network can be exposed to the Internet users in a controlled manner including on-line gaming, video conferencing or others via Virtual Server setup. Don’t repeat ports’ usage to avoid confusion.

Suppose you want to assign ports 21-25 to one FTP, Telnet and SMTP server (A in the example), and port 80 to another (B in the example). You assign the LAN IP addresses and the ISP assigns the WAN IP address. The NAT network appears as a single host on the Internet.

Virtual Server Rules

Active Enable Disable

Comment

Protocol TCP UDP

Interface

Public Port

Private IP Address

Private Port


Schedule

- **Active:** Administrator can select Virtual server rule to Enable or disable.
- **Comment:** Enter the description of virtual server rule.
- **Protocol:** Administrator can select service protocol of TCP or UDP.
- **Public Port:** Enter service port No. for public.
- **Private IP Address:** Enter corresponding IP address for internal.
- **Private Port:** Enter internal service port No. for private.
- **Schedule :** Administrator can select to used rule of “**Time Policy**”

6.6 Access Control


The Access Control function administrator can to block or allow specific kinds of TCP/UDP/ICMP protocol, such as Internet access, designated services, and websites. The Access Control function can set 20 profiles.

Please click on **Advance** -> **Access Control** and follow the below setting.

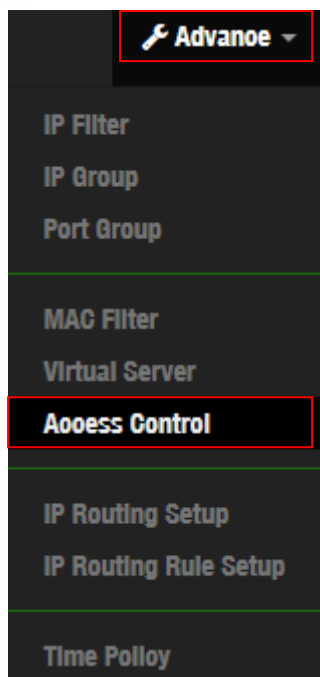


| Access Control List | | | | |
|---------------------|----------|---------|----------|------|
| # | Active | Comment | Protocol | Edit |
| 1 | InActive | - | ANY | Edit |
| 2 | InActive | - | ANY | Edit |
| 3 | InActive | - | ANY | Edit |
| 4 | InActive | - | ANY | Edit |
| 5 | InActive | - | ANY | Edit |

- # : Display access control list.
- **Active** : Display Active or InActive for the access control rule.
- **Comment**: Display information for the rule.
- **Protocol** : Display information for the protocol.
- **Edit** : Administrator can click the button to set Access Control rule.

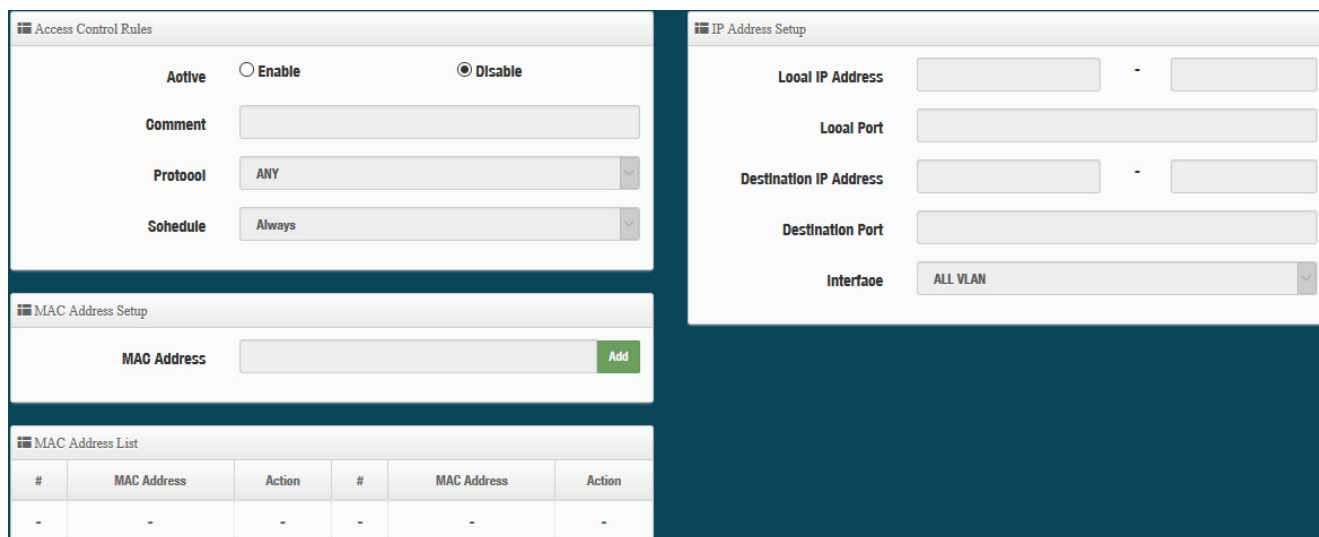

Access control rules :


- **Active** : Administrator can select Enable or Disable for the Access control rule.
- **Comment** : Administrator can enter comment for the role.
- **Protocol** : Administrator can to select management protocol by TCP/UDP/ICMP/Content Filter/Application and Domain Filter.

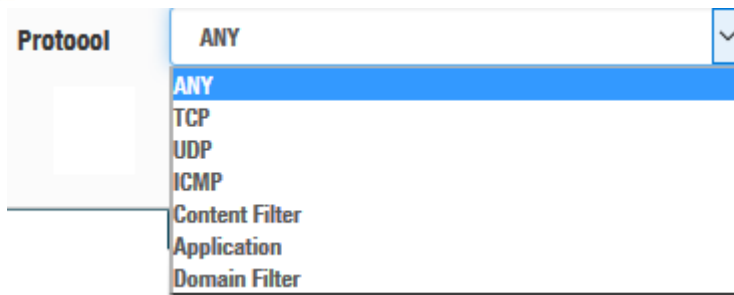

- ✓ **ANY:** Select "Any" is all deny Protocol, administrator can filter local IP / IP range go to destination IP / IP range and use protocol.
- ✓ **TCP:** Deny TCP Protocol, Administrator can set TCP protocol and assign IP / IP range.
- ✓ **UDP:** Deny UDP Protocol, Administrator can set UDP protocol and assign IP / IP range.
- ✓ **ICMP:** Deny ICMP Protocol, Administrator can assign IP / IP range.
- ✓ **Content Filter:** Administrator can set web Keyword to filter.
- ✓ **Application:** System built-in multiple applications data, Administrator can select application data to filter.
- ✓ **Domain:** Administrator can set domain name to filter.
 - **Schedule :** The rule can apply Time Policy.

6.7 IP Routing Setup

The IP Routing Settings allows configure routing feature in the gateway. The system supports RIP(Routing Information Protocol) and OSPF(Open Shortest Path First) dynamic routing and allows you to manually configure static network routes. Please click on Advance -> IP Routing and follow the below setting.

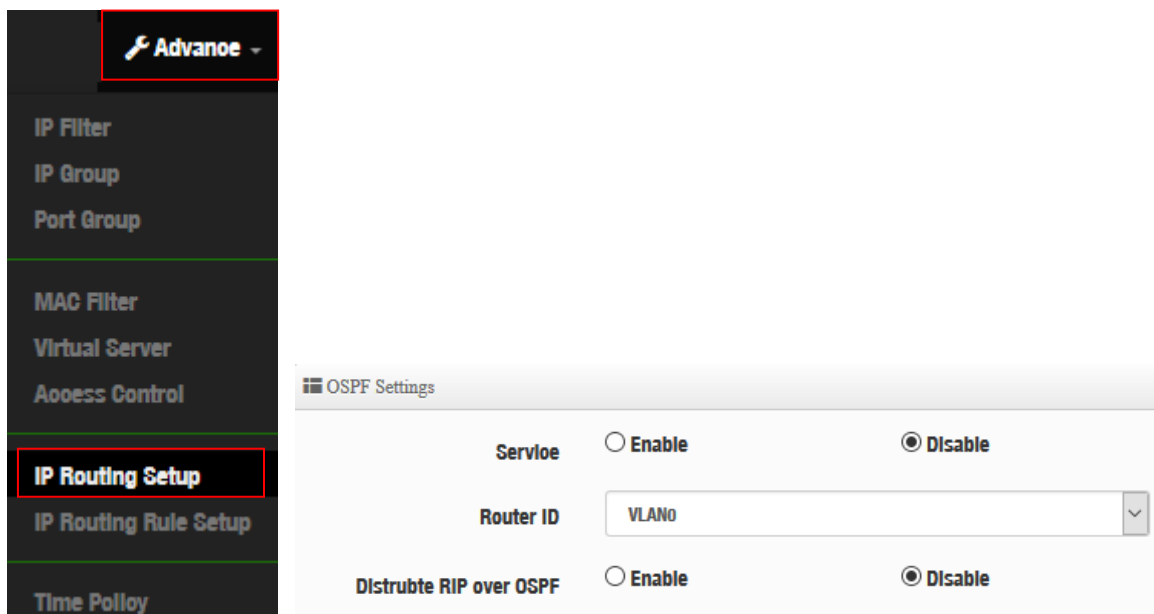


➤ **OSPF Settings :**

OSPF (Open Shortest Path First) is a router protocol used to find the best path for packets as they pass through a set of connected networks.

- **Service:** Administrator can select enable or disable Service for OSPF.
- **Route ID:** Administrator can select WAN0~3 and VLAN0~7 interface (IP) for the Route ID.
- **Distribute RIP over OSPF:** Administrator can select enable or disable, if select enable system can allow RIP routes will redistributed into OSPF.

OSPF Network Setting

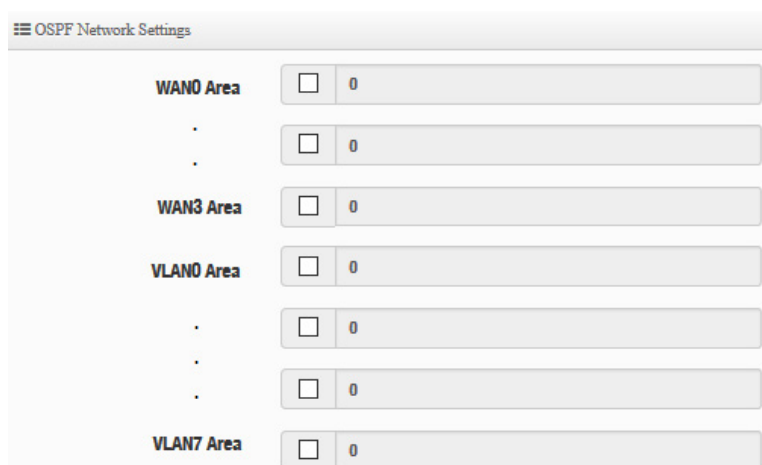


The screenshot shows the 'OSPF Network Settings' configuration page. It features a table with columns for 'Area' and 'Area Code'. The 'Area' column lists WAN0, WAN3, and VLAN0 through VLAN7. The 'Area Code' column shows a checkbox and a text input field containing the number '0'.

| Area | Area Code |
|------------|----------------------------|
| WAN0 Area | <input type="checkbox"/> 0 |
| . | <input type="checkbox"/> 0 |
| WAN3 Area | <input type="checkbox"/> 0 |
| VLAN0 Area | <input type="checkbox"/> 0 |
| . | <input type="checkbox"/> 0 |
| . | <input type="checkbox"/> 0 |
| VLAN7 Area | <input type="checkbox"/> 0 |

- ✓ **#Area:** Represents the area code of the OSPF routing protocol, which can be any digit in decimal, default is 0.

➤ RIP Settings :

RIP defines a way for routers, which connect networks using the IP, to share information about how to route traffic among networks. RIP prevents routing loops by implementing limit on the number of hops allowed in a path from source to destination. The maximum number of hops allowed for RIP is 15, which limits the size of networks that RIP can support. A hop count of 16 is considered an infinite distance and the route is considered unreachable.

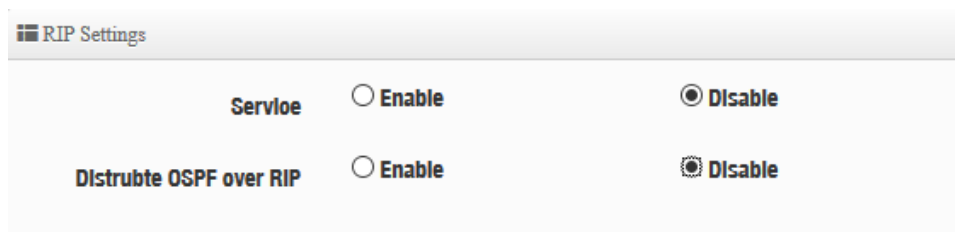

The screenshot shows the 'RIP Settings' configuration page. It contains two rows of radio button options. The first row is labeled 'Service' and has 'Enable' and 'Disable' options, with 'Disable' selected. The second row is labeled 'Distribute OSPF over RIP' and also has 'Enable' and 'Disable' options, with 'Disable' selected.

| | | |
|--------------------------|------------------------------|--|
| Service | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |
| Distribute OSPF over RIP | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |

- **Service:** Administrator can select enable or disable Service for RIP.
- **Distribute OSPF over RIP:** Administrator can select enable or disable, if select enable system can allow OSPF routes will redistributed into RIP.

☰ RIP Side(Devices) Settings

| | | |
|-------|------------------------------|--|
| WAN0 | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |
| . | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |
| WAN3 | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |
| WAN3 | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |
| VLAN0 | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |
| . | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |
| VLAN7 | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |

- ✓ **RIP Side(Devices) Settings:** Administrator can choose enable or deniable for WAN/LAN interface

6.8 IP Routing Rule Setup

⚙️ Advance ▾

IP Filter

IP Group

Port Group

MAC Filter

Virtual Server

Access Control

IP Routing Setup

IP Routing Rule Setup

Time Polloy

☰ IP Routing Rule List

| # | Active | Destination Net/Mask | Via | OSPF | RIP | Edit |
|----|----------|----------------------|-----|------|-----|------|
| 1 | InActive | - | - | off | off | Edit |
| 2 | InActive | - | - | off | off | Edit |
| . | | | | | | |
| . | | | | | | |
| 19 | InActive | - | - | off | off | Edit |
| 20 | InActive | - | - | off | off | Edit |


Please click **Edit** button to setting IP Routing Rule.

☰ IP Routing Rule Settings

| | | |
|----------------------|--|--|
| Service | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |
| Destination Net/Mask | <input type="text"/> | |
| Via | <input checked="" type="radio"/> Gateway | <input type="radio"/> Interface |
| Gateway | <input type="text"/> | |
| OSPF | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |
| RIP | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |

- **Service:** Administrator can select Enable or Disable for the IP Routing Rule.
- **Destination Net/Mask:** If administrator select enable for service, will be able set destination Net/Mask.
- **Via:** Administrator can select use Gateway or Interface
 - **Gateway:** enter Gateway IP address.
 - **Interface:** Select WAN / LAN interface.
- **OSPF/RIP:** Administrator can select enable or disable, if select enable will apply “IP Routing Setup” of OSPF/RIP function.

6.9 Time Policy

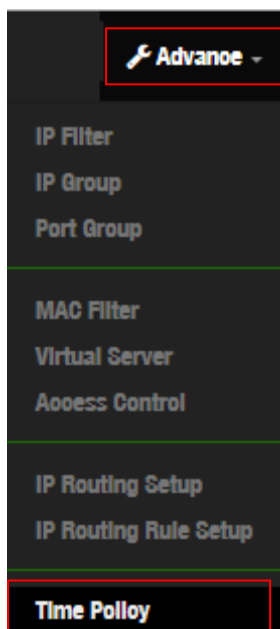

| Policy List | | | |
|-------------|-----------|--------------|----------------------|
| # | Comment | Mode | Edit |
| 1 | Polloy 1 | On Sochedule | Edit |
| 2 | Polloy 2 | On Sochedule | Edit |
| ⋮ | | | |
| 9 | Polloy 9 | On Sochedule | Edit |
| 10 | Polloy 10 | On Sochedule | Edit |

Please click **Edit** button to setting time policy rules.

Time Policy Rules

Comment

Mode On Sochedule Out Of Sochedule


Policy List [Create New Policy](#)

| # | Sun | Mon | Tue | Wed | Thu | Fri | Sat | Time | Action |
|---|-----|-----|-----|-----|-----|-----|-----|------|--------|
| - | - | - | - | - | - | - | - | - | - |

- **Comment:** Enter the description of Time Policy rule. **There are maximum 10 for the time policy.**
- **Mode:** Administrator can select on schedule or Out of schedule to execution the rules.

Create New Policy button:

Administrator can set time for week / start time and end time.

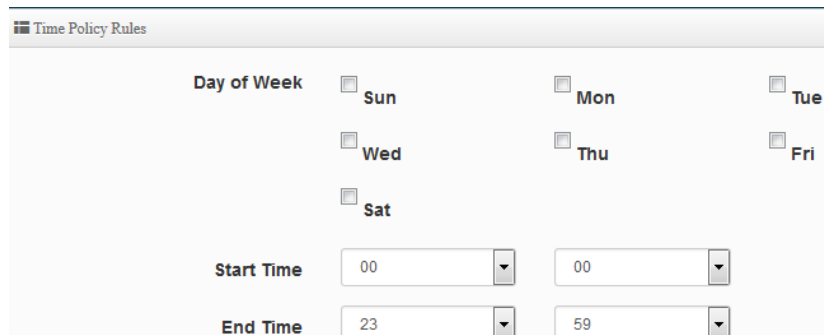

The screenshot shows a configuration window titled "Time Policy Rules". It includes a "Day of Week" section with checkboxes for Sun, Mon, Tue, Wed, Thu, and Fri, and a checkbox for Sat. Below this are "Start Time" and "End Time" sections, each with two dropdown menus for hour and minute selection. The Start Time dropdowns are currently set to 00, and the End Time dropdowns are set to 23 and 59.


Click "Save" button to add schedule to policy. **There are 300 schedule rules maximum allowed in the each time policy.** All schedules can be edited or removed in the each time policy. Click Reboot button to activate your changes.


7. Utility

7.1 Profile Setting

This Functions purpose is to backup current configuration, restore prior configuration or reset back to factory default configurations.

Please click on **Utility** -> **Profile Setting** and follow the below setting

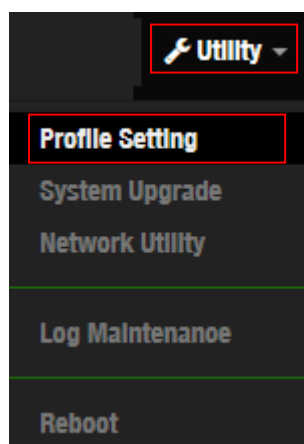


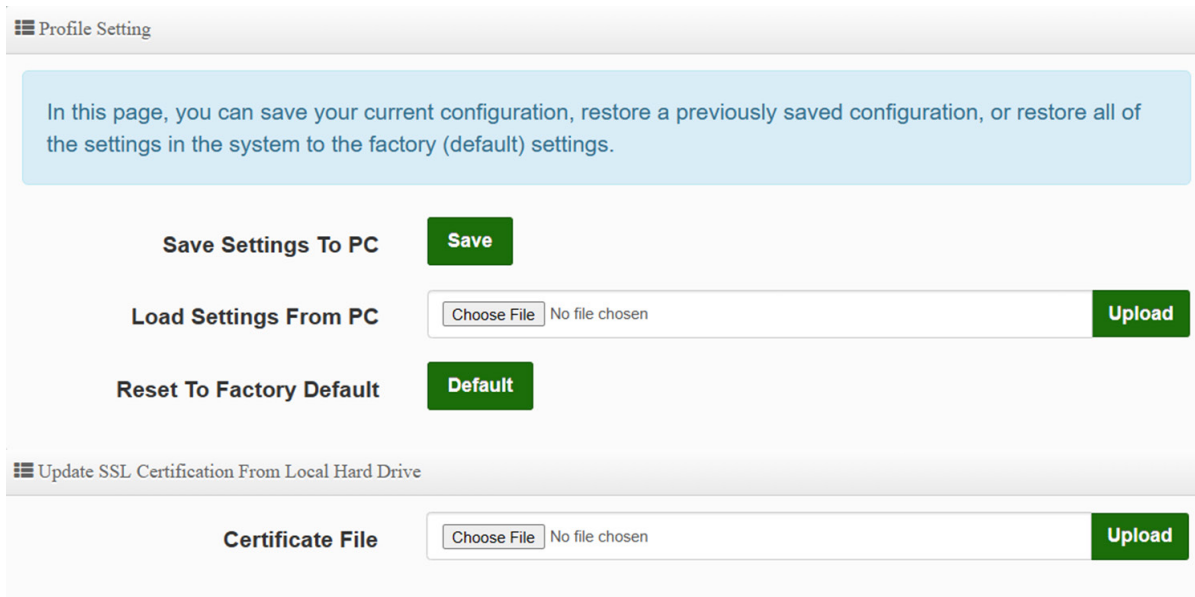

- **Save Settings to PC:** Click **Save** button to save the current configuration to a local disk.
- **Load Settings from PC:** Click **Browse** button to locate a configuration file to restore, and then click **Upload** button to upload.
- **Reset To Factory Default:** Click **Default** button to reset back to the factory default settings and expect **Successful** loading message. Then, click **Reboot** button to activate.

7.2 System Upgrade

Firmware is the main software image that system needs to respond to requests and to manage real time operations. Firmware upgrades are sometimes required to include new features or bugs fix. It takes around 2 minutes to upgrade due to complexity of firmware. To upgrade system firmware, click Browse button to locate the new firmware, and then click Upgrade button to upgrade.

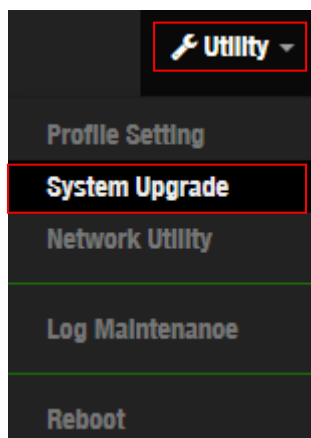

Firmware Information:

Display the system firmware information.

☰ Firmware Information

Sometimes it may be necessary to reboot the system if it begins working improperly. Rebooting the system will not delete any of your configuration settings. Click reboot button to reboot the system.

| | |
|-------------------------|---|
| Firmware Version | <input type="text" value="Pme-CPE-IPQ60XX-CERIO V0.0.2"/> |
| Firmware Date | <input type="text" value="2024/05/06 12:45:19"/> |

☰ Upgrade Via Local PC

| | | |
|--------------------|---|---------------------------------------|
| Select File | <input type="button" value="Choose File"/> No file chosen | <input type="button" value="Upload"/> |
|--------------------|---|---------------------------------------|

☰ Upgrade Via TFTP Server

| | | |
|-----------------------|----------------------|---------------------------------------|
| TFTP Server IP | <input type="text"/> | |
| File Name | <input type="text"/> | <input type="button" value="Upload"/> |

☰ Upgrade Via HTTP URL

| | | |
|------------|----------------------|---------------------------------------|
| URL | <input type="text"/> | <input type="button" value="Upload"/> |
|------------|----------------------|---------------------------------------|

Upgrade Via Local PC and TFTP Server:

The upgrade firmware will support via local PC and TFTP Server and HTTP URL to upgrade system.

- **Select File:** Administrator can select Firmware file in Local PC.
- **TFTP Server:** Enter IP address for TFTP Server.
- **File Name:** Enter file name.
- **URL:** Administrator can enter path for Firmware file.





Notice

1. To prevent data loss during firmware upgrade, please back up current settings before proceeding
2. Do not interrupt during firmware upgrade including power on/off as this may damage system.

7.3 Network Utility

The administrator can diagnose network connectivity via the PING or TRACEROUTE utility. Please click on **Utility** -> **Network Utility** and follow the below setting.

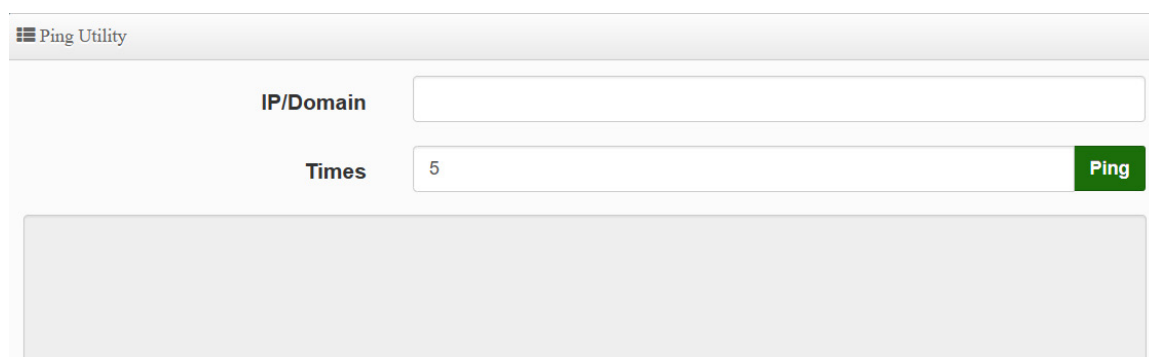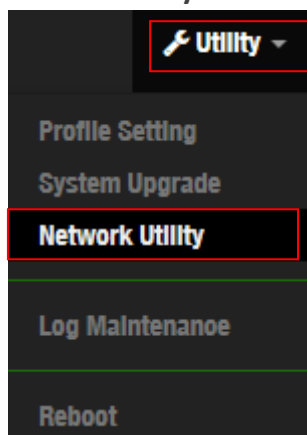

A screenshot of the 'Ping Utility' web interface. It features a title bar 'Ping Utility' with a hamburger menu icon. Below the title bar, there are two input fields: 'IP/Domain' and 'Times'. The 'Times' field contains the number '5'. To the right of the 'Times' field is a green 'Ping' button. Below the input fields is a large, empty grey rectangular area for displaying results.


- **Ping** : This utility will help ping other devices on the network to verify connectivity. Ping utility, using ICMP packets, detects connectivity and latency between two network nodes. As result of that, packet loss and latency time are available in the **Result** field while running the PING test.
 - **IP/Domain**: Enter desired domain name, i.e. www.google.com, or IP address of the destination, and click ping button to proceed. The ping result will be shown in the Result field.
 - **Times**: By default, its 5 and the range is from 1 to 50. It indicates number of connectivity test.

- **Traceroute** : Allows tracing the hops from the DR-4000-CA device to a selected outgoing IP address. It should be used for the finding the route taken by ICMP packets across the network to the destination host. The test is started using the **Start** button, click **Stop** button to stopped test.
 - **Destination Host**: Specifies the Destination Host for the finding the route taken by ICMP packets across the network.
 - **MAX Hops**: Specifies the maximum number of hops (max time-to-live value) trace route will probe.

7.4 Log Maintenance

Administrator can monitor Log storage status for Session/Authentication and System.

Please click on **Utility** ->**Log Maintenance** and follow the below setting.

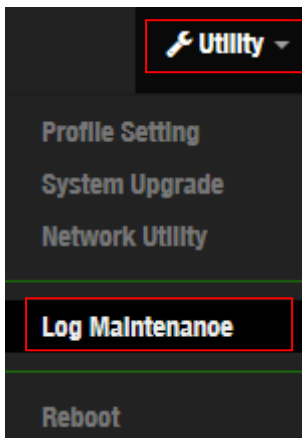

Session Log Maintenance

File Size/Peroent

Keep Date

Authentication Log Maintenance

File Size/Peroent

Keep Date

System Log Maintenance

File Size/Peroent

Keep Date

- **File Size/Percent:** Display used volume and percentage.
- **Keep Date:** Display creation date.
 - **Delete button:** Administrator can click “delete” button to clear log information.

7.5 Reboot

This function allows user to restart system with existing or most current settings when changes are made. Click **Reboot** button to proceed and take around three minutes to complete.

Reboot

Sometimes It may be necessary to reboot the system If it begins working Improperly. Rebooting the system will not delete any of your oonfiguration settings. Click reboot button to reboot the system.

Reboot

8. Status

8.1 Overview

Detailed information on System, Network can be reviewed via this page.

The screenshot shows two panels. The left panel, titled 'Overview', contains the following fields:

- Mode:** Router Mode (dropdown)
- System Name:** DR-4000
- System Time:** 2024/06/08 08:40:04
- System Uptime:** 52:23
- Firmware Version:** Pme-IPQ60xxR V0.0.2
- Firmware Date:** 2024/06/07 12:18:25
- ETH1 MAC Address:** 8c:4d:ea:05:2c:00
- ETH2 MAC Address:** 8c:4d:ea:05:2c:01
- Gateway:** 192.168.1.1
- DNS1:** 192.168.1.1
- DNS2:** (empty)

The right panel, titled 'Information', features six gauges:

- CPU Usage:** 0%
- Memory:** 17%
- Radius Log:** 0%
- Session Log:** 0%
- Authentication Log:** 0%
- System Log:** 0%

Below the gauges is a section for 'WAN0' with the following details:

- IP Address:** Dynamic IP (dropdown) | 192.168.1.106/24
- Received/Transmitted:** 13.490MB / 80.581MB

- **WAN#:** Display information for WAN Port setting. Administrator can click Action button to connect or disconnect for WAN Ports.

8.2 Local System Log

The system log displays system events when system is up and running. Also, it becomes very useful as a troubleshooting tool when issues are experienced in system.

| System Log | | | | Refresh | Clear |
|------------|----------|----------|---------|---------|-------|
| Time | Facility | Severity | Message | | |
| - | - | - | - | | |

- **Time** : The date and time when the event occurred.
- **Facility** : It helps users to identify source of events such “System” or “User”
- **Severity** : Severity level that a specific event is associated such as “info”, “error”, “warning”, etc.
- **Message** : Description of the event.
- Click “Refresh” button to renew the log
- Click “Clear” button to clear all the record.

8.3 Session Log

If enable “syslog server” in the “**Session Log**” (Hotspot Setup, Please refer to Chapter 3.4) and, the page can record account for session log. Session log page built-in smart-search function will display account use session information, administrator can use keyword or date approach to discover.

| Session Log | | | |
|------------------|-------|------------|------------|
| Name | Value | | |
| Event Time | None | 2016-11-21 | 2016-11-21 |
| AP IP | None | | |
| VLAN ID | None | | |
| Username | None | | |
| Protocol | None | TCP | |
| Source IP | None | | |
| Destination IP | None | | |
| Source Port | None | | |
| Destination Port | None | | |
| Source MAC | None | | |

Administrators can choose different data type in the search engines.


- **None:** The program doesn't judge characters, search all the information
- **Greater then:** Search values for greater than
- **Equal:** Search values for equal.
- **Less then:** Search values for less then.
- **Between:** Search values for between.
- **Like:** Search similar strings.

| # | Event Time | AP IP | VLAN ID | Username | Protocol | Source IP | Destination IP | Source Port | Destination Port | Source MAC |
|----|---------------------|---------------|---------|----------|----------|--------------|----------------|-------------|------------------|-------------------|
| 1 | 2015-01-01 08:01:41 | 192.168.2.254 | 0 | test | UDP | 192.168.2.10 | 192.168.2.1 | 62461 | 1900 | 8C:4D:EA:02:C6:EC |
| 2 | 2015-01-01 08:01:41 | 192.168.2.254 | 0 | test | TCP | 192.168.2.10 | 192.168.2.1 | 62362 | 443 | 8C:4D:EA:02:C6:EC |
| 3 | 2015-01-01 08:01:42 | 192.168.2.254 | 0 | test | UDP | 192.168.2.10 | 192.168.2.1 | 59448 | 53 | 8C:4D:EA:02:C6:EC |
| 4 | 2015-01-01 08:01:42 | 192.168.2.254 | 0 | test | UDP | 192.168.2.10 | 192.168.2.1 | 54064 | 53 | 8C:4D:EA:02:C6:EC |
| 5 | 2015-01-01 08:01:42 | 192.168.2.254 | 0 | test | UDP | 192.168.2.10 | 192.168.2.1 | 53759 | 53 | 8C:4D:EA:02:C6:EC |
| 6 | 2015-01-01 08:01:42 | 192.168.2.254 | 0 | test | TCP | 192.168.2.10 | 192.168.2.1 | 62364 | 443 | 8C:4D:EA:02:C6:EC |
| 7 | 2015-01-01 08:01:44 | 192.168.2.254 | 0 | test | UDP | 192.168.2.10 | 192.168.2.1 | 62461 | 1900 | 8C:4D:EA:02:C6:EC |
| 8 | 2015-01-01 08:01:46 | 192.168.2.254 | 0 | test | TCP | 192.168.2.10 | 192.168.2.1 | 62366 | 443 | 8C:4D:EA:02:C6:EC |
| 9 | 2015-01-01 08:01:46 | 192.168.2.254 | 0 | test | UDP | 192.168.2.10 | 192.168.2.1 | 57436 | 53 | 8C:4D:EA:02:C6:EC |
| 10 | 2015-01-01 08:01:46 | 192.168.2.254 | 0 | test | TCP | 192.168.2.10 | 192.168.2.1 | 62367 | 5222 | 8C:4D:EA:02:C6:EC |
| 11 | 2015-01-01 08:01:47 | 192.168.2.254 | 0 | test | UDP | 192.168.2.10 | 192.168.2.1 | 62461 | 1900 | 8C:4D:EA:02:C6:EC |
| 12 | 2015-01-01 08:01:48 | 192.168.2.254 | 0 | test | TCP | 192.168.2.10 | 192.168.2.1 | 62368 | 80 | 8C:4D:EA:02:C6:EC |

If the session interception function setting used is not configured on the front-end Cerio AP on this machine, you can store the logs of the Cerio AP to this log server. Please enter the management settings of the Cerio AP and set the "Session Log" Setup points the IP to the device and enables the "session log" for the Cerio AP feature.


The following is a reference to the relevant settings of Cerio AP.

Setup 1 : Please click Cerio AP to "System" → "Authentication Setup" to enable to Session Log setting.

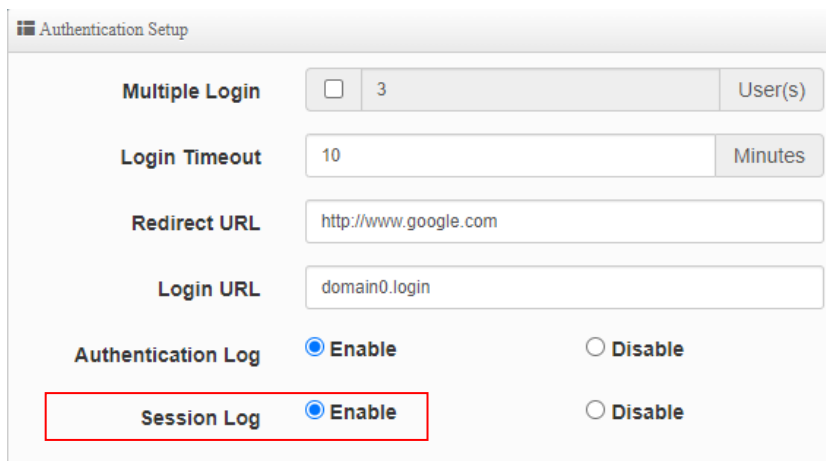

The screenshot shows the 'Authentication Setup' configuration page. It includes fields for 'Multiple Login' (checkbox), 'Login Timeout' (10 minutes), 'Redirect URL' (http://www.google.com), and 'Login URL' (domain0.login). At the bottom, there are two radio button options: 'Authentication Log' (set to Enable) and 'Session Log' (set to Enable and highlighted with a red box).

Setup 2 : Please click Cerio AP to "Management" → "System Log Setup" to fill in remote Server IP Address.

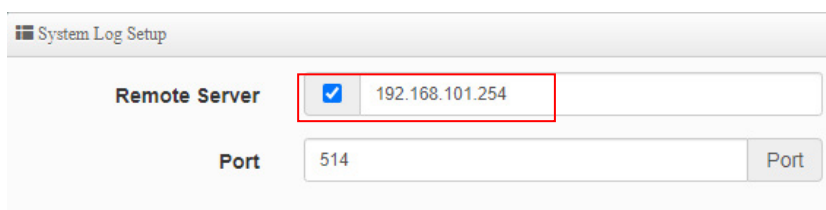

The screenshot shows the 'System Log Setup' configuration page. It features a 'Remote Server' field with a checked checkbox and the IP address '192.168.101.254' (highlighted with a red box), and a 'Port' field set to '514'.

8.4 Authentication Log

If enable “syslog server” in the “**Authentication Log**” (Hotspot Setup, Please refer to Chapter 3.4) and authentication log in Cerio's AP, the page can record account for authentication log. Authentication log page built-in smart-search function will display account use session information, administrator can use keyword or date approach to discover.

| Authentication Log | | | |
|--------------------|-------|------------|------------|
| Name | Value | | |
| Event Time | None | 2016-11-21 | 2016-11-21 |
| AP IP | None | | |
| VLAN ID | None | | |
| Username | None | | |
| Source IP | None | | |
| Source MAC | None | | |
| Event | None | | |

Administrators can choose different data type in the search engines.

- **None:** The program doesn't judge characters, search all the information
- **Greater then:** Search values for greater than
- **Equal:** Search values for equal.
- **Less then:** Search values for less then.
- **Between:** Search values for between.
- **Like:** Search similar strings.

| Authentication Log List | | | | | | | |
|-------------------------|---------------------|---------------|---------|----------|--------------|-------------------|--------|
| # | Event Time | AP IP | VLAN ID | Username | User IP | User MAC | Event |
| 1 | 2015-01-01 08:01:39 | 192.168.2.254 | 0 | test | 192.168.2.10 | 8c-4d-ea-02-c6-ec | LOGIN |
| 2 | 2016-11-21 12:56:50 | 192.168.2.254 | 0 | danny | 192.168.2.10 | 8c-4d-ea-02-c6-ec | LOGIN |
| 3 | 2016-11-21 12:57:28 | 192.168.2.254 | 0 | danny | 192.168.2.10 | 8c-4d-ea-02-c6-ec | LOGOUT |
| 4 | 2016-11-21 12:57:37 | 192.168.2.254 | 0 | test | 192.168.2.10 | 8c-4d-ea-02-c6-ec | LOGIN |
| 5 | 2016-11-21 13:02:22 | 192.168.2.254 | 0 | danny | 192.168.2.10 | 8c-4d-ea-02-c6-ec | LOGIN |

If the authentication interception function setting used is not configured on the front-end Cerio AP on this machine, you can store the logs of the Cerio AP to this log server. Please enter the management settings of the Cerio AP and set the "System Log" Setup points the IP to the device and enables the authentication log for the Cerio AP feature.

The following is a reference to the relevant settings of Cerio AP.

Setup 1 : Please click Cerio AP to “System” → “Authentication Setup” to enable for Authentication Log setting.

Authentication Setup

Multiple Login 3 User(s)

Login Timeout 10 Minutes

Redirect URL http://www.google.com

Login URL domain0.login

Authentication Log Enable Disable

Session Log Enable Disable

Setup 2 : Please click Cerio AP to “Management” → “System Log Setup” to fill in remote Server IP Address.

System Log Setup

Remote Server 192.168.101.254

Port 514 Port

8.5 Remote System Log

If enable “syslog server” in the “Remote System Log” and Remote System log in Cerio's AP, The page can record Remote system log for Cerio Aps too.

System Log

| Name | Value | |
|------------|-------|-----------------|
| Event Time | None | 2016-11-21 |
| Device IP | None | |
| Facility | None | Kernel messages |
| Priority | None | Emergency |
| Message | None | |

Administrators can choose different data type in the search engines.

- **None:** The program doesn't judge characters, search all the information
- **Greater then:** Search values for greater than
- **Equal:** Search values for equal.
- **Less then:** Search values for less then.

- **Between:** Search values for between.
- **Like:** Search similar strings.

| # | Event Time | AP IP | Facility | Priority | Message |
|---|---------------------|---------------|----------|---------------|--|
| 1 | 2016-01-01 08:00:00 | 192.168.2.254 | user | Informational | PPP BSD Compression module registered |
| 2 | 2016-01-01 08:00:00 | 192.168.2.254 | user | Informational | PPP MPPE Compression module registered |
| 3 | 2016-01-01 08:00:00 | 192.168.2.254 | user | Informational | NET: Registered protocol family 24 |
| 4 | 2016-01-01 08:00:00 | 192.168.2.254 | local0 | Informational | started, version 2.22 cachesize 150 |
| 5 | 2016-01-01 08:00:00 | 192.168.2.254 | local0 | Informational | cleared cache |
| 6 | 2016-01-01 08:00:00 | 192.168.2.254 | local0 | Informational | reading /etc/resolv.conf |
| 7 | 2016-01-01 08:00:00 | 192.168.2.254 | local0 | Informational | using nameserver 192.168.2.1#53 |
| 8 | 2016-01-01 08:00:00 | 192.168.2.254 | user | Informational | PPPoL2TP kernel driver, V1.0 |

If the remote system interception function setting used is not configured on the front-end Cerio AP on this machine, you can store the logs of the Cerio AP to this log server. Please enter the management settings of the Cerio AP and set the "System Log" Setup points the IP to the device for the Cerio AP feature.

The following is a reference to the relevant settings of Cerio AP.

Setup 1 : Please click Cerio AP to "Management" → "System Log Setup" to fill in remote Server IP Address.

| System Log Setup | |
|------------------|---|
| Remote Server | <input checked="" type="checkbox"/> 192.168.101.254 |
| Port | 514 <input type="button" value="Port"/> |

8.6 Wireless Location Tracking Log

If the administrator enables the syslog server in Cerio's AP, this page can specifically record the "Wireless Location Tracking Log" of Cerio AP.

| Wireless Location Tracking Log | | | |
|--------------------------------|---------------------------------------|------------|------------|
| Name | Value | | |
| Event Time | None <input type="button" value="v"/> | 2024/06/12 | 2024/06/12 |
| AP IP | None <input type="button" value="v"/> | | |
| VLAN ID | None <input type="button" value="v"/> | | |
| Radio ID | None <input type="button" value="v"/> | | |
| BSSID | None <input type="button" value="v"/> | | |
| Client MAC | None <input type="button" value="v"/> | | |
| RSSI | None <input type="button" value="v"/> | | |

Administrators can choose different data type in the search engines.


- **None:** The program doesn't judge characters, search all the information
- **Greater then:** Search values for greater than
- **Equal:** Search values for equal.
- **Less then:** Search values for less then.
- **Between:** Search values for between.
- **Like:** Search similar strings.

| Wireless Location Tracking Log List | | | | | | | |
|-------------------------------------|---------------------|----------------|---------|----------|-------------------|-------------------|------|
| # | Event Time | AP IP | VLAN ID | Radio ID | BSSID | Client MAC | RSSI |
| 1 | 2024-06-12 22:59:30 | 192.168.101.48 | 0 | 0 | 8c:4d:ea:05:22:57 | dc:4f:22:29:d3:a0 | -51 |
| 2 | 2024-06-12 22:59:30 | 192.168.101.48 | 0 | 0 | 8c:4d:ea:05:22:57 | ec:fa:bc:26:48:14 | -56 |
| 3 | 2024-06-12 22:59:30 | 192.168.101.48 | 0 | 0 | 8c:4d:ea:05:22:57 | dc:4f:22:29:97:5c | -56 |
| 4 | 2024-06-12 23:09:30 | 192.168.101.48 | 0 | 0 | 8c:4d:ea:05:22:57 | ec:fa:bc:26:48:14 | -57 |
| 5 | 2024-06-12 23:09:30 | 192.168.101.48 | 0 | 0 | 8c:4d:ea:05:22:57 | ec:fa:bc:26:4c:2b | -63 |
| 6 | 2024-06-12 23:09:30 | 192.168.101.48 | 0 | 0 | 8c:4d:ea:05:22:57 | dc:4f:22:29:d3:a0 | -51 |
| 7 | 2024-06-12 23:09:30 | 192.168.101.48 | 0 | 0 | 8c:4d:ea:05:22:57 | dc:4f:22:29:97:5c | -56 |
| 8 | 2024-06-12 23:19:30 | 192.168.101.48 | 0 | 0 | 8c:4d:ea:05:22:57 | ec:fa:bc:26:48:14 | -56 |

If the wireless location tracking interception function settings used are not configured on the local front-end Cerio AP, the logs of the Cerio AP can be stored in this log server

The following is a reference to the relevant settings of Cerio AP.


Setup 1 : Please click Cerio AP to “Wireless” → “Advanced Setup” to enable for “Location Tracking Log” setting

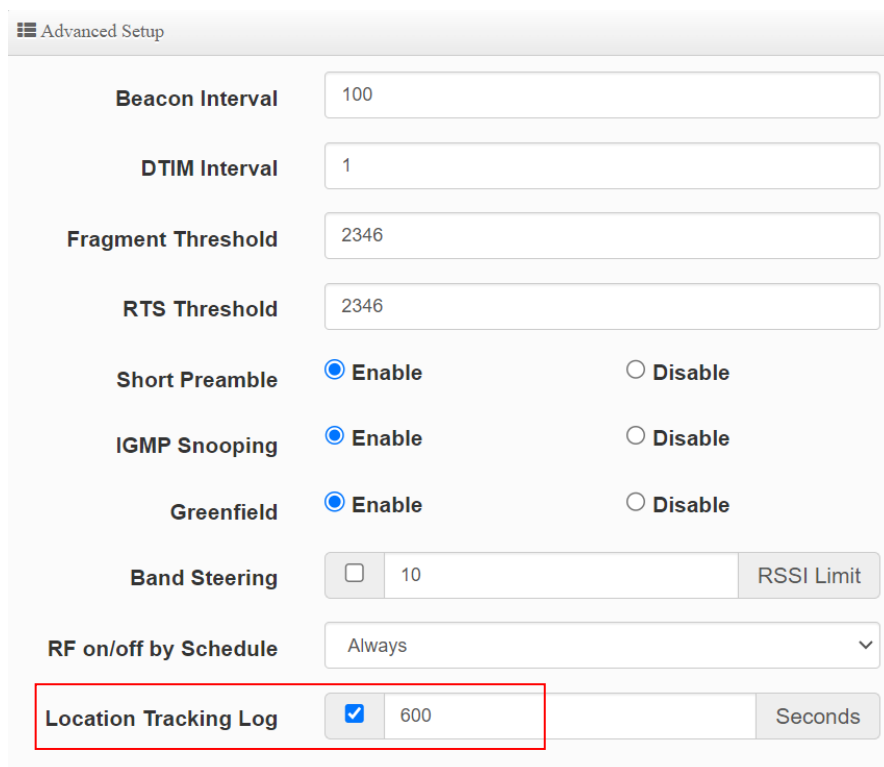

The screenshot shows the 'Advanced Setup' configuration page. The 'Location Tracking Log' option is checked and set to 600 seconds. Other settings include Beacon Interval (100), DTIM Interval (1), Fragment Threshold (2346), RTS Threshold (2346), Short Preamble (Enable), IGMP Snooping (Enable), Greenfield (Enable), and Band Steering (disabled).

| | |
|-----------------------|---|
| Beacon Interval | 100 |
| DTIM Interval | 1 |
| Fragment Threshold | 2346 |
| RTS Threshold | 2346 |
| Short Preamble | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| IGMP Snooping | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Greenfield | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Band Steering | <input type="checkbox"/> 10 RSSI Limit |
| RF on/off by Schedule | Always |
| Location Tracking Log | <input checked="" type="checkbox"/> 600 Seconds |

Setup 2 : Please click Cerio AP to “Management” → “System Log Setup” to fill in remote Server IP Address.

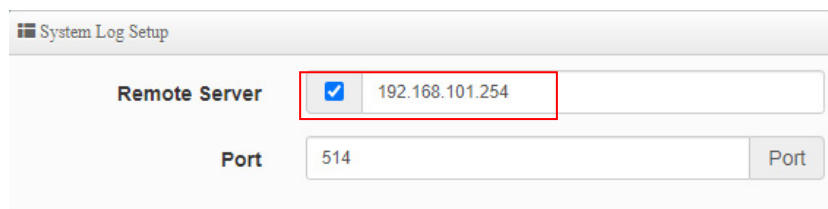


The screenshot shows the 'System Log Setup' configuration page. The 'Remote Server' checkbox is checked and the IP address '192.168.101.254' is entered. The 'Port' is set to 514.

| | |
|---------------|---|
| Remote Server | <input checked="" type="checkbox"/> 192.168.101.254 |
| Port | 514 Port |

9. Technical documents

9.1 Example for PPTP/L2TP setup

Create a VPN tunnel use server / client bridge for the PPTP / L2TP protocol, if PPTP server set virtual IP address is 10.10.10.1 then must also set start to end IP address for dynamic configuration, can give VPN client automatically obtain a virtual IP address. The following concept map

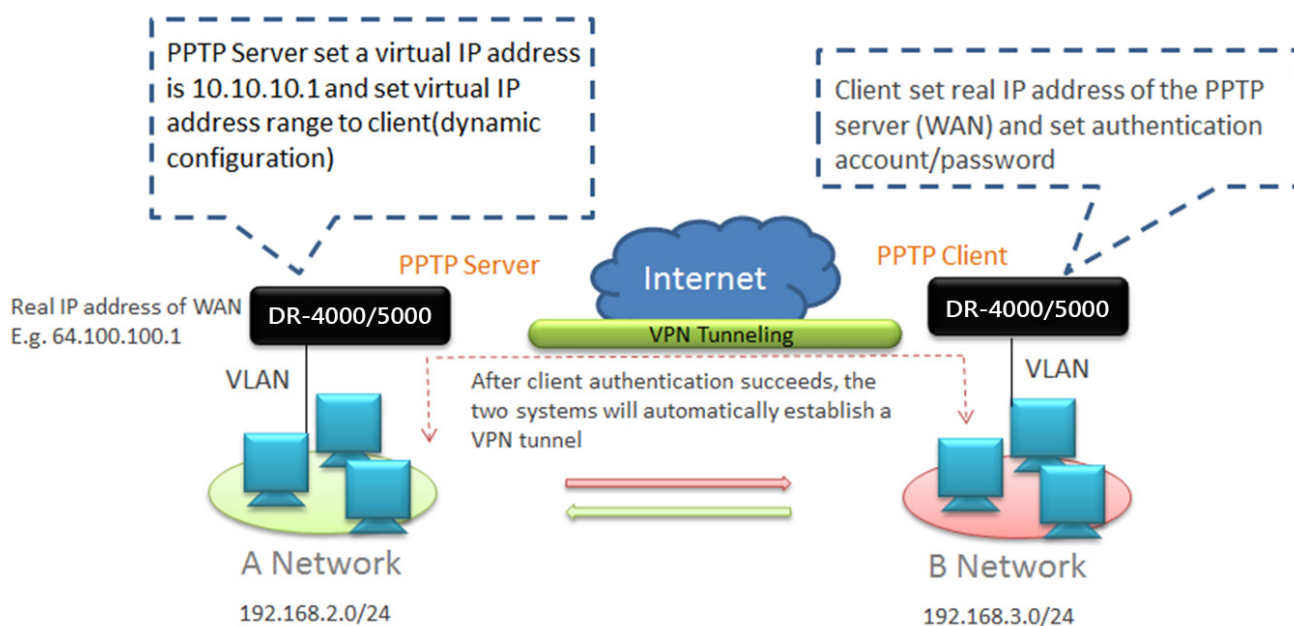

PPTP Server setup step

1. Enable PPTP/LTP Server and set VPN used virtual IP address. (Refer to 3.6 /3.7 for instructions)

☰ PPTP Server Settings

| | |
|--------------------------------|---|
| Connections | <input style="width: 90%;" type="text" value="3"/> |
| Local IP Address | <input style="width: 90%;" type="text" value="10.10.10.1"/> |
| Remote Start IP Address | <input style="width: 90%;" type="text" value="10.10.10.10"/> |
| Remote End IP Address | <input style="width: 90%;" type="text" value="10.10.10.13"/> |
| MPPE40 | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| MPPE128 | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |

2. Create authentication of client account and password

☰ Account Setup

| | |
|---------------------|---|
| User Name | <input style="width: 90%;" type="text" value="danny"/> |
| Password | <input style="width: 90%;" type="password" value="••••••••"/> |
| PPTP Support | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| L2TP Support | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |

Setup routing between the two networks

☰ Routing Rule

| | |
|----------------------|---|
| Local Subnet | <input style="width: 90%;" type="text" value="192.168.2.0/24"/> |
| Remote Subnet | <input style="width: 90%;" type="text" value="192.168.3.0/24"/> <input style="float: right; background-color: #4CAF50; color: white; padding: 5px 10px; border: none; cursor: pointer;" type="button" value="Add"/> |

PPTP Client setup step

1. Set real IP address of remote VPN server and authentication account / password.

PPTP/L2TP Client Setup

Active Enable Disable

PPTP/L2TP Client Settings

Mode PPTP L2TP

Server IP Address

User Name

Password

PPTP Setup

MPPE40 Enable Disable

MPPE128 Enable Disable

2. Setup routing between the two networks

Routing Rule List

| # | Local Subnet | Remote Subnet | Action |
|---|----------------|----------------|------------------------|
| 1 | 192.168.3.0/24 | 192.168.2.0/24 | Delete |

When the setting is complete, the both of the network will be through the VPN tunnel for data transmission.

Administrator can track the discovery, both network is used VPN tunnel to transmission.

```
Tracing route to 192.168.2.10 over a maximum of 30 hops
  0  <1 ms  <1 ms  <1 ms  192.168.3.1
  1  10 ms   9 ms   9 ms  10.10.10.1
  2  10 ms   9 ms   9 ms  192.168.2.10
Trace complete.
```


9.2 Hotspot function used POS system application




Cerio's POS system device by optional.

POS system is authentication device of the special use network control server (SP-800) + Thermal printer. You can refer to SP-800-PRINTER and SP-800-QRCPT for Cerio's . Administrator can use SP-800 to generate a new account for the remote control Cerio's Web authentication device and print authentication account.

Cerio's controller mounted SP-800-PRINTER for POS system application diagram

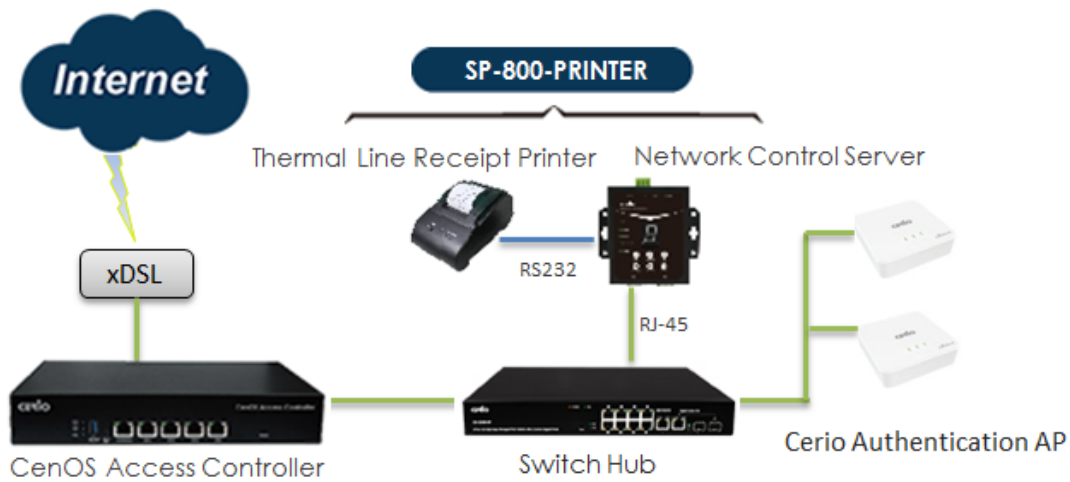


Cerio's controller mounted SP-800-QRCPT for POS system application diagram.

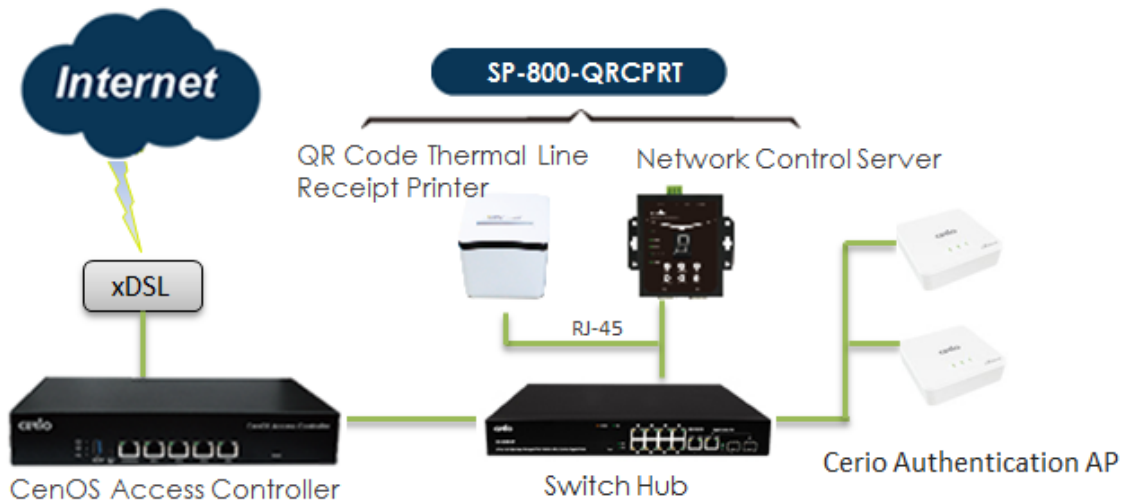

Login management interface for SP-800

Network control server(SP-800) built-in web management interface. After install POS system architecture, administrator can use network connect to SP-800 interface and management. The SP-800 manager URL is <http://192.168.2.253/setting.htm>, please open IE or Firefox browser and enter URL address to set function.

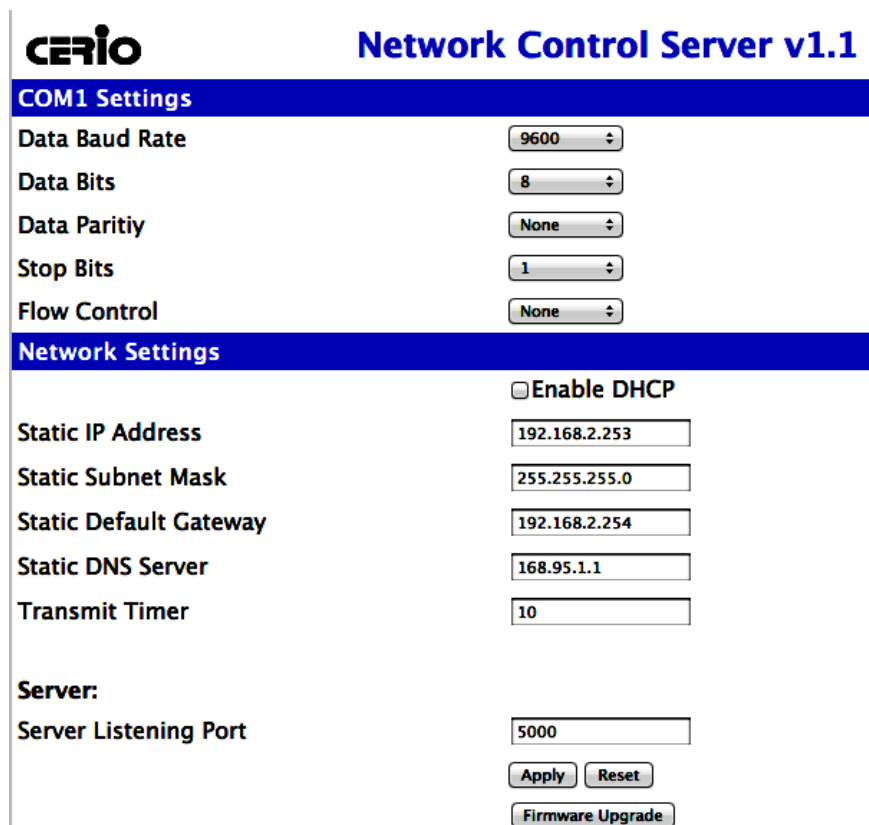

CERIO Network Control Server v1.1

COM1 Settings

| | |
|----------------|------|
| Data Baud Rate | 9600 |
| Data Bits | 8 |
| Data Parity | None |
| Stop Bits | 1 |
| Flow Control | None |

Network Settings

Enable DHCP

| | |
|------------------------|---------------|
| Static IP Address | 192.168.2.253 |
| Static Subnet Mask | 255.255.255.0 |
| Static Default Gateway | 192.168.2.254 |
| Static DNS Server | 168.95.1.1 |
| Transmit Timer | 10 |

Server:

| | |
|-----------------------|------|
| Server Listening Port | 5000 |
|-----------------------|------|

Apply Reset Firmware Upgrade

- **COM1 Setting:** Recommend use default ◦
- **Network Setting:**
 - **Enable DHCP:** Administrator can select enable or disable DHCP client.
 - **Static IP Address:** Administrator can set IP address for SP-800.
 - **Static DNS Server:** Administrator can set IP address for DNS server. ◦
 - **Transmit Timer:** system to detect controller connect status (millisecond).
 - **Server Listening Port:** SP-800 connection to controller use Port. (SP-800 and controller must be set the same port).

After setting is complete, please click Apply button.

Install normal thermal printer

Install step for thermal paper


- 1) Open the cover for thermal printer
- 2) Place the thermal paper in the printer groove
- 3) After pull the paper out a small portion please close the lid for thermal printer




- 1) SP-800 connection to thermal printer use console port
- 2) DC Power in.
- 3) Power on/off switch.

Install QR Code thermal printer

Behind the printer connection functions support USB / console / RJ-45 /RJ-11 and Power.
As follows

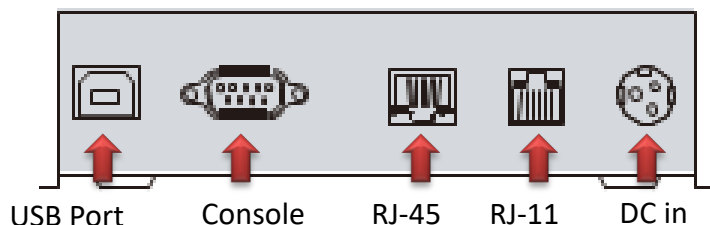

PS. Connect the controller only need to use RJ-45 and power.

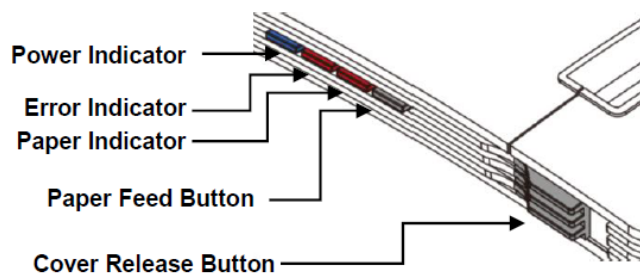


Login web page for QR Code printer.

The QR Code printer support web management interface, administrator can login web page and modify IP address for the QR Code printer.


QR Code Printer default IP address: **192.168.123.100**

As follows

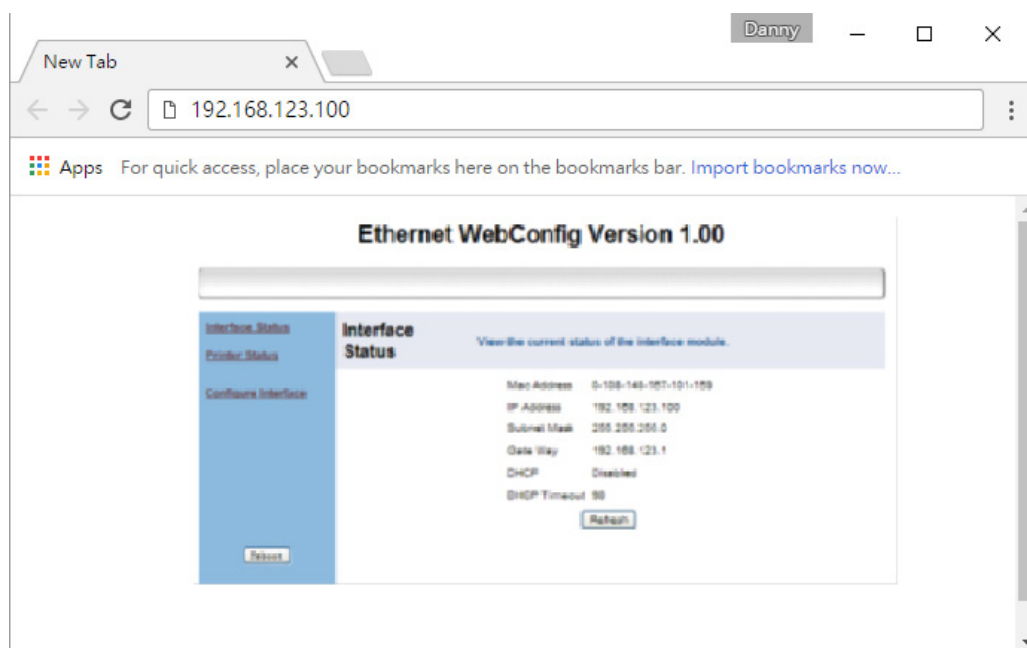


Install or Replace Paper Roll for QR code printer


- 1) Pull the Cover Release Button to open the Cover.

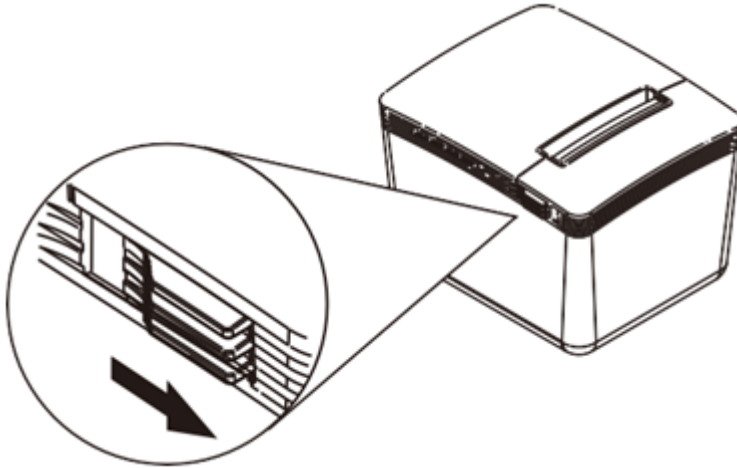

- 2) Roll out and install the Paper Roll with Holder into the Printer. (with the edges of the paper roll holder fitted onto the holder slots)

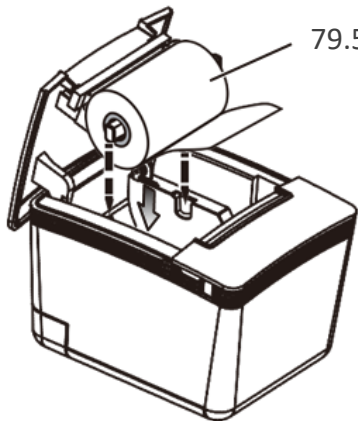

57.5mm size for thermal paper

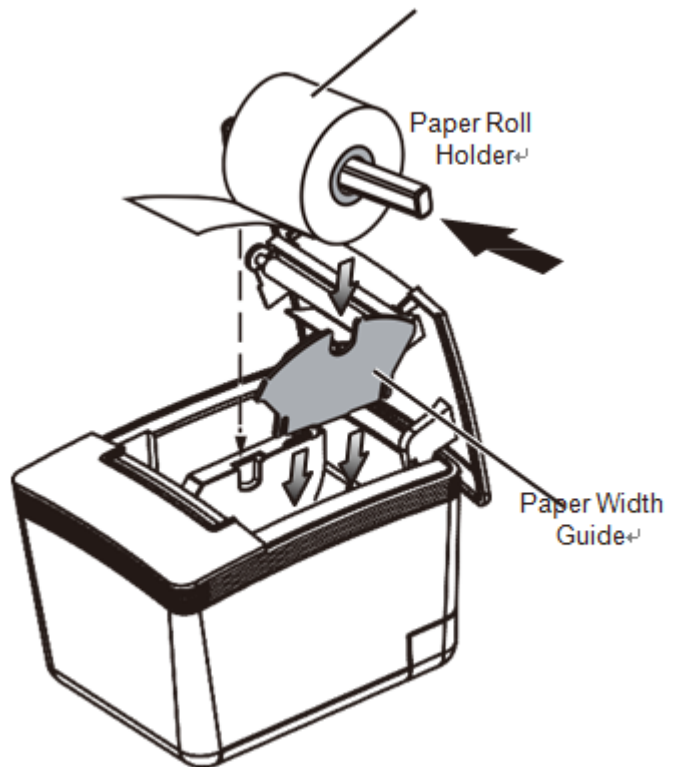


When using a paper roll in smaller width, install the Paper Width Guide first, and then install the paper roll with holder.

3) Please close the lid for thermal printer.

DIP Switch Setting for QR code Printer

DIP Switch in printer bottom.

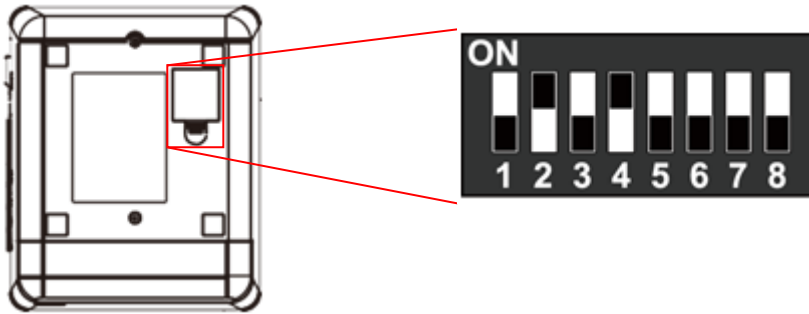

| DIP | Function | ON | OFF |
|-------|-------------------------|-------|---------|
| 1 | Paper Cutter | No | Yes* |
| 2 | Audio Alarm | Yes * | No |
| 3 | Print Density | Dark | Light * |
| 4 | Two-byte Character Code | *No | Yes |
| 5 | Character Per Line | 42 | 48 * |
| 6 | Cutter with Cash Drawer | Yes | No * |
| 7 & 8 | Baud Rate Setting | --- | OFF* |

Baud Rate Setting (DIP 7, DIP 8)



Set web authentication steps for POS system

Cerio's Web Authentication System consists of the controller and SP-800 + Printer; administrator can use SP-800 remote control Cerio's controller to create an account and print out.

The architecture can refer to "POS system application" description

Set web authentication steps, as follows

(Take Cerio's **DR-4000-CA** as the case)

Steps1

Login SP-800 web interface to set IP address and set same network segment

You can refer to "Login management interface for SP-800"

Steps2

If SP-800 with QR code Printer, administrator must set IP address for QR code Printer (same network segment for your network). You can refer to "Install QR Code printer"

Steps3

Login Cerio's Controller "DR-4000-CA" page (Refer controller user manual) to enable RADIUS Server.

As follows

Please click menu "Account" → "RADIUS Server" for Cerio's **DR-4000-CA**



| Service | <input checked="" type="radio"/> Enable | <input type="radio"/> Disable |
|---------------------|---|-------------------------------|
| Authentioation Port | <input type="text" value="1812"/> | |
| Aooounting Port | <input type="text" value="1813"/> | |
| Radius Seoret | <input type="text" value="(4-32 chars)"/> | |

Steps4

Set the connection between **DR-4000-CA** and SP-800. Please click menu “**Account**” → “**Thermal Printer Setup**” to enable function, as follows

| Thermal Printer List | | | | | |
|----------------------|---------|---------------|-------------|--------------|-----------------------|
| Printer# | Service | IP Address | Description | Balance Time | Action |
| 1 | | 192.168.2.253 | | 00:00 | Setup |
| 2 | | | | 00:00 | Setup |
| 3 | | | | 00:00 | Setup |
| 4 | | | | 00:00 | Setup |
| 5 | | | | 00:00 | Setup |

Printer Setup

Service Enable Disable

Printer Setup

IP Address:

Command Port:

Printer Type:

COM Port:

New Look Password:

Description:

Balance Time:

- **IP address:** Please enter IP address for SP-800 (You can refer to Login SP-800)
- **Command port:** Please enter Command for SP-800 (You can refer to Login SP-800)
- **Printer Type:** Administrator can select Printer for normal or QR Code Printer.
- **QR code Printer :** If select QR Code printer, administrator must choose use connection for IP address or com Port.(Recommend use IP address manner.)

Printer Type:

COM Port:

Printer IP Address:

Printer Port:

QRCode Type:

- ✓ **Printer IP Address** : Please enter IP address for QR code printer. (You can refer to Install QR Code Printer).
- ✓ **Printer Port** : Please enter command port for QR Code Printer. (You can refer to Install QR Code Printer)
- ✓ **QR Code Type** : Administrator can select print out size for QR code.
- **COM Port**: Please select connection type for printer.




1. If use normal thermal printer and connect to com1 port of the SP-800, please select **COM1**
2. If use QR Code Printer, please select **RJ-45**

- **New Lock Password** : Enter pass key of the **DR-4000-CA** to connect SP-800
- **Description** : Administrator can enter description.

Steps5

Setup internet time rules for package authentication type (**DR-4000-CA**). Please click menu “**Account**” → “**Package setup**”. As follows

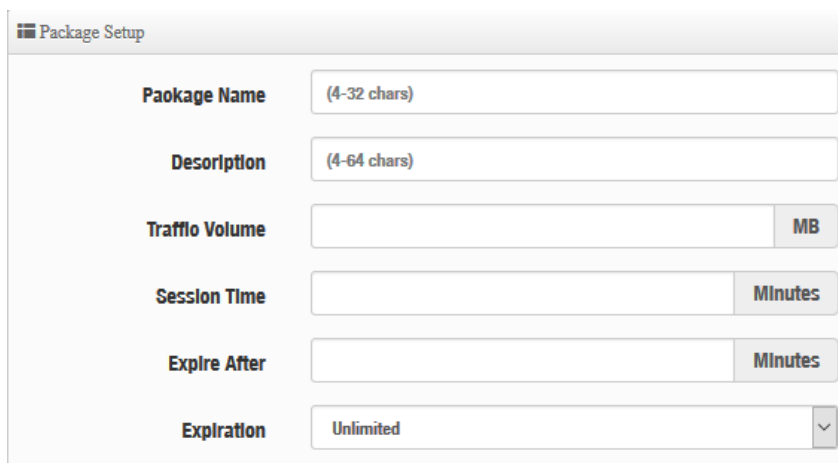

The screenshot shows a 'Package Setup' form with the following fields:

- Package Name**: Text input field with a placeholder '(4-32 chars)'
- Description**: Text input field with a placeholder '(4-64 chars)'
- Traffic Volume**: Text input field with a unit selector 'MB'
- Session Time**: Text input field with a unit selector 'Minutes'
- Expire After**: Text input field with a unit selector 'Minutes'
- Expiration**: Dropdown menu with 'Unlimited' selected

- **Package Name**: Administrator can set Identify name for the package rules.
- **Description**: Administrator can set the description for package rules.
- **Traffic Volume**: Administrator can set authentication account use traffic limit for the package rules.
- **Session Time**: Administrator can set authentication account use session limit for the package rules. (After the account is signed in, the system will begin counting until the set time is used up. The counting will stop when users log out, and begin counting again once the user signs back in.)
- **Expire After**: Administrator can set authentication account use how many hours expire.(After the account is signed in, the system start counted time until the end time.)

➤ **Expiration:** Administrator can select Unlimited or Per Day or Until Time.


- ✓ **Unlimited:** After the account is signed in, the system does not count the time
- ✓ **Per Day:** After the account is signed in, the system start counted time until the end time.
- ✓ **Until Time:** After the account is signed in, the system will begin counting until the set time is used up. The counting will stop when users log out, and begin counting again once the user signs back in.

PS. Package list (0~9) is Network control server (SP-800) code, administrator can choose number to print out account.

| Package List | | | | | | | Create New Package |
|--------------|--------|-------------------------|--------------|----------------|--------------|------------|--------------------|
| # | Name | Description | Session Time | Traffic Volume | Expire After | Expiration | Action |
| 0 | TEST-1 | no time | | 0B | | | Edit |
| 1 | test-2 | 60Mbps Trafflo | | 60.00MB | | | Edit |
| 2 | test-3 | use 120 minutes time | 2Hour(s) | 0B | | | Edit |
| 3 | Test-4 | use 120 minutes expl... | | 0B | 2Hour(s) | | Edit |

Steps6

The system time is very important, administrator must set system time is right. Please click **DR-4000-CA** menu “**System**” → “**Time Server**” to set system time.
 PS. Recommend select update the system time for the NTP Server

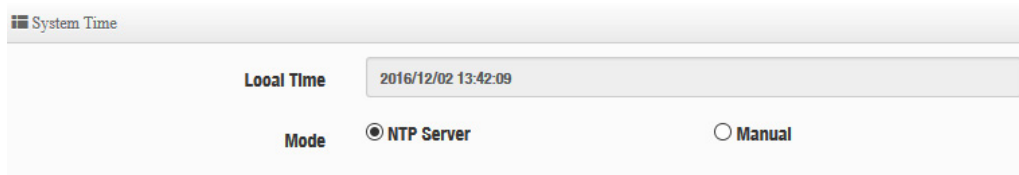

The above procedure will complete the **DR-4000-CA** setting

Enable Web authentication for Access Point

Hot spots web authentication architecture must be with combine Cerio's CenOS5.0 access point.
 As follows


Steps7

Enable Web authentication for Cerio’s CenOS5.0 Access Point. (You can refer user manual for Access Point), As follows for Cerio’s Access Point.

- 1) Enables web authentication function. Please click “System” → “Authentication” for Cerio’s Access Point.

| # | VLAN Mode | Authentication | Action |
|---|-----------|----------------|----------------|
| 0 | On | Off | Authentication |
| 1 | Off | Off | Authentication |
| 2 | Off | Off | Authentication |
| 3 | Off | Off | Authentication |
| 4 | Off | Off | Authentication |
| 5 | Off | Off | Authentication |

- 2) Click Authentication button and enable the function.

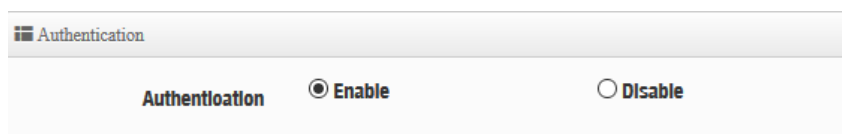

3) Enable authentication for RADIUS Server and set IP address for **DR-4000-CA**.

The screenshot shows the 'Radius Setup' configuration page. It includes the following fields and options:

- Radius:** Radio buttons for Enable and Disable.
- Display Name:** Text box containing 'Radius User'.
- Primary Server IP:** Text box containing '192.168.2.1'.
- Secondary Server IP:** Text box containing 'Options'.
- Authentication Port:** Text box containing '1812' with a 'Port' button.
- Accounting Service:** Checkmark box containing '1813' with a 'Port' button.
- Authentication Type:** Radio buttons for PAP and CHAP.
- Secret Key:** Password field with masked characters.

Steps8

Set system time for Cerio's Access Point. Please click menu "System" → "Time server".

Steps9

The system time is very important, administrator must set system time is right. Please click (Cerio's Access Point) menu "System" → "Time Server" to set system time.

PS. Recommend select update the system time for the NTP Server

The screenshot shows the 'System Time' configuration page. It includes the following fields and options:

- Local Time:** Text box showing '2016/12/02 13:42:09'.
- Mode:** Radio buttons for NTP Server and Manual.

This completes all architecture settings

Administrator can click SP-800 "Print" button will print account and password of the tickets.

As follows

